


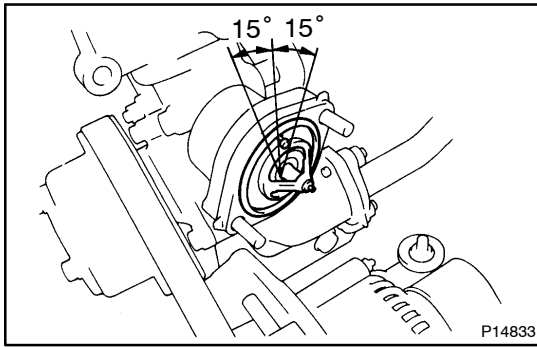

INSTALLATION

1. PLACE THERMOSTAT IN WATER INLET HOUSING

- (a) Install a new gasket to the thermostat.
- (b) Align the jiggle valve of the thermostat with the protrusion of the water inlet housing, and insert the thermostat in the water inlet housing.

HINT:

The jiggle valve may be set within 15° of either side of the prescribed position.

2. CONNECT WATER INLET WITH LOWER RADIATOR HOSE

Install the water inlet with the 2 nuts.

HINT:

Facing the top mark (protrusion) upward.

Torque: 20 N·m (200 kgf·cm, 15 ft·lbf)

3. FILL WITH ENGINE COOLANT

4. START ENGINE AND CHECK FOR LEAKS