


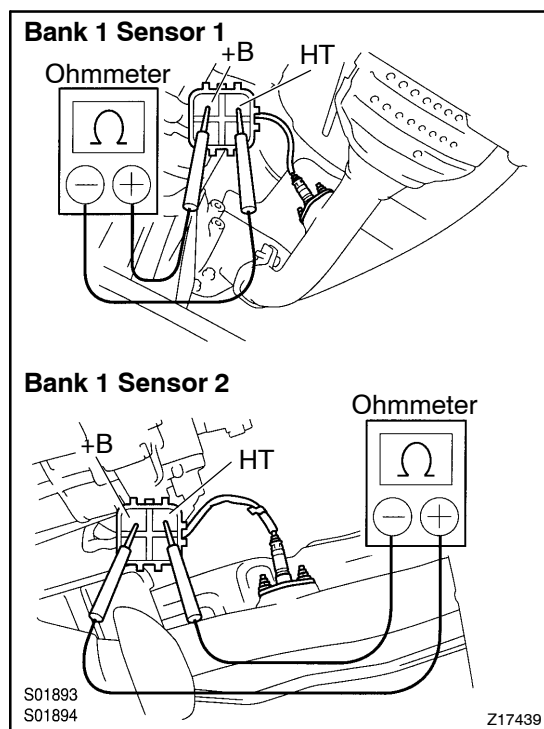

INSPECTION

Bank 1 Sensor 1, 2:

INSPECT HEATER RESISTANCE OF HEATED OXYGEN SENSORS

- Disconnect the heated oxygen sensor connector.
- Using an ohmmeter, measure the resistance between terminals +B and HT.

Bank 1 Sensor 1, 2:

Resistance: 11 – 16 Ω At 20°C (68°F)

If resistance is not as specified, replace the sensor.

Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)

- Reconnect the heated oxygen sensor connector.