

DTC	P0135	Heated Oxygen Sensor Heater Circuit Malfunction (Bank 1 Sensor 1)
------------	--------------	--

DTC	P0141	Heated Oxygen Sensor Heater Circuit Malfunction (Bank 1 Sensor 2)
------------	--------------	--

CIRCUIT DESCRIPTION

Refer to DTC P0125 on page [DI-182](#).

DTC No.	DTC Detection Condition	Trouble Area
P0135	When the heater operates, heater current exceeds 2.35 A (2 trip detection logic)	• Open or short in heater circuit of heated oxygen sensor • Heated oxygen sensor heater • ECM
P0141	Heater current of 0.2 A or less when the heater operates (2 trip detection logic)	

HINT:

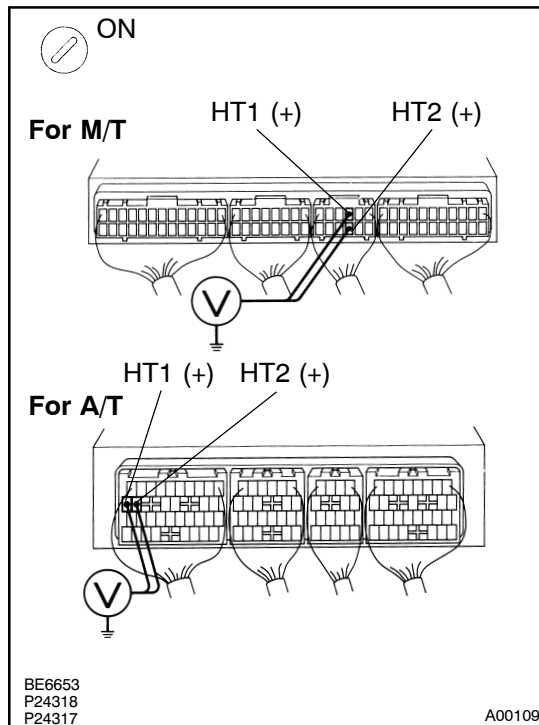
- Sensor 1 refers to the sensor closer to the engine body.
- Sensor 2 refers to the sensor farther away from the engine body.

WIRING DIAGRAM

Refer to DTC P0125 on page [DI-182](#).

INSPECTION PROCEDURE

1	Check voltage between terminals HT1, HT2 of ECM connector and body ground.
---	---

**PREPARATION:**

- (a) Remove the glove compartment (See page SF - 41).
- (b) Turn the ignition switch ON.

CHECK:

Measure the voltage between terminals HT1, HT2 of ECM connector and the body ground.

HINT:

- Connect terminal HT1 to bank 1 sensor 1.
- Connect terminal HT2 to bank 1 sensor 2.

OK:

Voltage: 9 - 14 V

OK

Check and replace ECM (See page IN-26).

NG

2	Check resistance of heated oxygen sensor heater (See page SF - 40).
---	--

NG

Replace heated oxygen sensor.

OK

Check and repair harness or connector between EFI main relay (Marking: EFI) and heated oxygen sensor and ECM (See page IN-26).