


HIGH MOUNTED STOP LIGHT ASSEMBLY


COMPONENTS

REAR SPOILER SUB-ASSEMBLY

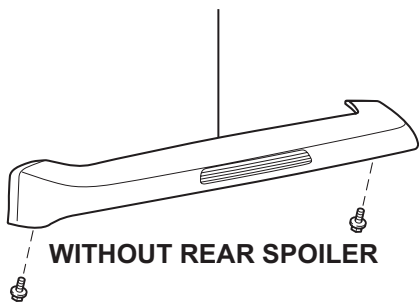

CENTER STOP LIGHT ASSEMBLY


- CENTER STOP LIGHT BULB

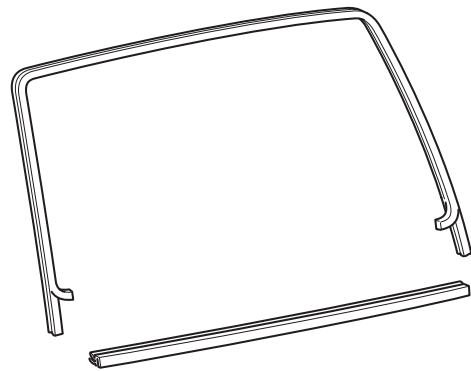

REMOVAL

1. REMOVE CENTER STOP LIGHT ASSEMBLY (without Rear Spoiler)


- (a) Release the 5 fitting claws as shown in the illustration.
- (b) Disconnect the connector and remove the center stop light assembly.

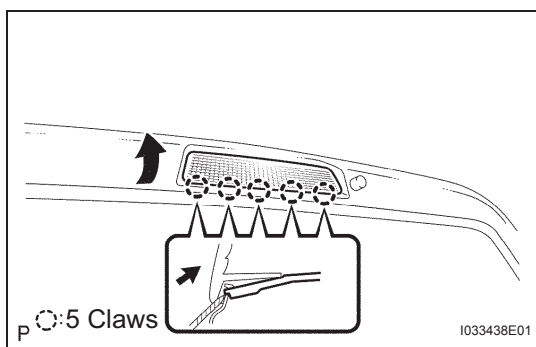


2. REMOVE REAR SPOILER SUB-ASSEMBLY (with Rear Spoiler)

3. REMOVE CENTER STOP LIGHT ASSEMBLY (with Rear Spoiler)

- (a) Disconnect the connector.

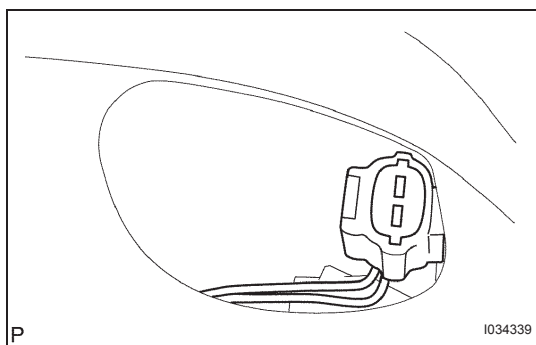


- (b) Install the strap on the connector of center stop light assembly.

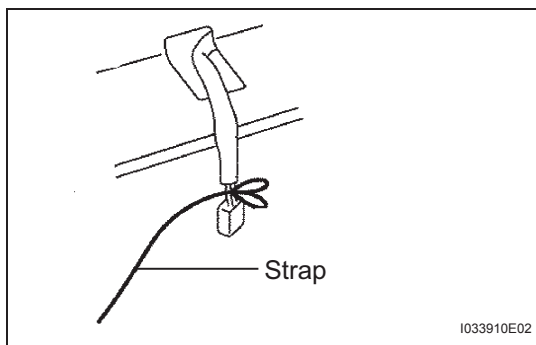


- (c) Remove the 2 screws.
- (d) Pass the connector through the inside the rear spoiler sub-assembly and remove the center stop light assembly with bracket.


HINT:

Leave the strap inside the rear spoiler sub-assembly.

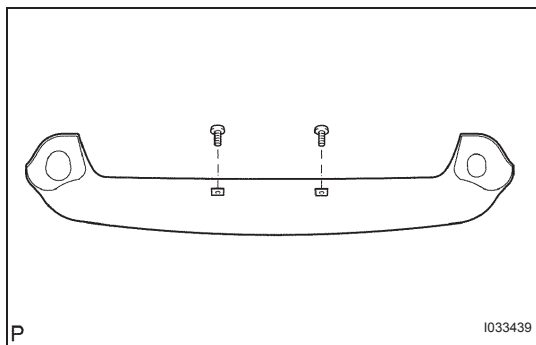

- (e) Remove the 2 nuts and center stop light assembly.

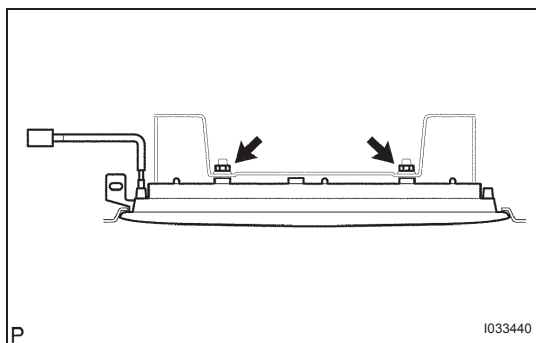

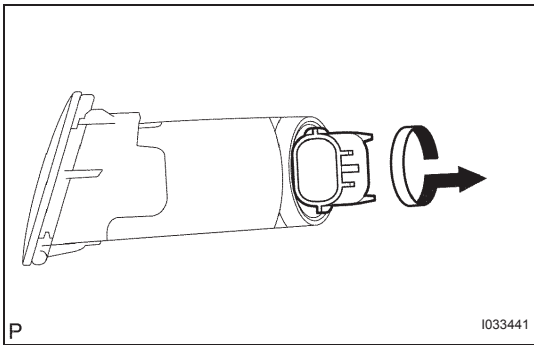**4. REMOVE CENTER STOP LIGHT BULB (without Rear Spoiler)**

- (a) Remove the center stop light socket and center stop light bulb as shown in the illustration.
- (b) Remove the center stop light bulb from the center stop light socket.

INSTALLATION

1. **INSTALL CENTER STOP LIGHT BULB (without Rear Spoiler)**
2. **INSTALL CENTER STOP LIGHT ASSEMBLY (with Rear Spoiler)**
3. **INSTALL REAR SPOILER SUB-ASSEMBLY (with Rear Spoiler)**
4. **INSTALL CENTER STOP LIGHT ASSEMBLY (without Rear Spoiler)**