

4RUNNER OFF ROAD FUNCTIONS – QUICK REFERENCE GUIDE

-  **H2** • High Speed 2WD (Normal Drive for dry, high-traction on-road use)

4runners have 2 types of front Wheel

Drive (4wd) controls



Type A



Type B

-  **H4** • High Speed 4wd (use only for off-road, icy or snow-covered roads)

Type A

- H2 to H4**
- Reduce speed vehicle speed to 50 mph or less.
- Firmly Pull the Front wheel drive lever back from H2 to H4
- Once engaged 4WD icon will appear




Type B

- H2 to H4**
- Reduce speed vehicle speed to 62 mph or less.
- Push Unlock button and turn dial to H4
- Once engaged the 4WD Icon will appear
- Vehicle is capable of speeds over 50 mph in H4 but caution is advised.

-  **L4** • Low Speed 4wd (Use for extreme offroad and deep snow)

Type A

- H4 to L4**
- Bring vehicle to complete stop and continue to depress brake
- Shift Transmission lever to “N”.
- Firmly shift front wheel (4wd) lever to L4.
- Shift transmission to “D” or “R”
- Once engaged the L4 (4LO) icon will appear.

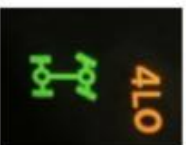

Type B

- H4 to L4**
- Bring vehicle to complete stop and continue to depress brake.
- Shift transmission lever to “N”
- Push unlock button and turn dial to L4.
- Shift transmission to “D” or “R”.
- Once engaged the L4 (4LO) icon will appear.

L4 Notes:

- If L4 continues to flash – gear is not engaged. Drive forwards/backwards gently until engaged.
- If L4 flashes with buzzing or alarm, main shift lever is not in “N” or vehicle is moving. Stop and shift transmission into “N”.
- When L4 is engaged, traction control is off
- Max speed is L4 is 15 mph

Maintenance: Recommended to drive in H4 once a month for 10 miles to lube front gears.