

Programming for a 2003 to 2005 Toyota 4 Runner Remote Control Fob

How

Driver's door open, key removed from ignition switch.

Within 5 seconds:

Insert and remove the key from the ignition switch twice.

Within 40 seconds:

Close and open driver's door twice.

Insert and remove the key from the ignition switch.

Within 40 seconds:

Close and open driver's door twice.

Insert the key into the ignition switch and close the driver's door.

Switch ignition ON and OFF **once to program** a remote transmitter code whilst retaining the original codes or twice to program a remote transmitter code whilst erasing the original codes. Three times to check how many remote transmitters are currently registered or five times to erase all registered codes.

Remove key from ignition switch:

System should now lock and unlock vehicle once, twice or five times depending which mode has been selected. One to four times, slowly, to indicate number of remote transmitters registered.

Within 40 seconds:

Press and hold LOCK and UNLOCK buttons simultaneously for 1.5 seconds -

Within 3 seconds:

Press LOCK button.

System should now lock and unlock vehicle once to confirm registration, twice to indicate registration has failed.

Within 40 seconds:

Repeat button procedure to program remaining remote transmitters.

NOTE: To exit programming mode: Open driver's door.

NOTE: A maximum of 4 remote transmitters can be programmed.

It may take a few tries and the timing must be very accurate to work but with a little patience it is easy.