

SCHEDULED MAINTENANCE INTERVALS

TOYOTA—4RUNNER

TO BE SERVICED	TYPE OF SERVICE	VEHICLE MILEAGE INTERVAL (x1000)																		
		5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95
Automatic transmission and differential fluid	S/I			✓			✓			✓			✓			✓			✓	
Ball joints and boots	S/I			✓			✓			✓			✓			✓			✓	
Brake linings, discs/drums, lines & hoses	S/I			✓			✓			✓			✓			✓			✓	
Charcoal canister	S/I												✓							
Drive belts	S/I						✓						✓						✓	
Driveshaft bushing (4WD)	L						✓						✓						✓	
Engine coolant	R						✓						✓						✓	
Engine oil & filter	R	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Exhaust pipes & mounts	S/I			✓			✓			✓			✓			✓			✓	
Fuel tank cap gasket	S/I						✓						✓						✓	
Halfshaft boots & flange bolts	S/I			✓			✓			✓			✓			✓			✓	
Limited slip differential fluid	R						✓						✓						✓	
Manual transmission and differential fluid	S/I						✓						✓						✓	
Non-platinum spark plugs	R						✓						✓						✓	
Platinum spark plugs	R												✓							
Propeller shaft (4WD)	L			✓			✓			✓			✓			✓			✓	
Propeller shaft bolts	S/I			✓			✓			✓			✓			✓			✓	
Rack and pinion assembly	S/I			✓			✓			✓			✓			✓			✓	
Rear wheel bearing	L						✓						✓						✓	
Steering linkage	S/I			✓			✓			✓			✓			✓			✓	
Valves	S/I												✓							

R: Replace S/I: Service or Inspect L: Lubricate

FREQUENT OPERATION MAINTENANCE (SEVERE SERVICE)

If a vehicle is operated under any of the following conditions it is considered severe service:

- Towing a trailer or using a camper or car-top carrier.
- Repeated short trips of less than 5 miles in temperatures below freezing.
- Excessive idling or low-speed driving for long distances as in heavy commercial use, such as delivery, taxi or police cars.
- Operating on rough, muddy or salt-covered roads.
- Operating on unpaved or dusty roads.

Oil filter: service or inspect every 5000 miles or 4 months, whichever occurs first.

Brake linings and discs or drums: service or inspect every 5000 miles or 4 months, whichever occurs first.

Steering linkage: service or inspect every 5000 miles or 4 months, whichever occurs first.

Ball joints and boots: service or inspect every 5000 miles or 4 months, whichever occurs first.

Brake discs & pads (front): service or inspect every 6000 miles.

Halfshaft boots: service or inspect every 5000 miles or 4 months. Retighten the flange bolts, whichever occurs first.

Body chassis bolts and nuts: service or inspect every 5000 miles or 4 months, whichever occurs first.

Transmission and differential fluid: replace every 15,000 miles or 12 months, whichever occurs first.

Transfer case and differential fluid: replace every 15,000 miles or 12 months, whichever occurs first.

Timing belt: replace every 60,000 miles or 48 months, whichever occurs first.