

Downtown Toyota/Toyota Canada

6 months 8000km

Check installation of driver's floor mat

Reset Maintenance Reminder Light or system

Inspect wiper blades, linkage and washers for proper operation

Inspect and adjust level - engine oil, brake fluid, engine/inverter coolant, power steering fluid and washer fluid

Remove & inspect engine air filter

Remove & inspect cabin air filter

Check and record tire tread depth. Examine tires for damage and uneven wear

Remove wheels & visually inspect brake pads, calipers, rotors, brake lines and hoses

Rotate tires (applicable to same size wheels, front & rear) or alternatively perform seasonal tire change-over

Record inspection results, measurements and component condition on inspection form and/or repair order

12 months 16000km

Check installation of driver's floor mat

Reset Maintenance Reminder Light or system

Inspect all lights and horn for proper operation

Inspect wiper blades, linkage and washers for proper operation

Visually inspect drive belts

Replace engine oil & filter (synthetic)

Lubricate locks, latches and hinges

Inspect and adjust level - engine oil, brake fluid, engine coolant, power steering fluid, transmission fluid, differential fluid, and washer fluid

Remove & inspect engine air filter

Remove & inspect cabin air filter

Remove wheels & visually inspect brake pads, calipers, rotors, brake lines and hoses

Check and record tire tread depth. Examine tires for damage and uneven wear
Rotate tires (applicable to same size wheels, front & rear) or alternatively perform seasonal tire change-over. ⁴

Inspect differential and transfer case vents for obstruction
Record inspection results, measurements and component condition on inspection form and/or repair order

Lubricate Propeller Shaft

Tighten Propeller Shaft Bolts

18 months 24000km

Check installation of driver's floor mat

Reset Maintenance Reminder Light or system

Inspect wiper blades, linkage and washers for proper operation

Inspect and adjust level - engine oil, brake fluid, engine/inverter coolant, power steering fluid and washer fluid

Remove & inspect engine air filter

Remove & inspect cabin air filter

Check and record tire tread depth. Examine tires for damage and uneven wear

Remove wheels & visually inspect brake pads, calipers, rotors, brake lines and hoses
Rotate tires (applicable to same size wheels, front & rear) or alternatively perform seasonal tire change-over

Record inspection results, measurements and component condition on inspection form and/or repair order

24 months 32000km

Check installation of driver's floor mat

Reset Maintenance Reminder Light or system

Inspect all lights and horn for proper operation

Inspect wiper blades, linkage and washers for proper operation ¹

Visually inspect drive belts adjust tension if required

Replace engine oil & filter (synthetic)

Lubricate locks, latches and hinges

Inspect and adjust level - engine oil, brake fluid, engine coolant, power steering fluid, transmission fluid, differential fluid, and washer fluid

Remove & inspect engine air filter²

Remove & inspect cabin air filter³

Remove wheels & visually inspect brake pads, calipers, rotors, brake lines and hoses

Remove brake calipers and/or brake drums. Inspect and measure brake rotors, drums, pads and shoes

Check and record tire tread depth. Examine tires for damage and uneven wear

Rotate tires (applicable to same size wheels, front & rear) or alternatively perform seasonal tire change-over. ⁴

Perform 12 Volt battery service and comprehensive electrical charging system evaluation

Inspect valve clearance (audibly)

Check steering gear, linkage and shock absorbers for looseness, damage or leakage

Inspect ball joints and dust covers, driveshafts, chassis nuts & bolts for looseness or damage

Inspect fuel system for leaks or damage, inspect condition of fuel tank band, fuel tank cap gasket, fuel tank vapour vent system hoses, fuel lines and connections

Inspect exhaust system for leaks, damage or broken hangers

Record inspection results, measurements and component condition on inspection form and/or repair order

30 months 40000km

Check installation of driver's floor mat

Reset Maintenance Reminder Light or system

Inspect wiper blades, linkage and washers for proper operation

Inspect and adjust level - engine oil, brake fluid, engine/inverter coolant, power steering fluid and washer fluid

Remove & inspect engine air filter

Remove & inspect cabin air filter

Check and record tire tread depth. Examine tires for damage and uneven wear

Remove wheels & visually inspect brake pads, calipers, rotors, brake lines and hoses

Rotate tires (applicable to same size wheels, front & rear) or alternatively perform seasonal tire change-over

Record inspection results, measurements and component condition on inspection form and/or repair order

36 months 48000km

Check installation of driver's floor mat

Reset Maintenance Reminder Light or system

Inspect all lights and horn for proper operation

Inspect wiper blades, linkage and washers for proper operation

Visually inspect drive belts

Replace engine oil & filter (synthetic)

Lubricate locks, latches and hinges

Inspect and adjust level - engine oil, brake fluid, engine coolant, power steering fluid, transmission fluid, differential fluid, and washer fluid

Remove & inspect engine air filter

Remove & inspect cabin air filter

Remove wheels & visually inspect brake pads, calipers, rotors, brake lines and hoses

Check and record tire tread depth. Examine tires for damage and uneven wear

Rotate tires (applicable to same size wheels, front & rear) or alternatively perform seasonal tire change-over. ⁴

Inspect differential and transfer case vents for obstruction

Record inspection results, measurements and component condition on inspection form and/or repair order

Lubricate Propeller Shaft

Tighten Propeller Shaft Bolts

2011 4Runner manual

6 months 5000 miles

Check installation of driver's floor mat

Inspect and adjust all fluid levels

Inspect wiper blades

Rotate tires

Visually inspect brake linings/drums and brake pads/discs

12 months 10000 miles

Check installation of driver's floor mat

Inspect and adjust all fluid levels

Inspect wiper blades

Replace engine oil and oil filter

Rotate tires Visually inspect brake linings/drums and brake pads/discs

18 months 15000 miles

Check installation of driver's floor mat

Inspect and adjust all fluid levels

Inspect wiper blades

Lubricate propeller shaft

Re-torque propeller shaft bolt

Rotate tires

Visually inspect brake linings/drums and brake pads/discs

Inspect the following:

___ Ball joints and dust covers

___ Brake lines and hoses

___ Drive shaft boots (4WD)

___ Engine coolant

___ Exhaust pipes and mountings

___ Front differential oil (4WD)

___ Radiator and condenser

___ Rear differential oil

___ Steering gear box

___ Steering linkage and boots

24 months 20000 miles

Check installation of driver's floor mat

Inspect and adjust all fluid levels

Inspect wiper blades

Replace engine oil and oil filter

Rotate tires

Visually inspect brake linings/drums and brake pads/discs

30 months 25000 miles

Check installation of driver's floor mat

Inspect and adjust all fluid levels

Inspect wiper blades

Rotate tires

Visually inspect brake linings/drums and brake pads/discs

** note If 0W-20 oil WAS NOT used at the last oil change, replace engine oil and oil filter.

36 months 30000 miles

Check installation of driver's floor mat

Inspect and adjust all fluid levels

Inspect wiper blades

Lubricate propeller shaft

Re-torque propeller shaft bolt

Replace cabin air filter

Replace engine air filter

Replace engine oil and oil filter

Rotate tires

Inspect the following:

___ Automatic transmission fluid

___ Ball joints and dust covers

___ Brake lines and hoses

- ___ Brake linings/drums and brake pads/discs
- ___ Drive shaft boots (4WD)
- ___ Engine coolant
- ___ Exhaust pipes and mountings
- ___ Front differential oil (4WD)
- ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
- ___ Fuel tank cap gasket
- ___ Radiator and condenser
- ___ Rear differential oil
- ___ Steering gear box
- ___ Steering linkage and boots
- ___ Transfer case oil (4WD)