


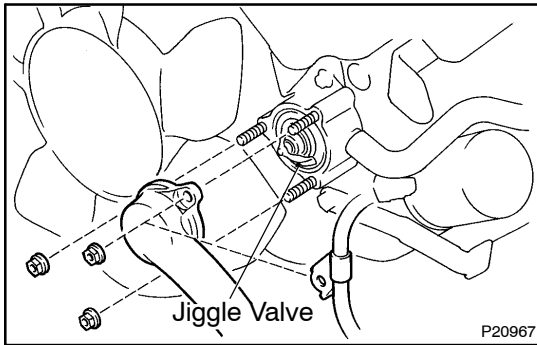

INSTALLATION

1. INSTALL THERMOSTAT

- (a) Place a new gasket to the thermostat.
- (b) Install the thermostat with the jiggle valve downward.
- (c) Install the water inlet with the 3 bolts.

Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)

2. CONNECT LOWER RADIATOR HOSE

3. FILL WITH ENGINE COOLANT

4. START ENGINE AND CHECK FOR LEAKS