


(a) Measure the heater resistance as shown in the table below.
Standard Resistance (for Bank 1):

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION
1 (HA1A) - 2 (+B)	20°C (68°F)	1.8 to 3.4 Ω
1 (HA1A) - 4 (A1A-)	Always	10 kΩ or higher

Standard Resistance (for Bank 2):

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION
1 (HA2A) - 2 (+B)	20°C (68°F)	1.8 to 3.4 Ω
1 (HA2A) - 4 (A2A-)	Always	10 kΩ or higher

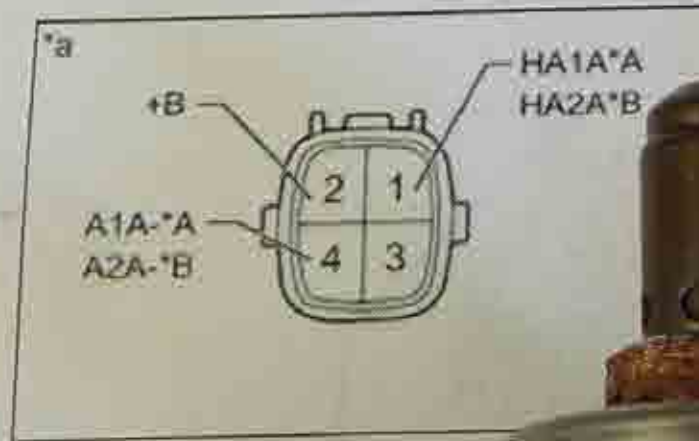

Illustration

for Bank 1	
for Bank 2	
Component without harm	ed
(Air Fuel Ratio Sensor)	

If the result is not as specified, replace the air fuel ratio sensor.

