


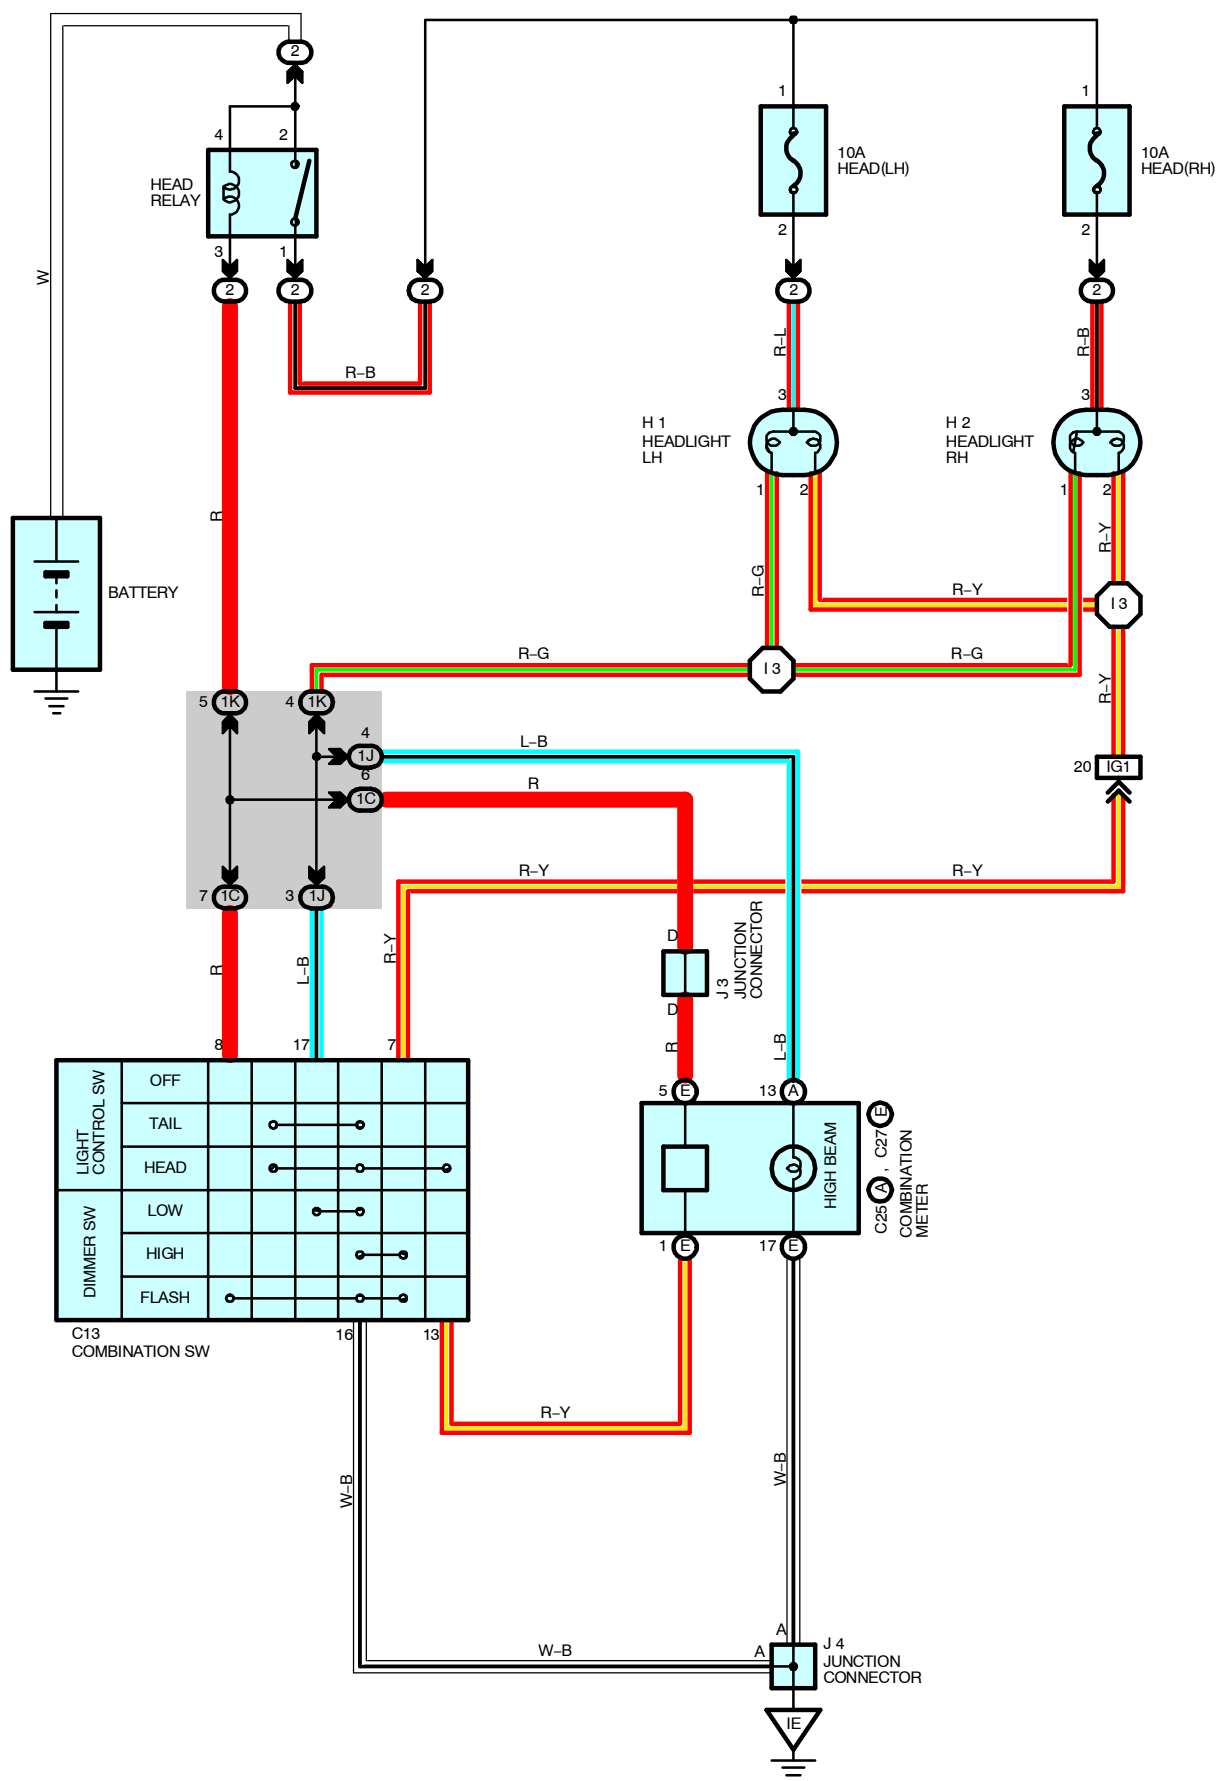

SERVICE HINTS**HEAD RELAY [ENGINE ROOM R/B]**

2-1 : Closed with light control SW at **HEAD** position or dimmer SW at **FLASH** position

 : **PARTS LOCATION**

Code	See Page	Code	See Page	Code	See Page
C13	32	H1	28 (5VZ-FE)	H2	30 (3RZ-FE)
C25 A	32		30 (3RZ-FE)	J3	33
C27 E	32	H2	28 (5VZ-FE)	J4	33

 : **RELAY BLOCKS**

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

 : **JUNCTION BLOCK AND WIRE HARNESS CONNECTOR**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	24	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1J		
1K	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)

 : **CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	42	Engine Room Main Wire and Cowl Wire (Left Kick Panel)

 : **GROUND POINTS**

Code	See Page	Ground Points Location
IE	42	Cowl Side Panel LH

 : **SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I3	42	Engine Room Main Wire			