

* 1 : W/ PERSONAL LIGHT
* 2 : W/ VANITY LIGHT



SERVICE HINTS

D16, D17, D18, D19 DOOR COURTESY SW FRONT LH, RH, REAR LH, RH

1-GROUND : Closed with door open

B9 BACK DOOR COURTESY SW

1-2 : Closed with back door open

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
B9	32	D18	32	J9	31
C12	30	D19	32	J14	A 32
D14	30	I13	31	J15	B 32
D15	30	I15	A 31	J16	32
D16	32	I17	32	P3	33
D17	32	I18	32	V9	33

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	20 (USA)	Engine Room R/B (Engine Compartment Left)
	21 (Canada)	

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	22	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1C		
1D		
1F		
1J	22	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1K	22	Roof Wire and Driver Side J/B (Lower Finish Panel)
3B	24	Cowl Wire and Center J/B (Near the Steering Column Tube)
3C		
3E		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	40	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
IL2	40	Cowl Wire and Floor Wire (Right Kick Panel)
BR1	42	Back Door No.1 Wire and Floor No.2 Wire (Left Rear Side of Roof)
BS1	42	Back Door No.1 Wire and Back Door No.2 Wire (Back Door Left)

: GROUND POINTS

Code	See Page	Ground Points Location
IF	40	Cowl Side Panel RH
BH	42	Left Quarter Panel Inner

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B3	42	Roof Wire			