
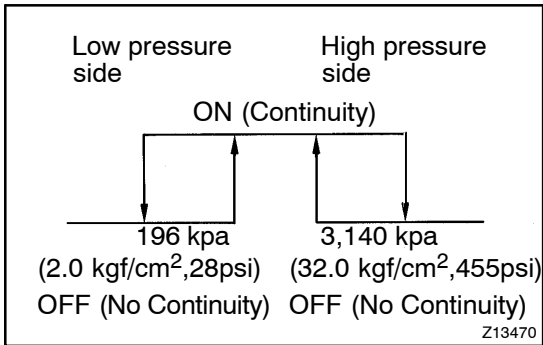


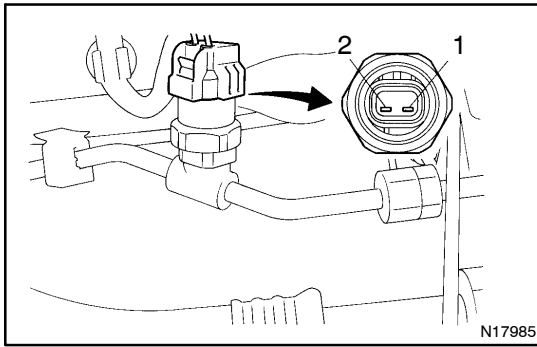

PRESSURE SWITCH ON-VEHICLE INSPECTION

AC0E7-02

1. SET ON MANIFOLD GAUGE SET (See page AC-19)
 2. DISCONNECT CONNECTOR
 3. RUN ENGINE AT APPROX. 2,000 rpm
 4. SET BLOWER SPEED CONTROL SWITCH TO "HI" POSITION
 5. SET TEMPERATURE CONTROL LEVER TO "MAX. COOL" POSITION
 6. A/C SWITCH ON
 7. INSPECT PRESSURE SWITCH OPERATION
 - (a) Connect the positive (+) lead from the ohmmeter to terminal 1 and negative (-) lead to terminal 2.
 - (b) Check continuity between terminals when refrigerant pressure is changed, as shown in the illustration.
- If operation is not as specified, replace the pressure switch.