


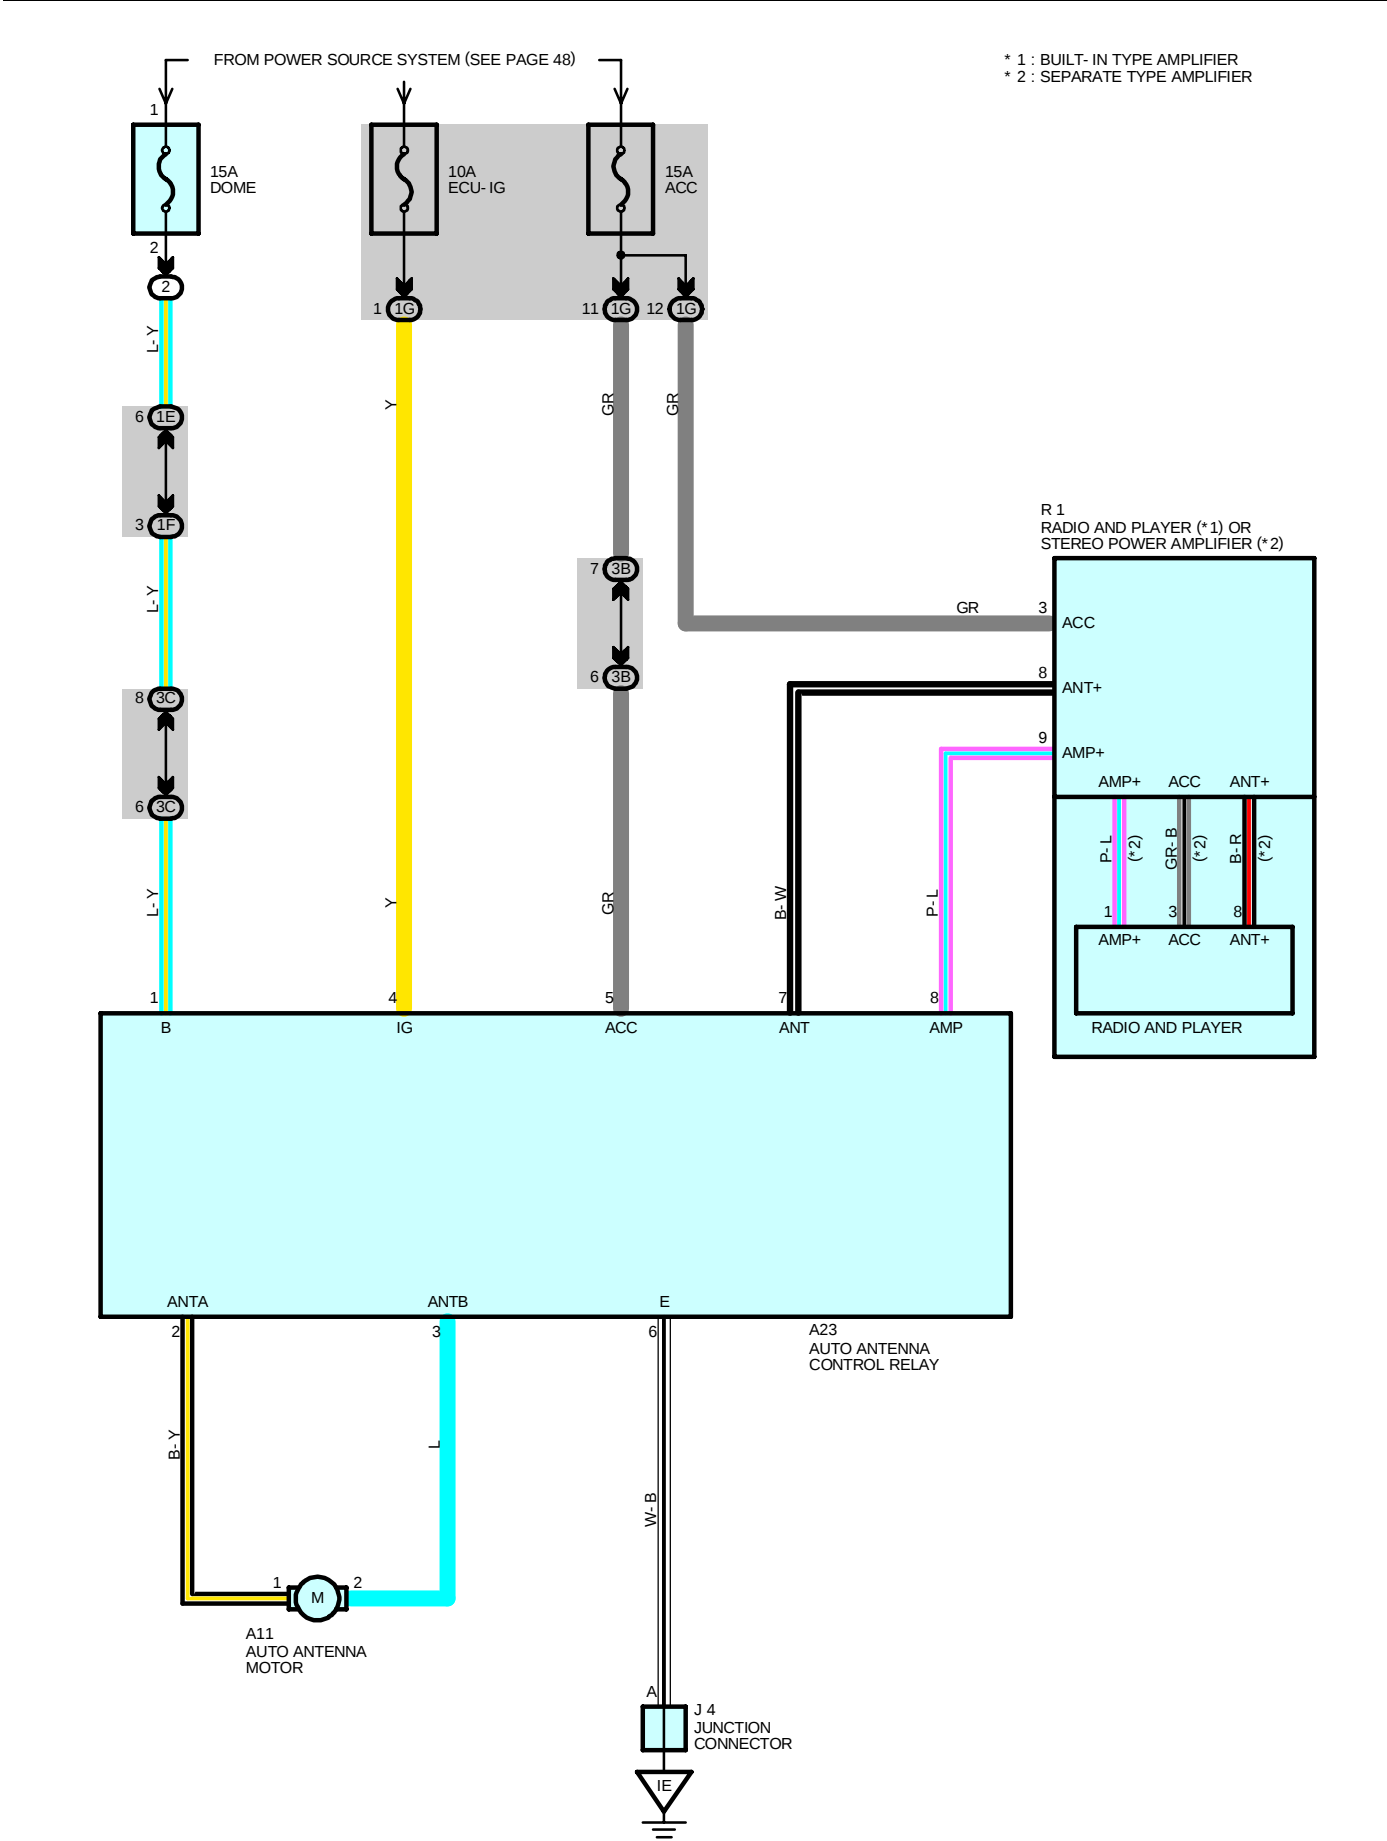

SERVICE HINTS

A23 AUTO ANTENNA CONTROL RELAY

- 1-GROUND : Always approx. **12** volts
- 5-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position
- 4-GROUND : Approx. **12** volts with ignition SW at **ON** position
- 6-GROUND : Always continuity
- 7-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position and radio SW on and player SW off
- 8-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position and radio SW off and player SW on

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A11	28	J4	31		
A23	30	R1	31		

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1F	24	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1G		
3B	26	Cowl Wire and Center J/B (Near the Steering Column Tube)
3C		

: GROUND POINTS

Code	See Page	Ground Points Location
IE	38	Cowl Side Panel LH