


204

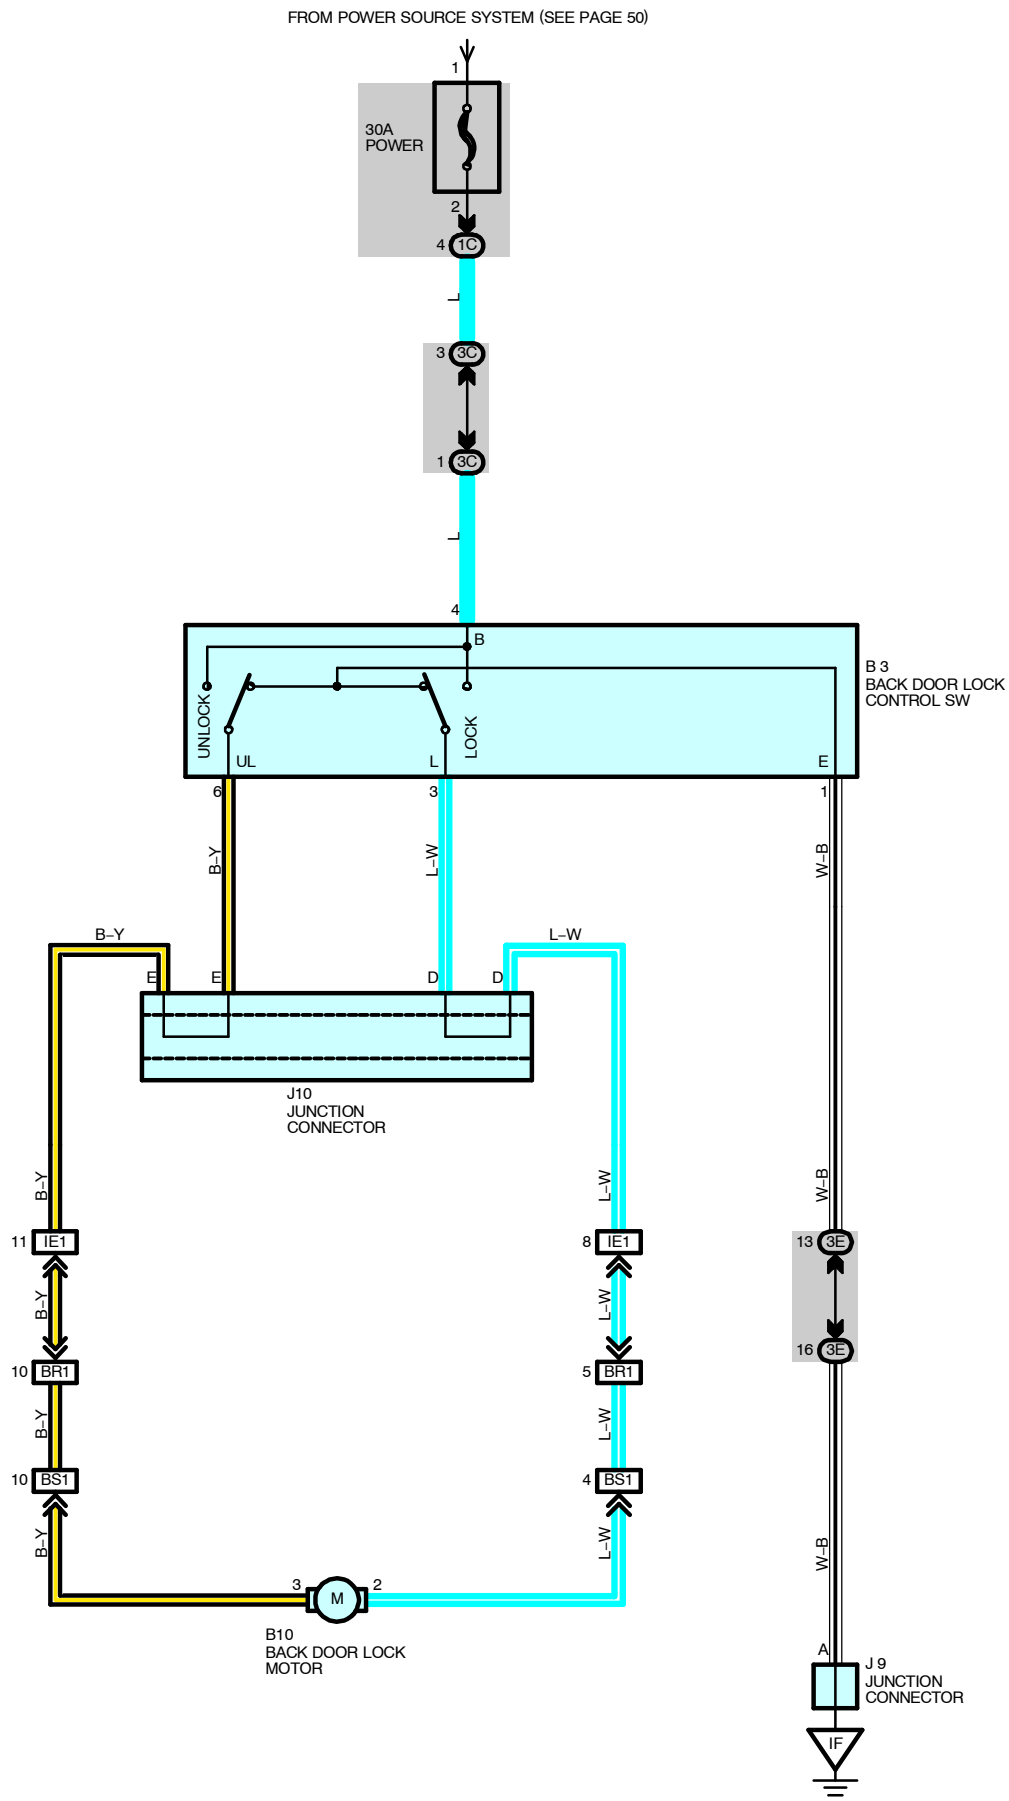

SERVICE HINTS

B3 BACK DOOR LOCK CONTROL SW

4-GROUND : Always approx. 12 volts

1-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
B3	32	J9	33		
B10	34	J10	33		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	24	Cowl Wire and Driver Side J/B (Lower Finish Panel)
3C	26	Cowl Wire and Center J/B (Near the Steering Column Tube)
3E		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	42	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
BR1	44	Back Door No.1 Wire and Floor No.2 Wire (Left Rear Side of Roof)
BS1	44	Back Door No.1 Wire and Back Door No.2 Wire (Back Door Left)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IF	42	Cowl Side Panel RH