


BACK-UP LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 48)

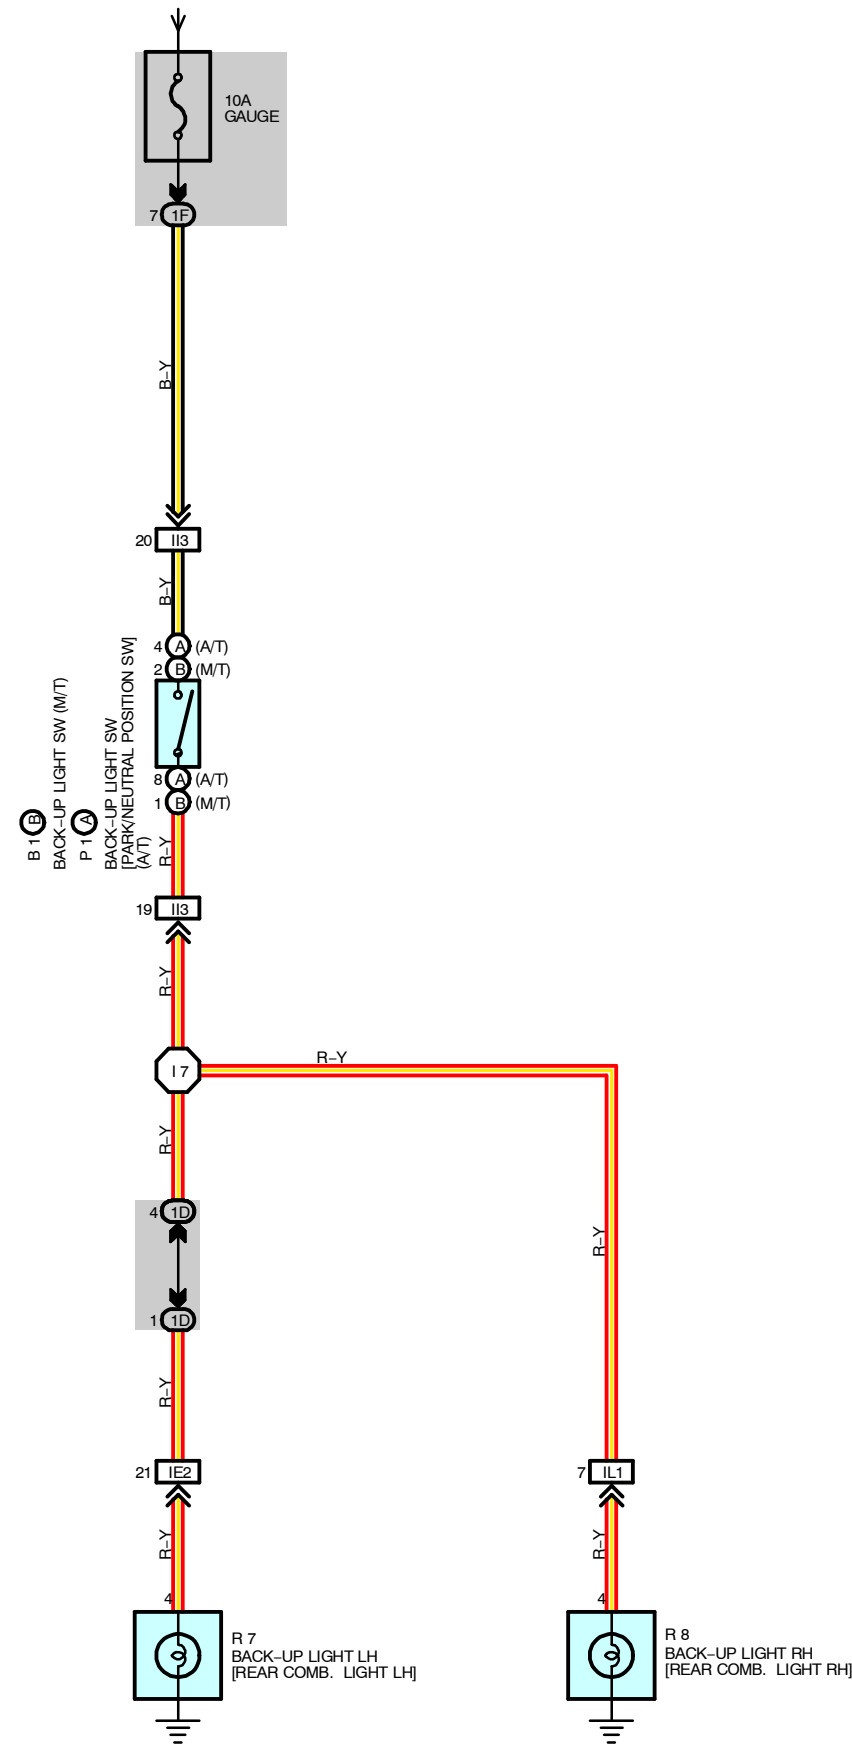

SERVICE HINTS

P1 (A) BACK-UP LIGHT SW [PARK/NEUTRAL POSITION SW] (A/T)

B1 (B) BACK-UP LIGHT SW (M/T)

(A) 4-(A) 8, (B) 2-(B) 1 : Closed with shift lever in **R** position

○ : PARTS LOCATION

Code		See Page	Code		See Page	Code	See Page
B1	B	26 (5VZ-FE)	P1	A	27 (5VZ-FE)	R7	33
		28 (3RZ-FE)			29 (3RZ-FE)	R8	33

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	22	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1F		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE2	40	Cowl Wire and Floor No.2 Wire (Left Kick Panel)
II3	40	Engine Wire and Cowl Wire (on the Glove Box)
IL1	40	Cowl Wire and Floor Wire (Right Kick Panel)


○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I7	40	Cowl Wire			

B1 (B)
GRAY



P1 (A)
GRAY

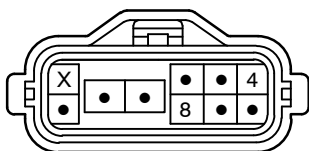

R7, R8

