

PRE-CHECK

- 1 Only wireless function (Remote control) will not operate.
(If a new transmitter or a transmitter of the same type that works properly with the vehicle is not available.)

Make the vehicle in the initialized condition:

The initialized condition is the condition when the following conditions are satisfied.

- (1) Key plate has not been inserted in the ignition key cylinder.
- (2) All the doors are closed. (Door warning light is off.)
- (3) All the doors are locked.



Basic function check:

Under the standard operation, when repeating the operation of UNLOCK and LOCK switch 3 times or more alternately, check the UNLOCK-LOCK operation from 3rd time onward.

- Following procedures are standard operation.

- (1) Keep about 1 m away to the right direction from the outside handle of a driver's seat.
- (2) Face the transmitter toward the vehicle and press one of transmitter switches for about 1 sec.

<Reference>

- As of the security function, even the wireless function is normal, there may be the case that only UNLOCK operation will not work.

No




Yes





Normal

<Reference>

- Operative distance may differ according to an operator, the way of holding the transmitter or position.
- Because weak electric wave is used, when there is strong wave or noise in the used frequency, operation distance might be shortened.

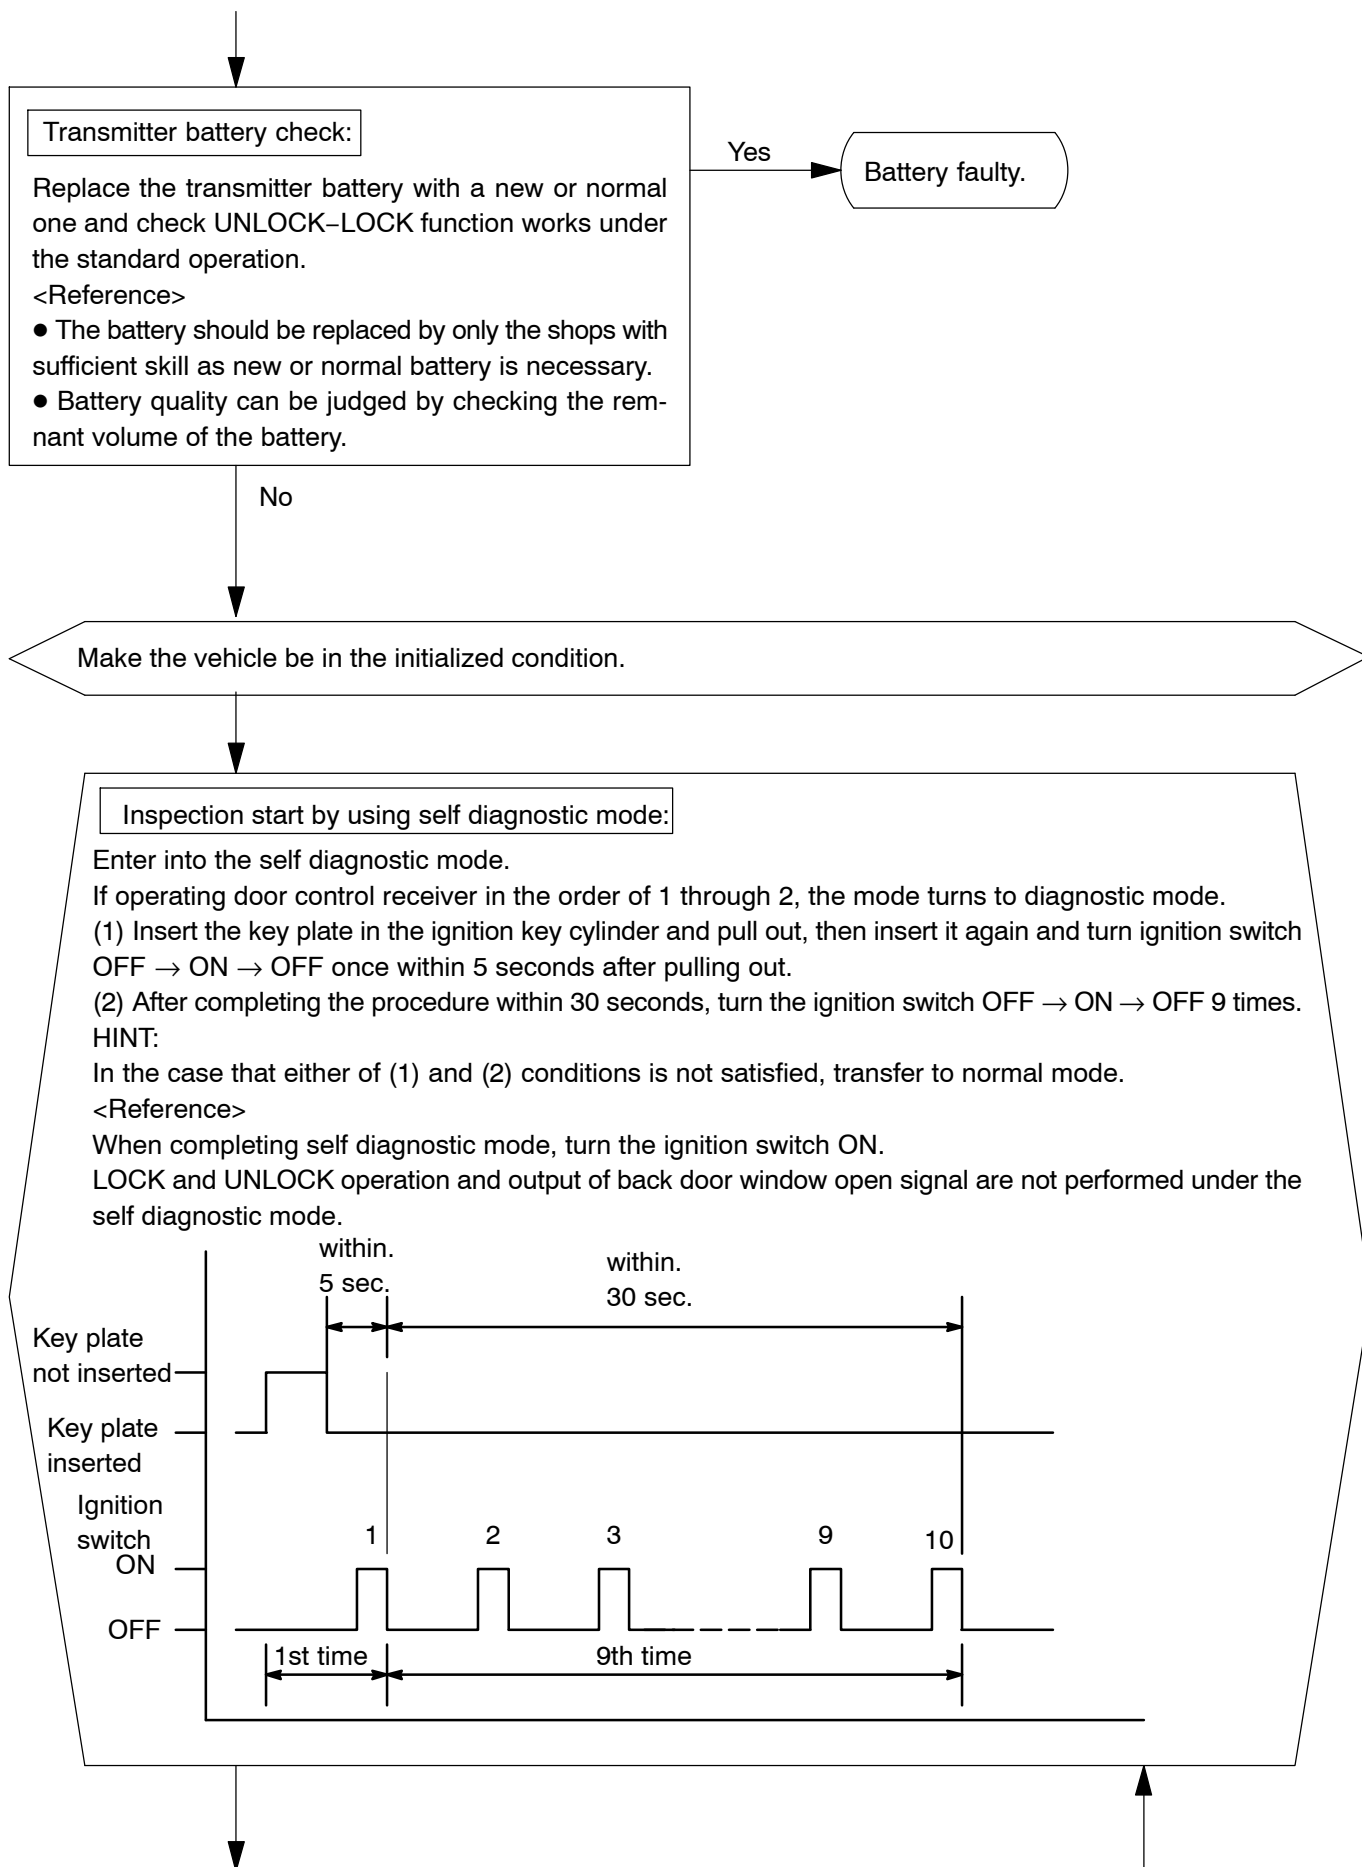

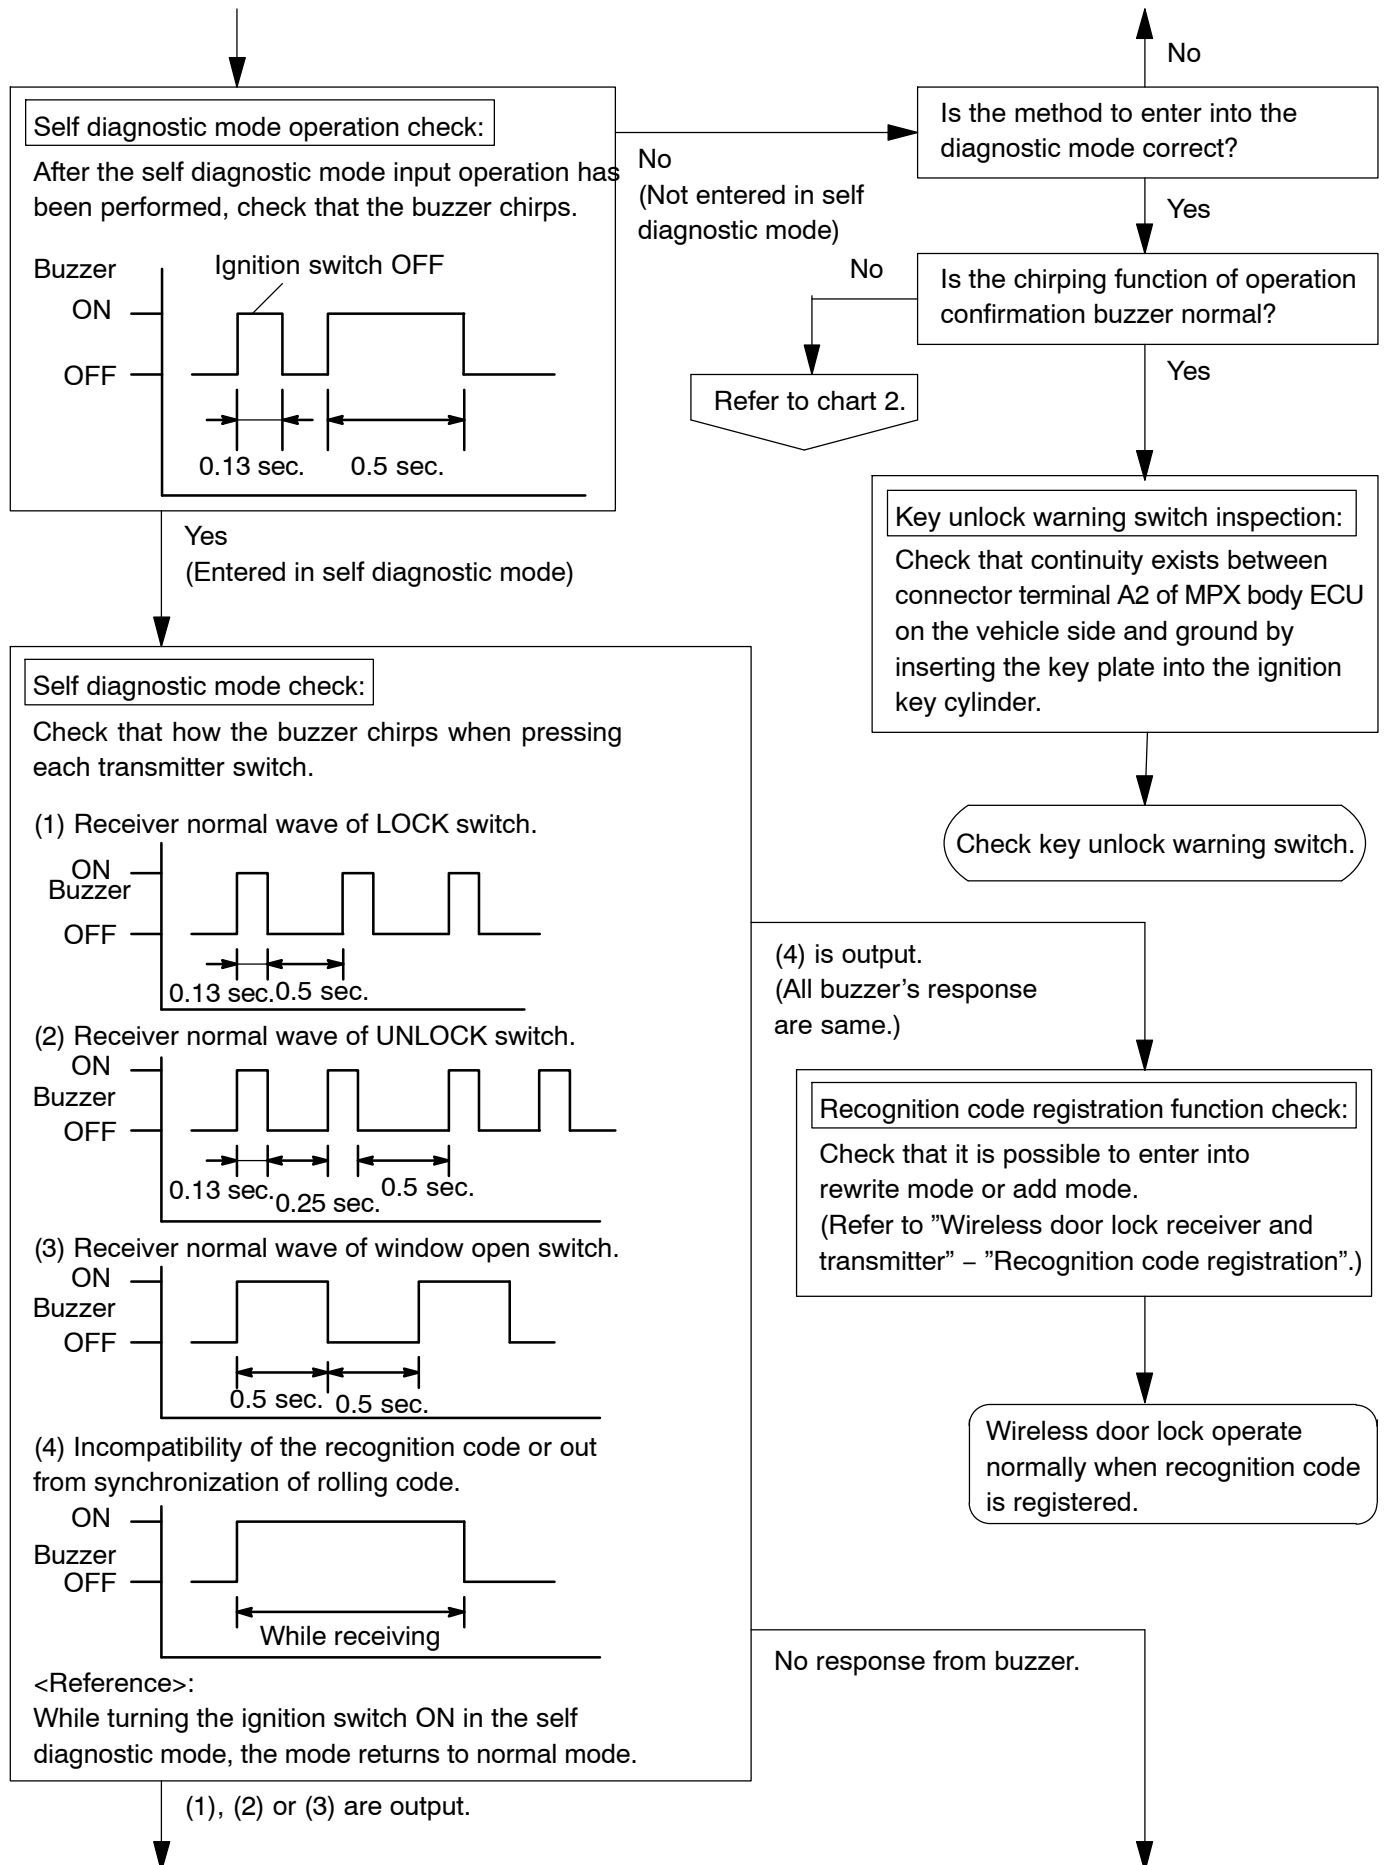

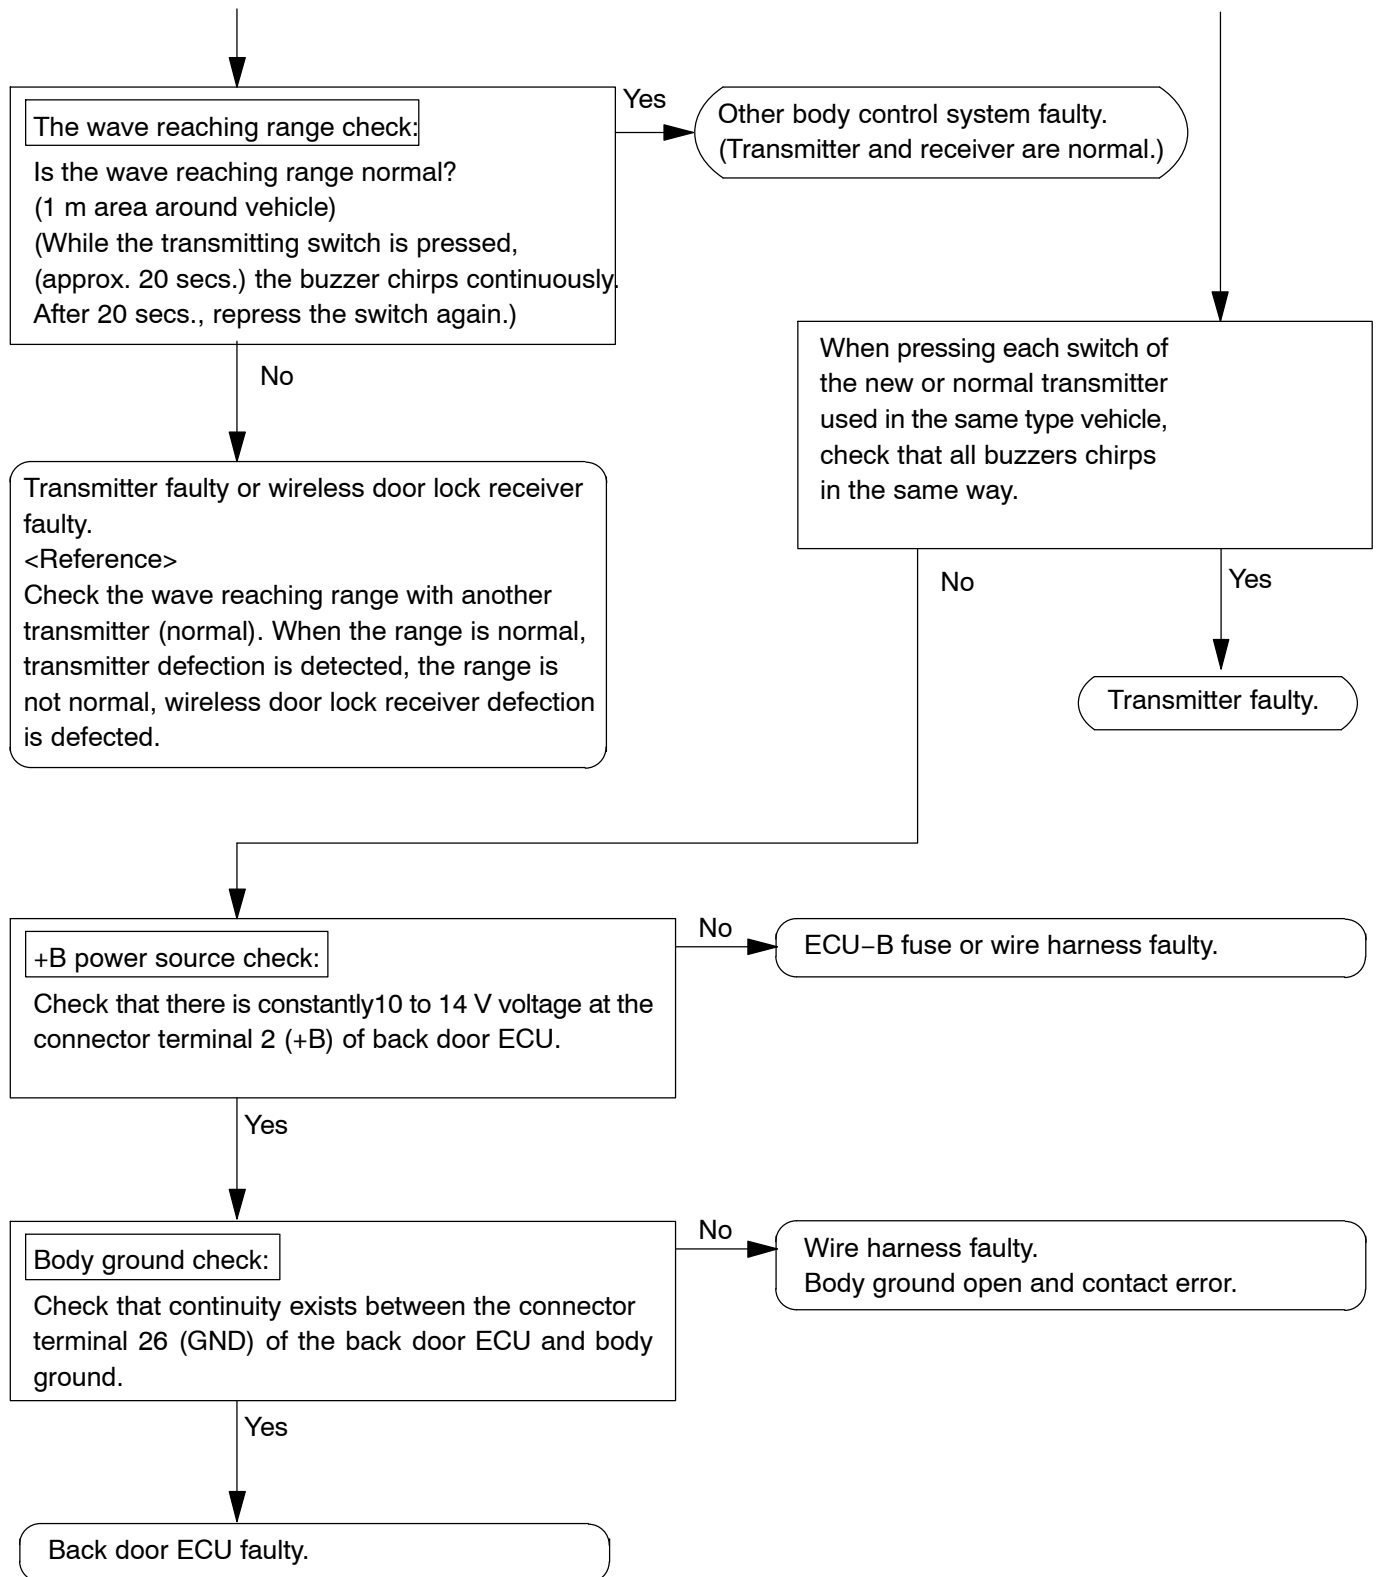

2 Wireless door lock buzzer does not chirp.

