



VEHICLE LIFT AND SUPPORT LOCATIONS


IN007-01

[2WD]

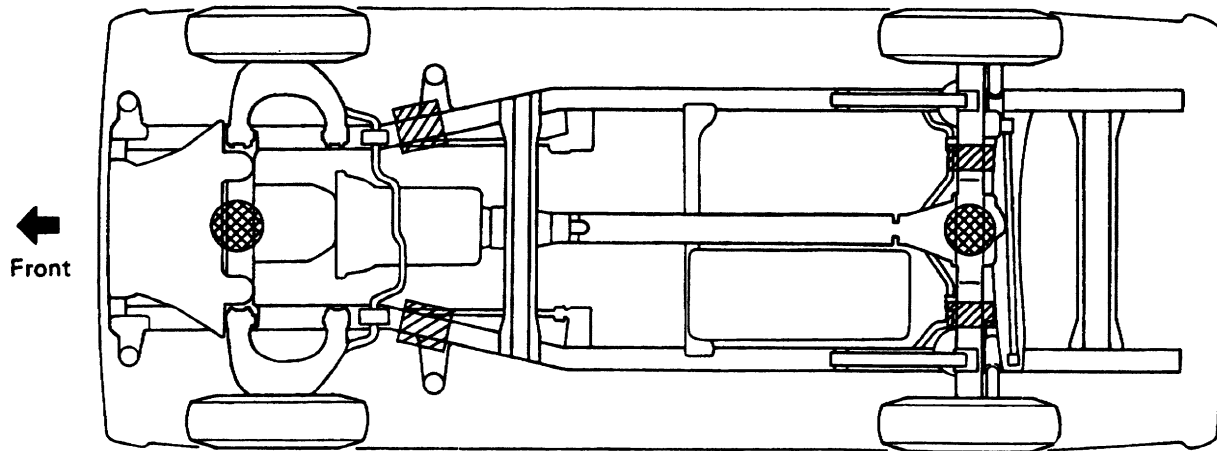

[4WD]

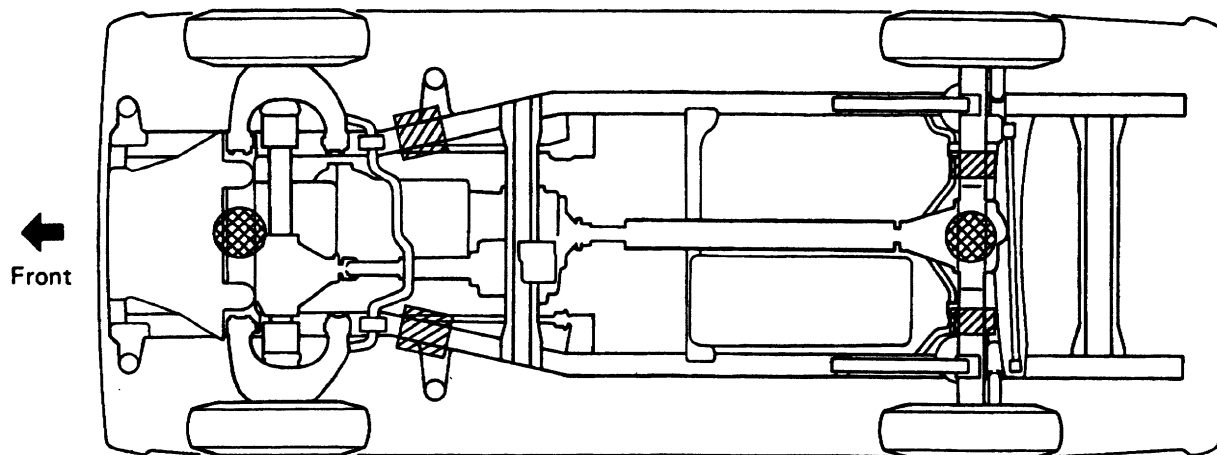

JACK POSITION 

Front Center of crossmember

Rear Center of rear axle housing

SUPPORT POSITION

Safety stand 

IN0222
IN0223