



TRANSFER ASSY (VF4AM)

COMPONENTS


31032-04

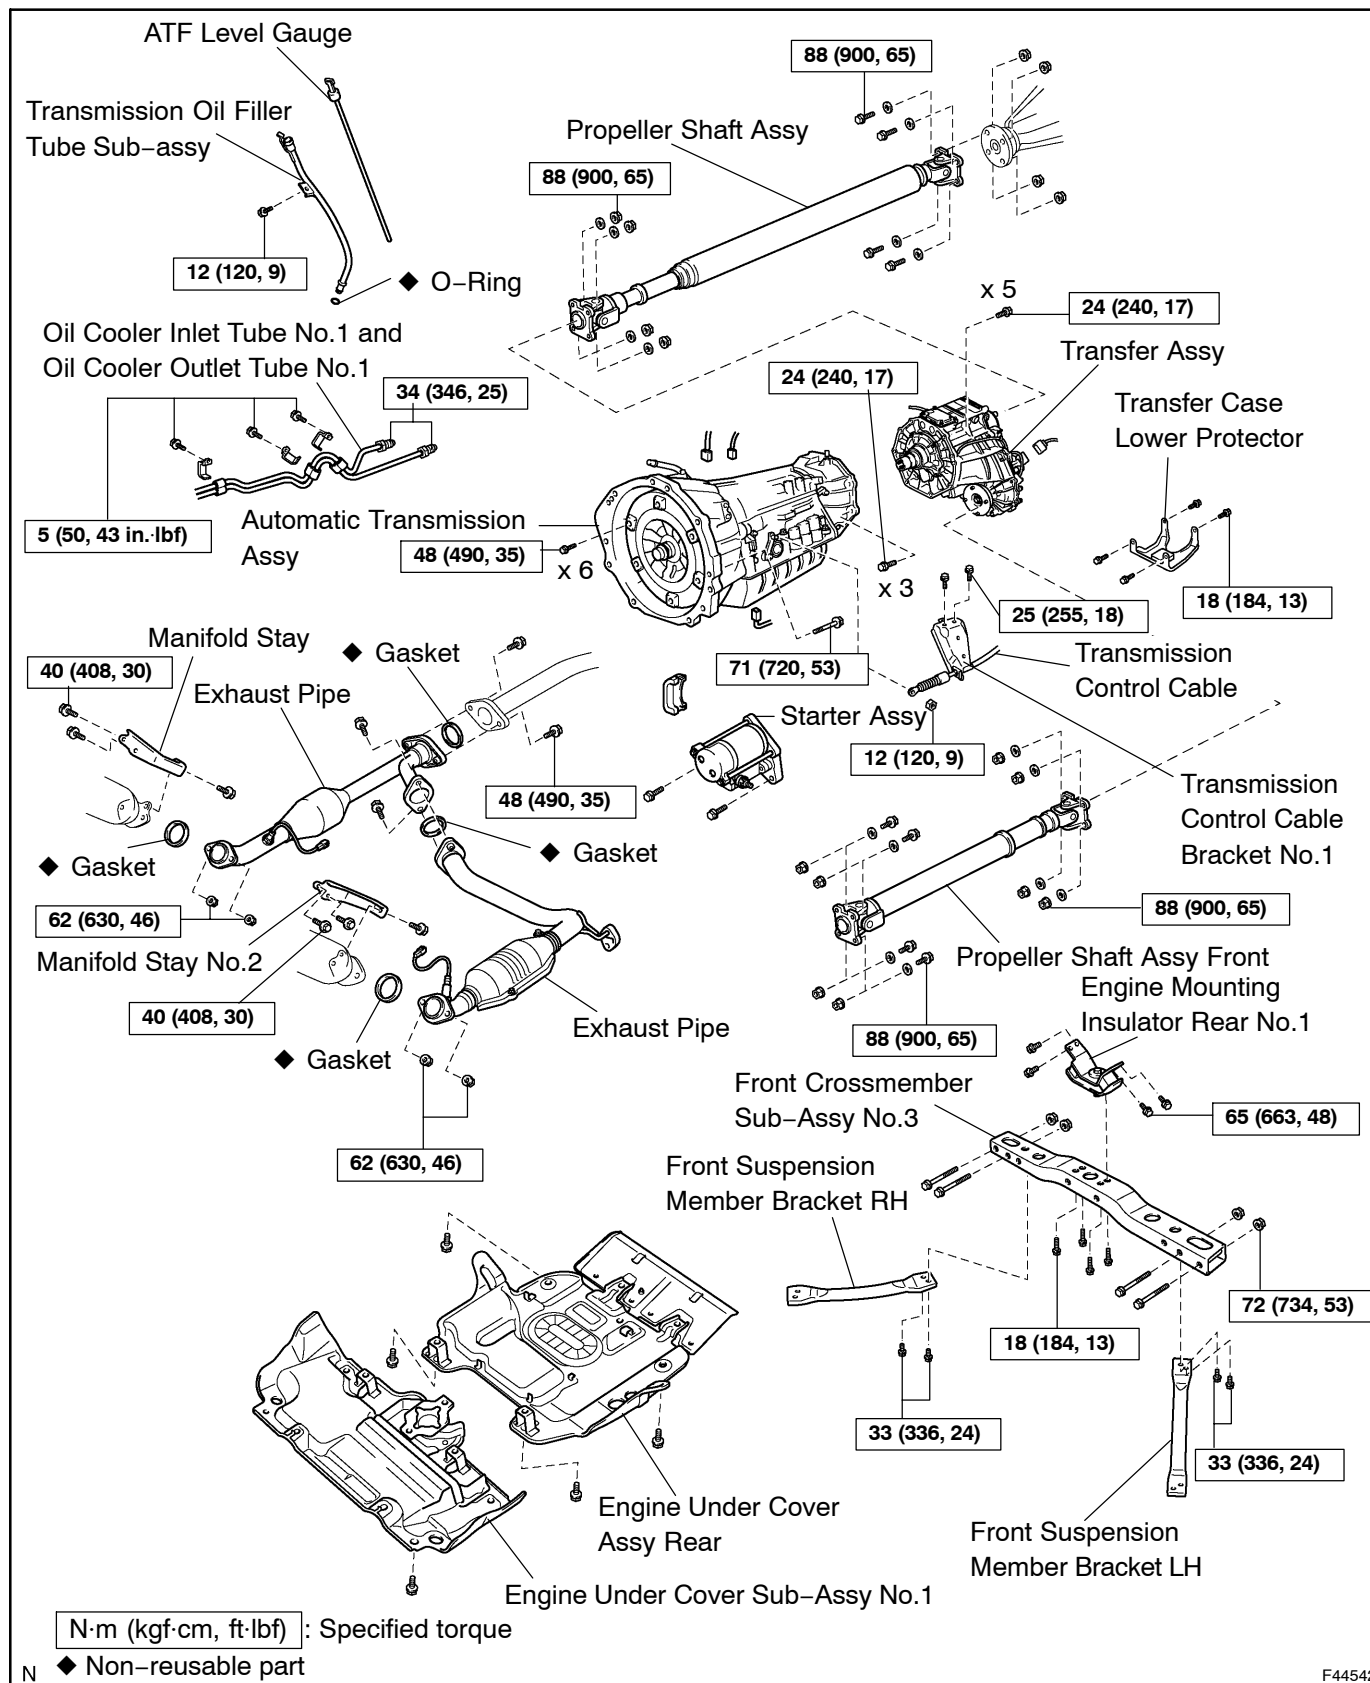

F44542

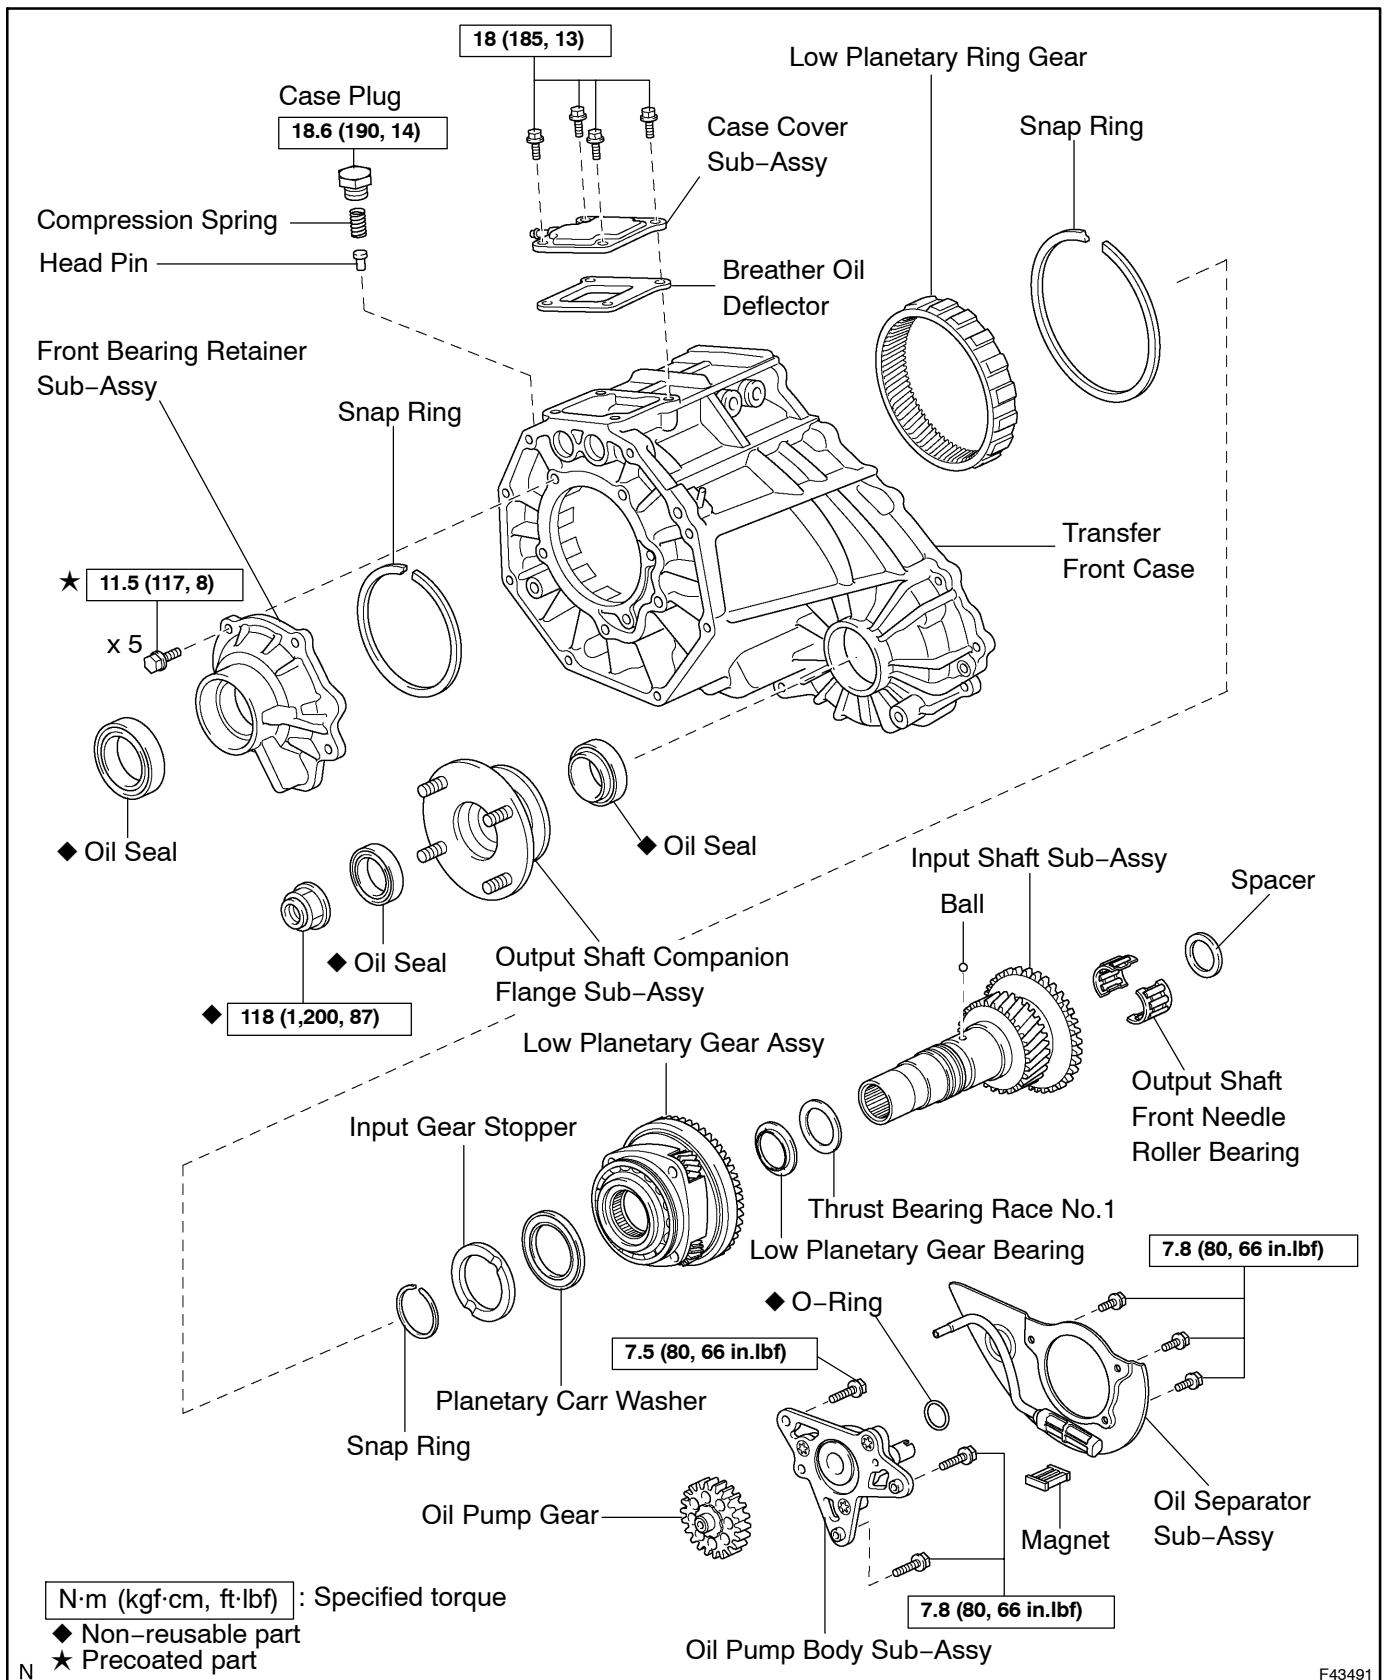


F43491

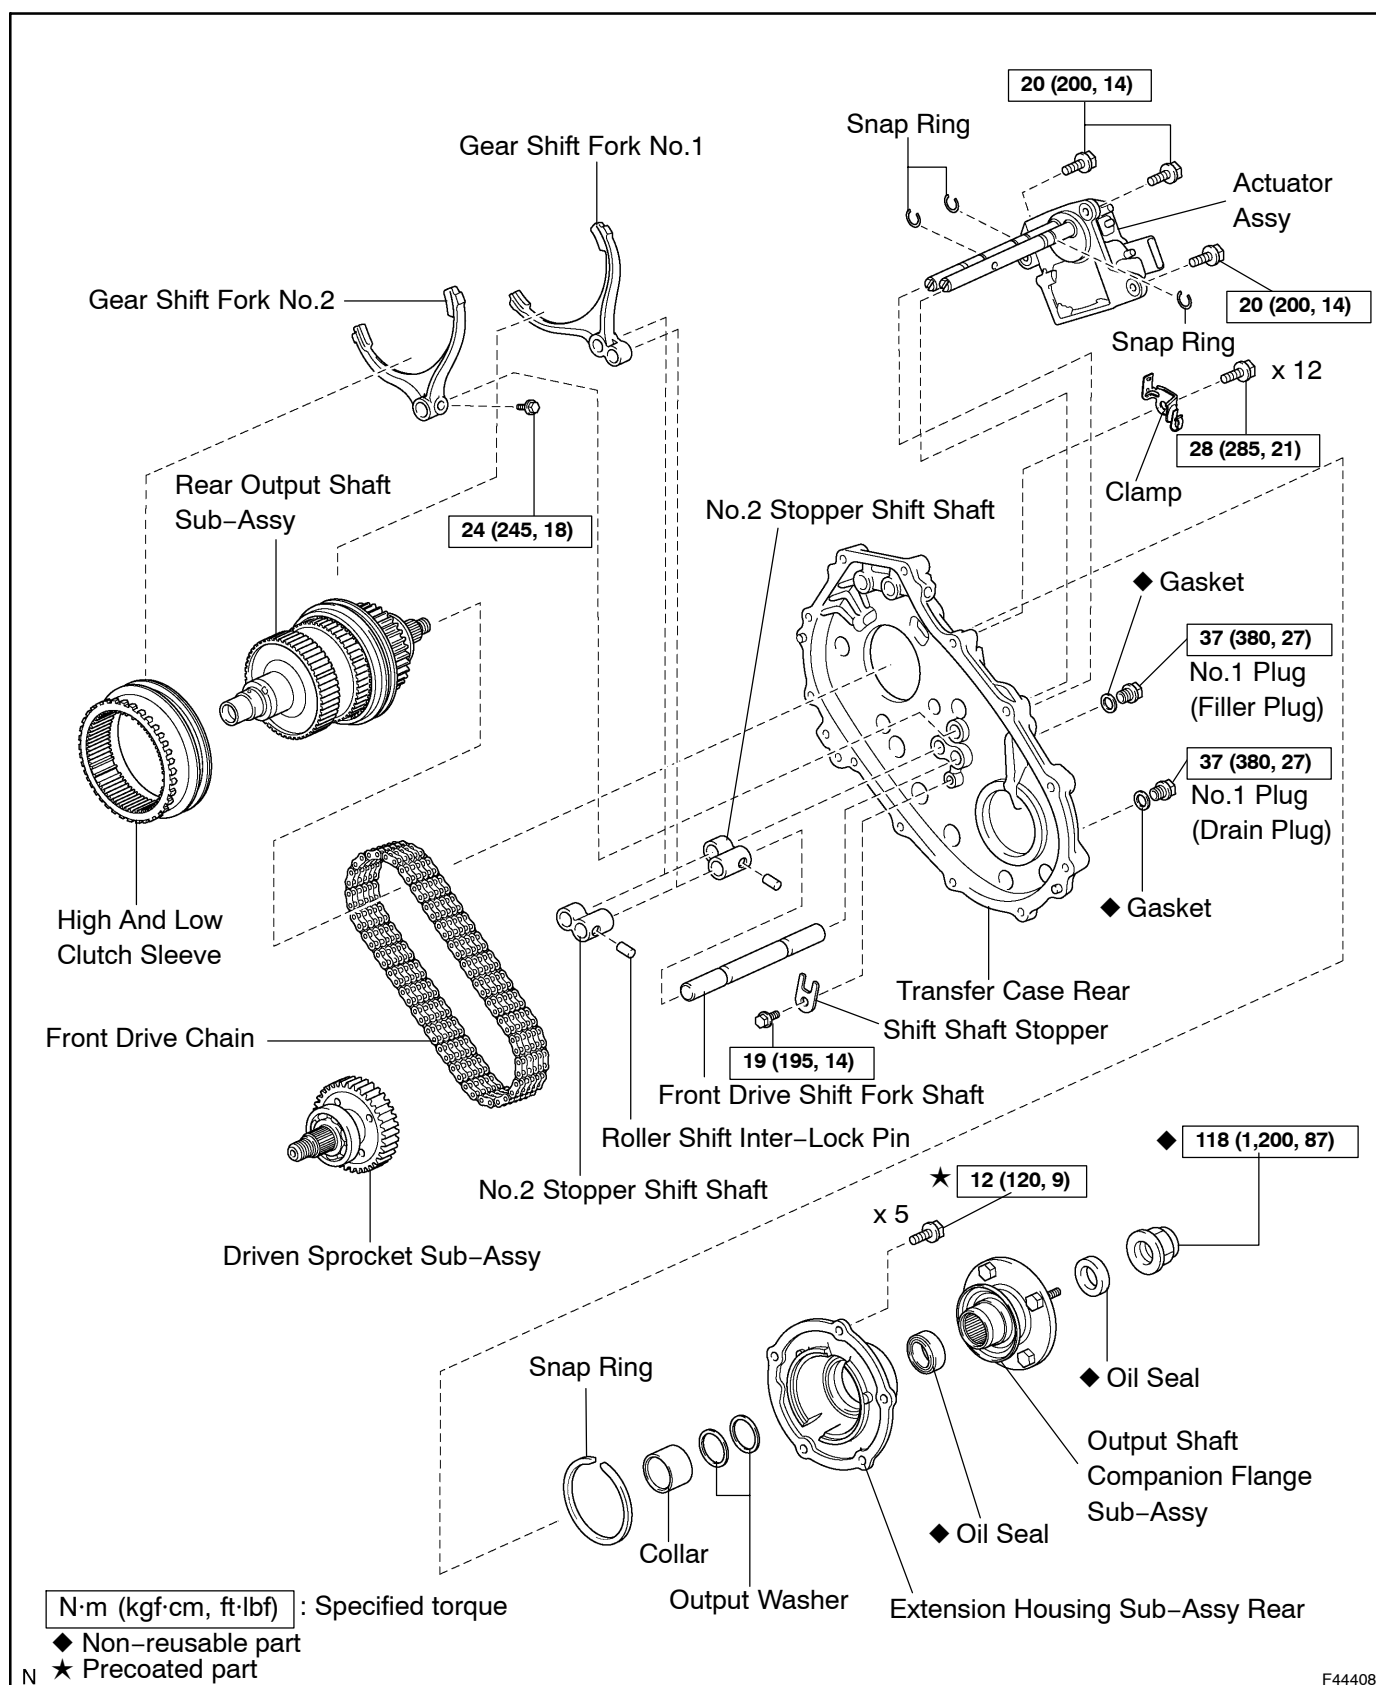

F44408

Input Shaft Sub-Assy:

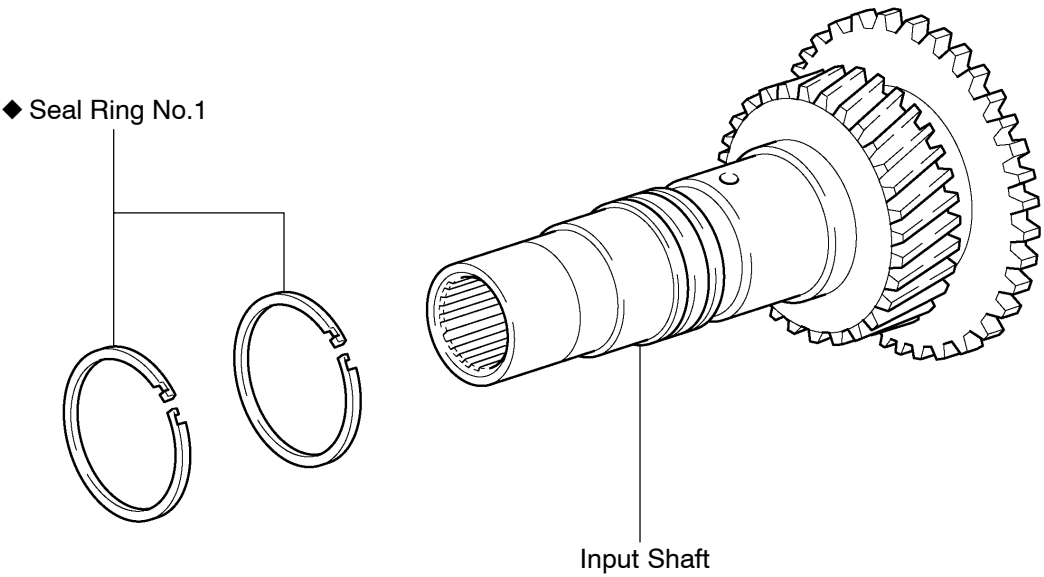


◆ Non-reusable part

N

F43496


Driven Sprocket Sub-Assy:

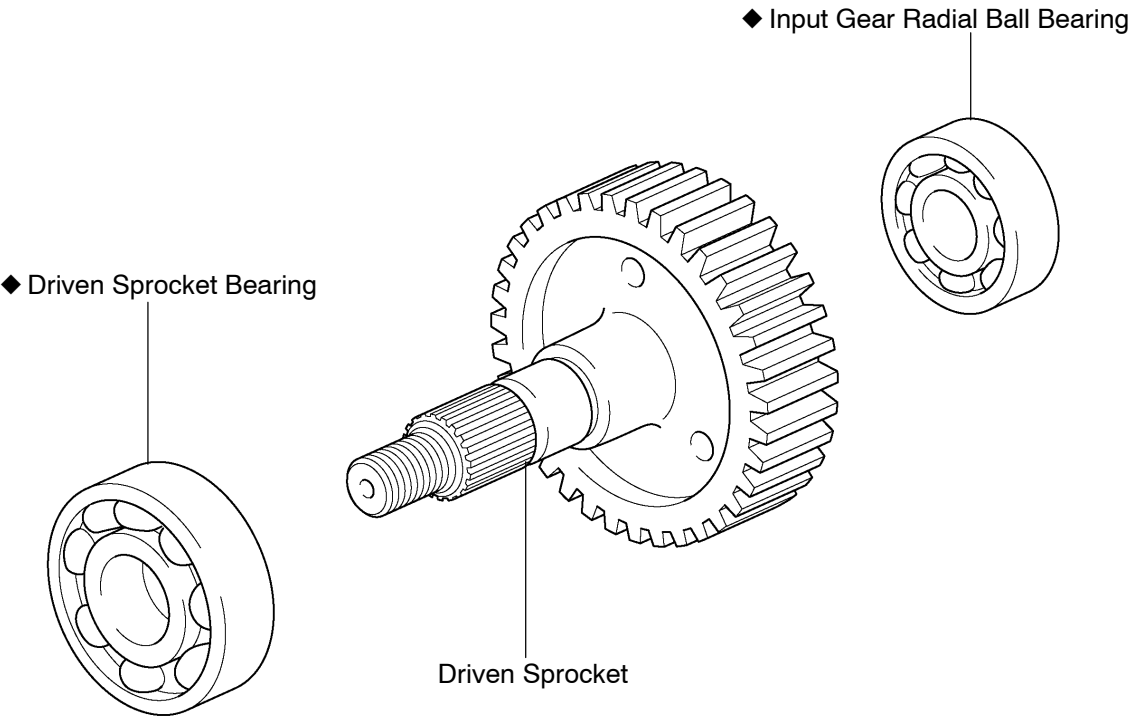

◆ Non-reusable part


N

F43494

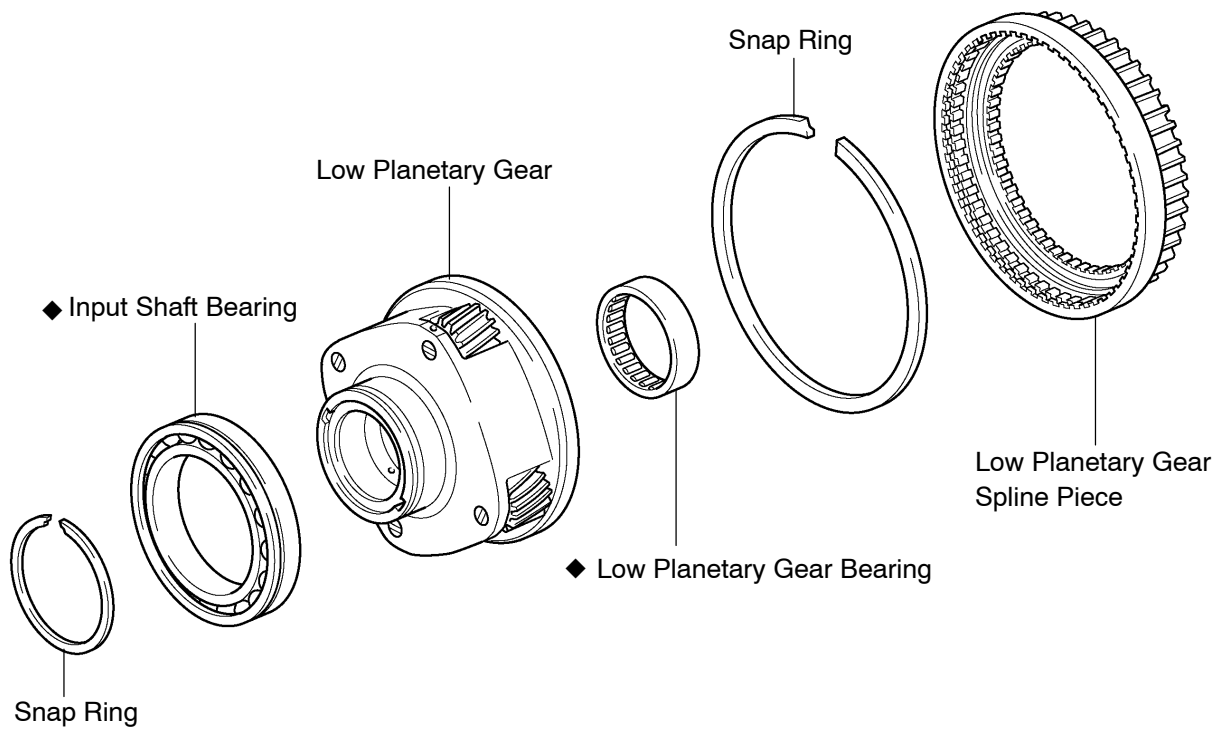Low Planetary Gear Sub-Assy:

N ◆ Non-reusable part

F43495

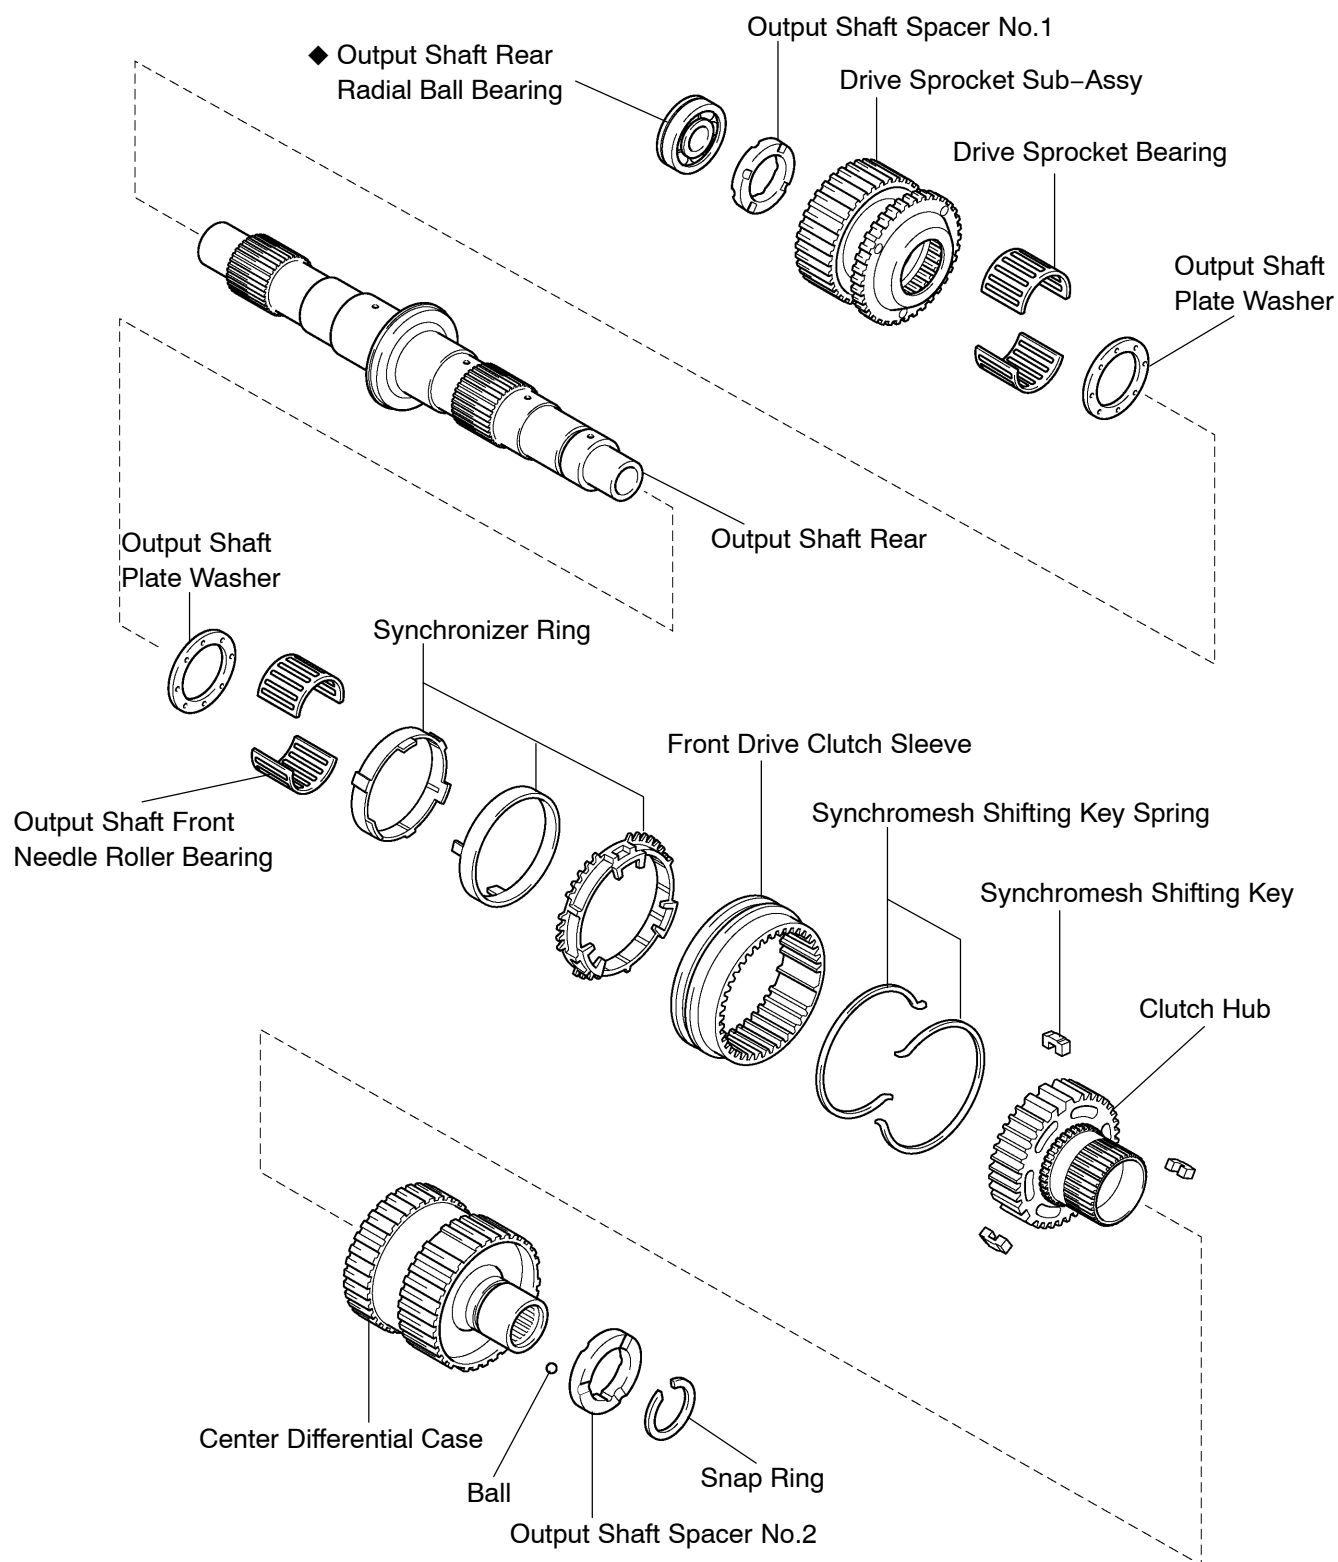Rear Output Shaft Sub-Assy:

N

◆ Non-reusable part

F44409