


4. CHANGING METHOD OF PASSIVE MODE (ON or OFF)

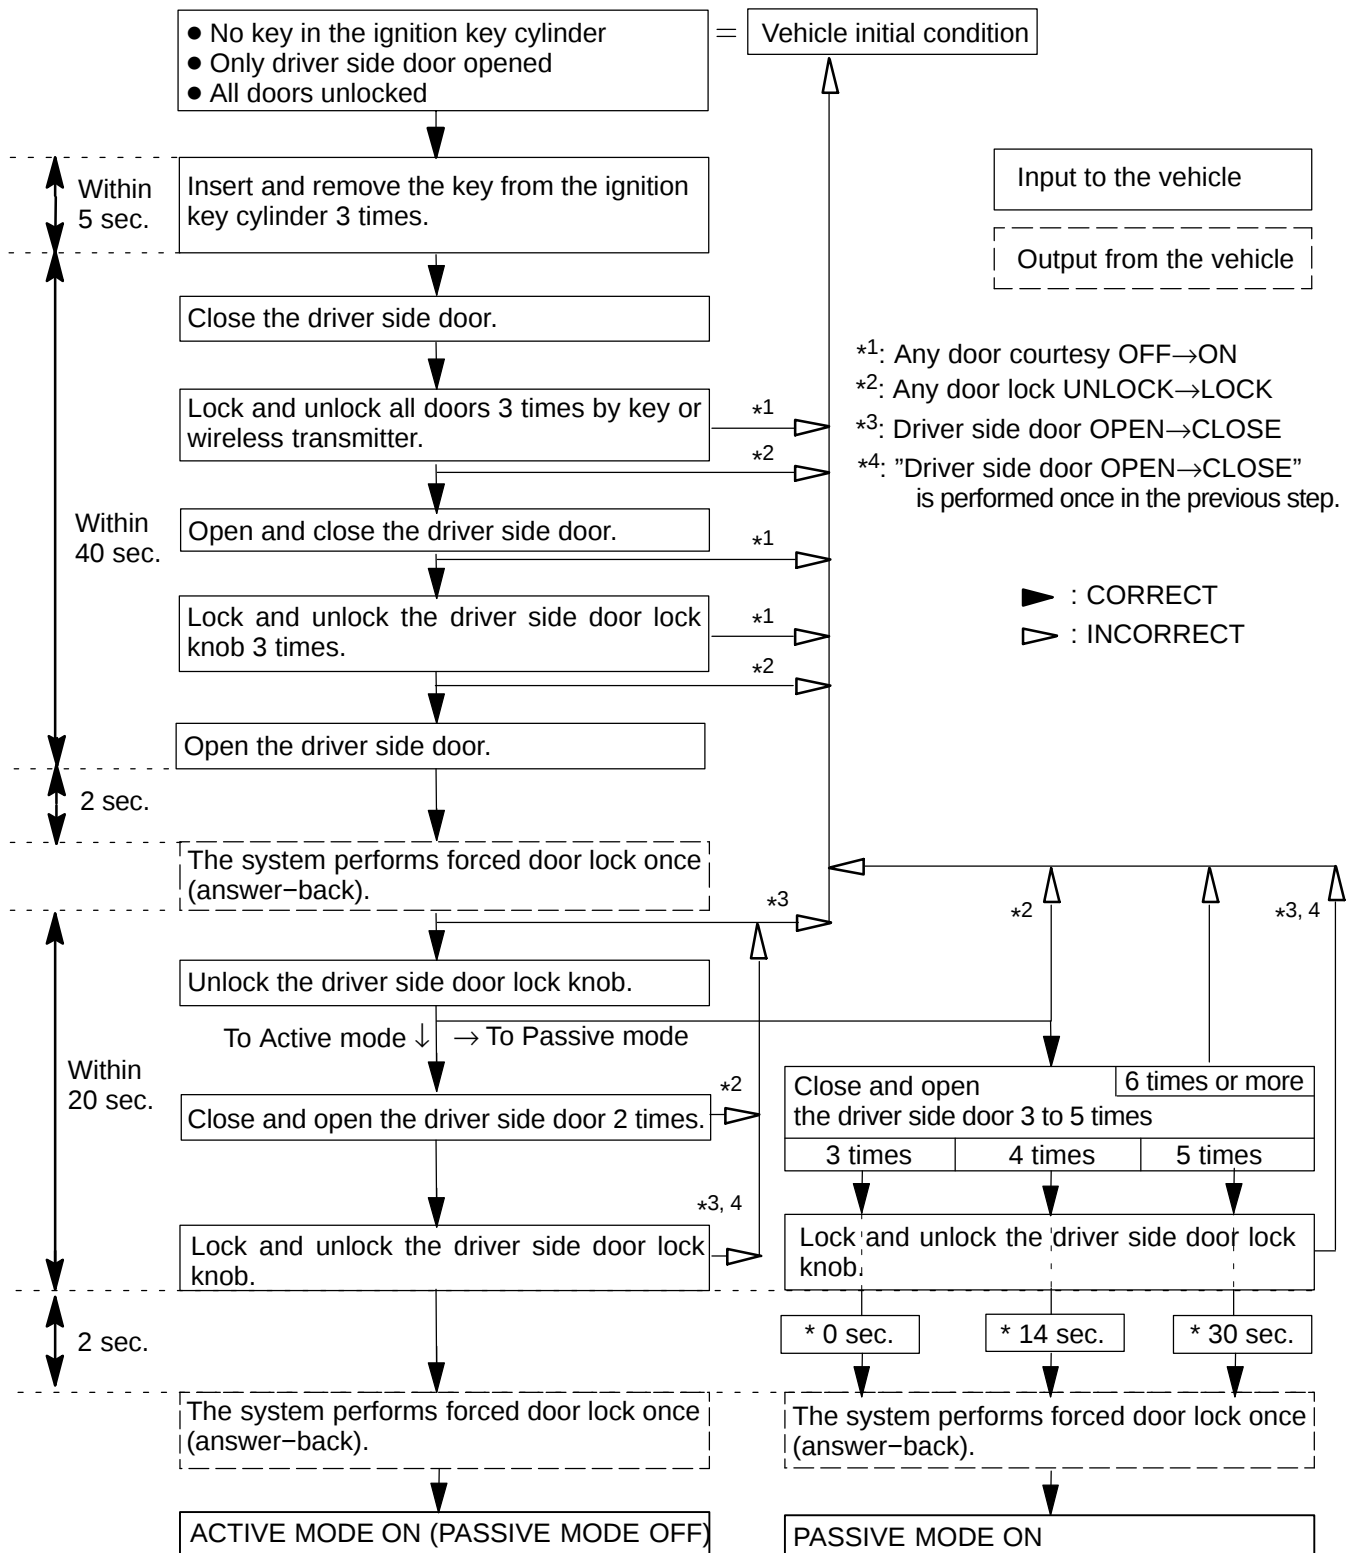

HINT:

- Initial mode is PASSIVE MODE OFF.
- If the ignition switch is turned ON, changing operation will be cancelled.

*: Entry delay time