



Technical Service BULLETIN

December 12, 2006

Title:

REPAIR MANUAL SUPPLEMENT: DAYTIME RUNNING LIGHTS

Models:

'03 – '07 4Runner

ELECTRICAL
EL014-06

Introduction This bulletin contains the procedure for deactivating Daytime Running Lights (DRL) on 2003 – 2007 model year 4Runner vehicles with the DRL factory option.

Applicable Vehicles

- **2003 – 2007** model year **4Runner** vehicles equipped with the **DRL factory option** (RL accessory code).

Required SSTs

ITEM NO.	SPECIAL SERVICE TOOLS (SSTs)	PART NUMBER	QTY	DRW**
1	Toyota Diagnostic Tester Kit* NOTE: • All components from this kit/set are required. • 12 Megabyte Diagnostic Tester Program Card (P/N 01002593–005) with version 13.4a Software (or later) is required. 	TOY220036	1	9
2	CAN Interface Module Kit* NOTE: • All components from this kit/set are required. 	01002744	1	9

* Essential SSTs.

** Drawer number in SST Storage System.

NOTE:

Additional Diagnostic Tester Kits, CAN Interface Modules, Program Cards, or other SSTs may be ordered by calling SPX/OTC at 1-800-933-8335.

Warranty Information

OP CODE	DESCRIPTION	TIME	OFP	T1	T2
N/A	Not Applicable to Warranty	—	—	—	—



Toyota Supports ASE Certification

**Activation
Procedure**

1. Connect the Diagnostic Tester to the DLC3 and turn the ignition switch to the “ON” position.

TOYOTA
DIAGNOSTIC TOOLSET
PROGRAM CARD

Version 13.4a

07/16/06

PRESS [ENTER]

2. In the “APPLICATION SELECT” screen, choose option 2, “CUSTOMIZE”.

APPLICATION SELECT

1: DIAGNOSIS

2: CUSTOMIZE

3: ECU REPROGRAM

3. in the “VEHICLE SELECT” screen, choose “NEW VEHICLE” and enter the year and model, followed by the “YES” button.

VEHICLE SELECT

NEW VEHICLE

LAST VEHICLE

2007 RX350

W/ MEMORY SEAT


W/ SLIDEROOF

W/ POWER B-DOOR

W/ RAIN SENSOR

4. In the “Verify Connections” screen, press the “YES” button.


Verify Connections

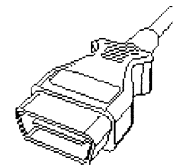


DLC3 Cable
[YES] to continue

**Activation
Procedure**
(Continued)


5. in the “CUSTOMIZE MENU” screen, select option 1, “INDIVIDUAL CHANGE”.
6. In the NOTICE screen, press the ENTER button.

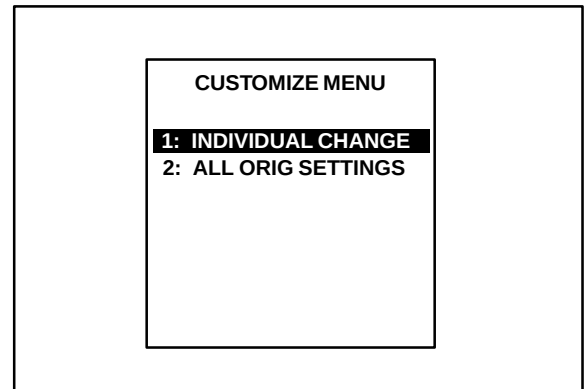


7. In the “FUNCTION SELECT” screen, select option 6, “LIGHT CONTROL”.

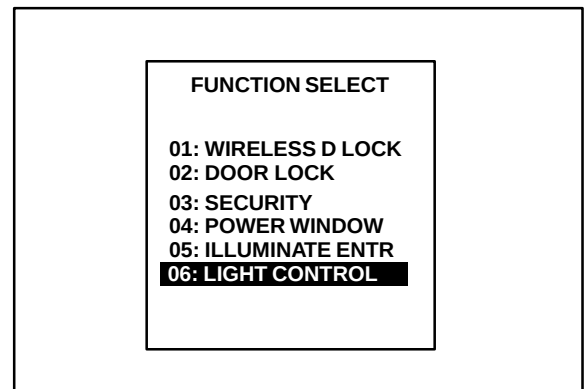

8. In the “ITEM SELECT LIGHT CONTROL” screen, select option 3, “DRL FUNCTION”.

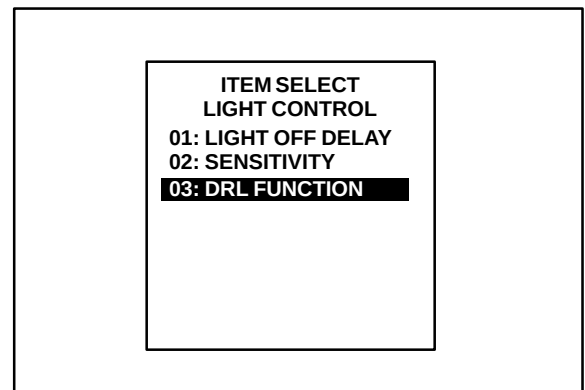

9. In the “CUSTOMIZE DRL FUNCTION” screen, select option 1, “OFF,” and press “ENTER”.

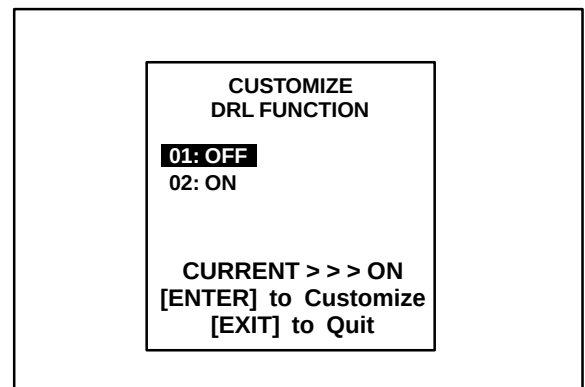

**Activation
Procedure**
(Continued)

10. In the “SETTING CHANGE DRL FUNCTION” screen, press the “YES” button.

**SETTING CHANGE
DRL FUNCTION**

**ARE YOU SURE YOU
WANT TO CHANGE**

From	ON	
To	OFF	?

[YES] to Change
[NO] to Abort

11. Verify that the Daytime Running Lights (DRL) have been deactivated.

**CUSTOMIZE COMPLETE
DRL FUNCTION**

The setting has
been changed to:
ON

Confirm the item
operation is as
desired.

PRESS [ENTER]