

DIAGNOSTIC TROUBLE CODE CHART

HINT:

- If any abnormality is not found when the parts are inspected, inspect the tire pressure monitor ECU.
- If a malfunction code is displayed during the DTC check, inspect the circuit listed for that code. For details of each code, refer to the "See page" under respective "DTC No." in the DTC chart.

DTC chart of Tire Pressure Warning:

DTC No. (See Page)	Detection Item	Trouble Area
C2111/11 (05-882)	Transmitter ID1 operate stop	• Tire pressure monitor valve sub-assy • Tire pressure monitor receiver assy • Tire pressure monitor ECU
C2112/12 (05-882)	Transmitter ID2 operate stop	• Tire pressure monitor valve sub-assy • Tire pressure monitor receiver assy • Tire pressure monitor ECU
C2113/13 (05-882)	Transmitter ID3 operate stop	• Tire pressure monitor valve sub-assy • Tire pressure monitor receiver assy • Tire pressure monitor ECU
C2114/14 (05-882)	Transmitter ID4 operate stop	• Tire pressure monitor valve sub-assy • Tire pressure monitor receiver assy • Tire pressure monitor ECU
C2115/15 (05-882)	Transmitter ID5 operate stop	• Tire pressure monitor valve sub-assy • Tire pressure monitor receiver assy • Tire pressure monitor ECU
C2121/21 (05-887)	Transmitter ID1 not received	• Tire pressure monitor valve sub-assy • Tire pressure monitor receiver assy • Tire pressure monitor ECU
C2122/22 (05-887)	Transmitter ID2 not received	• Tire pressure monitor valve sub-assy • Tire pressure monitor receiver assy • Tire pressure monitor ECU
C2123/23 (05-887)	Transmitter ID3 not received	• Tire pressure monitor valve sub-assy • Tire pressure monitor receiver assy • Tire pressure monitor ECU
C2124/24 (05-887)	Transmitter ID4 not received	• Tire pressure monitor valve sub-assy • Tire pressure monitor receiver assy • Tire pressure monitor ECU
C2125/25 (05-887)	Transmitter ID5 not received	• Tire pressure monitor valve sub-assy • Tire pressure monitor receiver assy • Tire pressure monitor ECU
C2141/41 (05-893)	Transmitter ID1 error	• Tire pressure monitor valve sub-assy • Tire pressure monitor ECU • Tire pressure monitor receiver assy
C2142/42 (05-893)	Transmitter ID2 error	• Tire pressure monitor valve sub-assy • Tire pressure monitor ECU • Tire pressure monitor receiver assy
C2143/43 (05-893)	Transmitter ID3 error	• Tire pressure monitor valve sub-assy • Tire pressure monitor ECU • Tire pressure monitor receiver assy
C2144/44 (05-893)	Transmitter ID4 error	• Tire pressure monitor valve sub-assy • Tire pressure monitor ECU • Tire pressure monitor receiver assy
C2145/45 (05-893)	Transmitter ID5 error	• Tire pressure monitor valve sub-assy • Tire pressure monitor ECU • Tire pressure monitor receiver assy
C2165/65 (05-896)	Abnormal temperature inside ID1 tire	• Tire pressure monitor valve sub-assy • Tire pressure monitor ECU • Tire pressure monitor receiver assy

DIAGNOSTICS – TIRE PRESSURE WARNING SYSTEM

C2166/66 (05-896)	Abnormal temperature inside ID2 tire	• Tire pressure monitor valve sub-assy • Tire pressure monitor ECU • Tire pressure monitor receiver assy
C2167/67 (05-896)	Abnormal temperature inside ID3 tire	• Tire pressure monitor valve sub-assy • Tire pressure monitor ECU • Tire pressure monitor receiver assy
C2168/68 (05-896)	Abnormal temperature inside ID4 tire	• Tire pressure monitor valve sub-assy • Tire pressure monitor ECU • Tire pressure monitor receiver assy
C2169/69 (05-896)	Abnormal temperature inside ID5 tire	• Tire pressure monitor valve sub-assy • Tire pressure monitor ECU • Tire pressure monitor receiver assy
C2171/71 (05-899)	Transmitter ID not registered	Tire pressure monitor ECU
C2176/76 (05-900)	Receiver error	• Tire pressure monitor receiver assy • Tire pressure monitor ECU