




Power Source

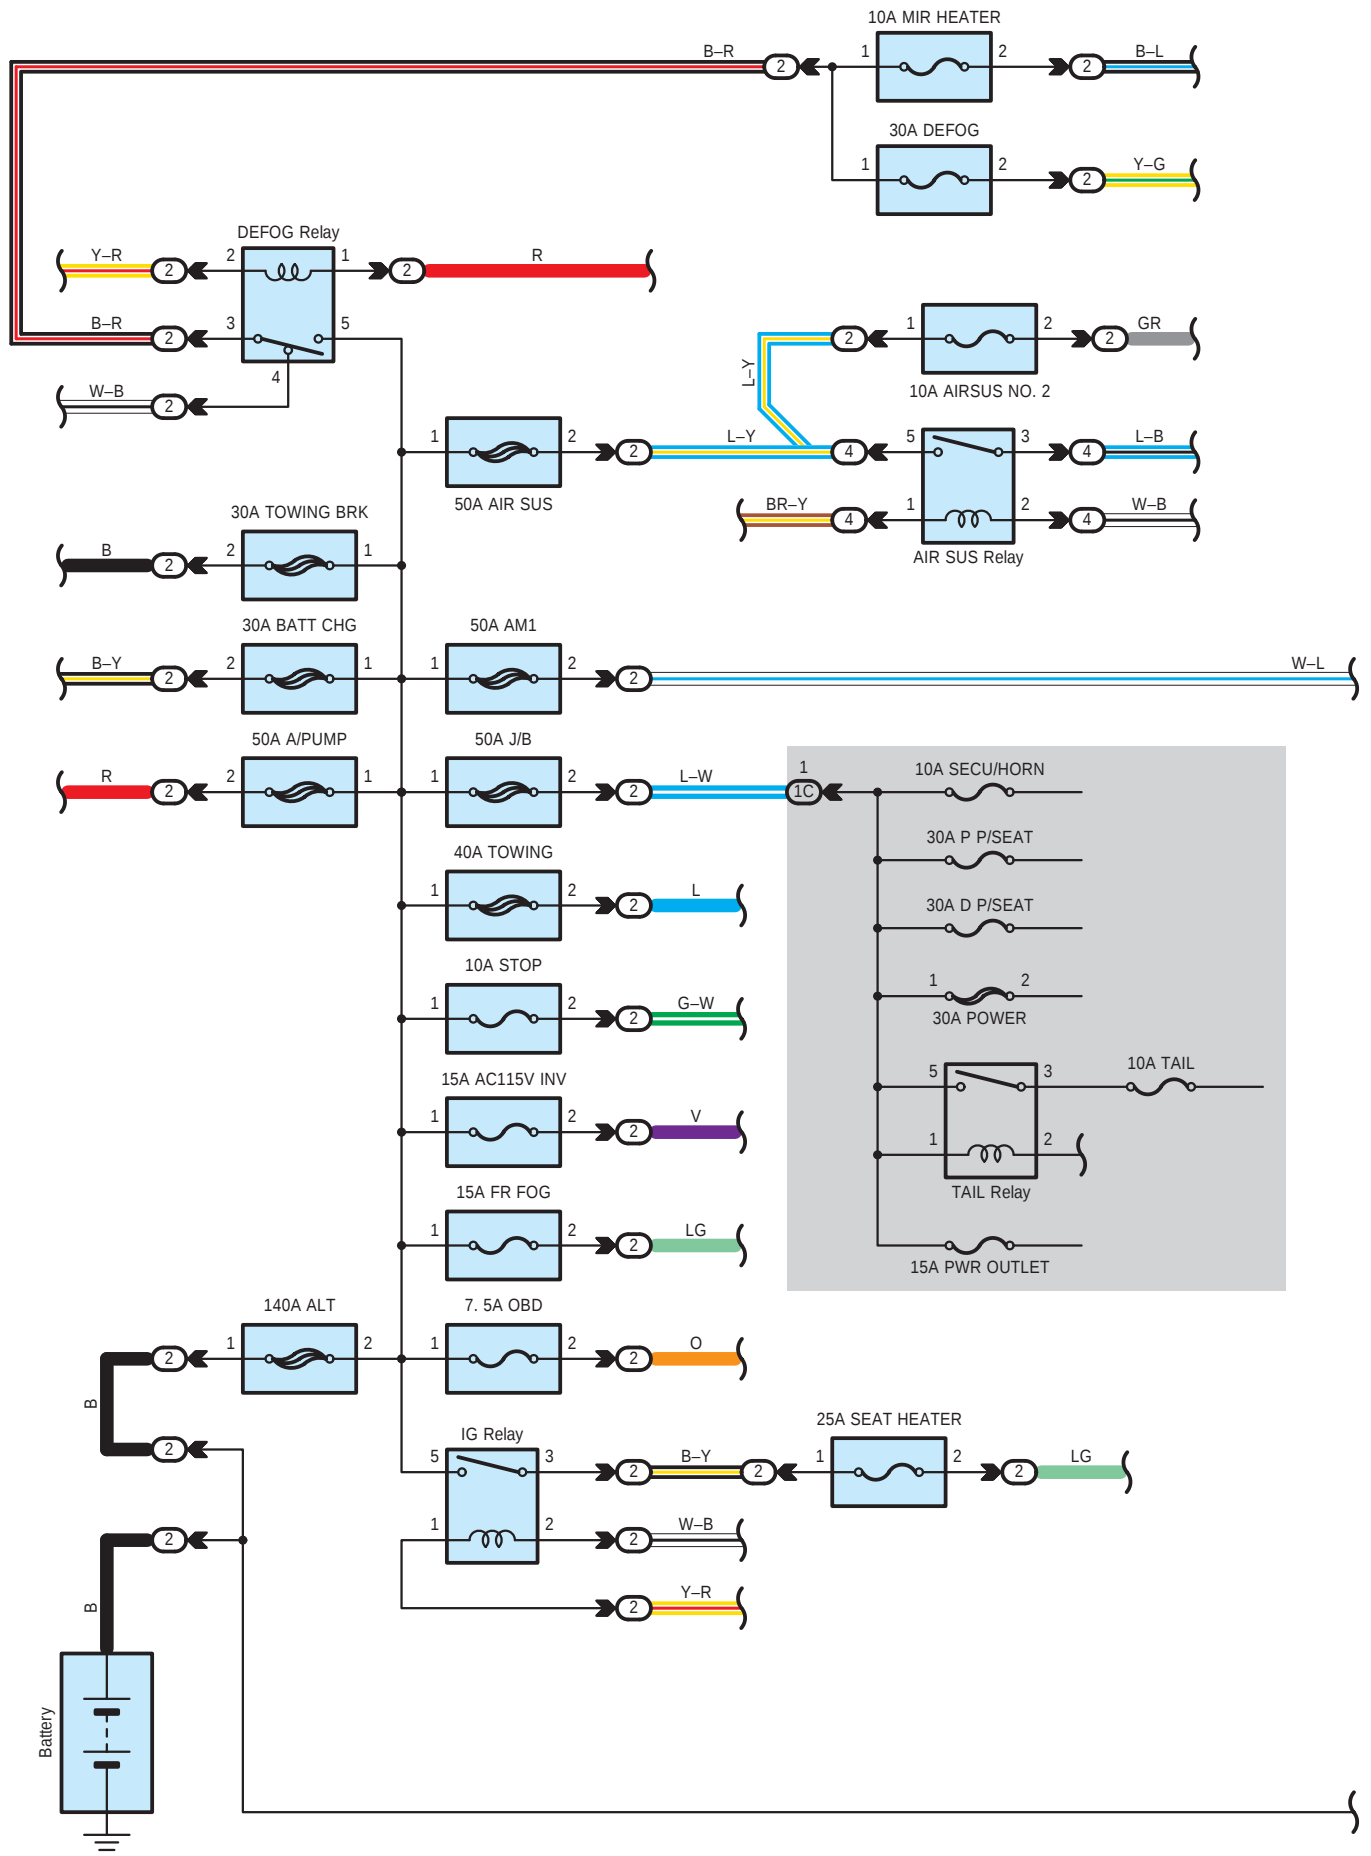

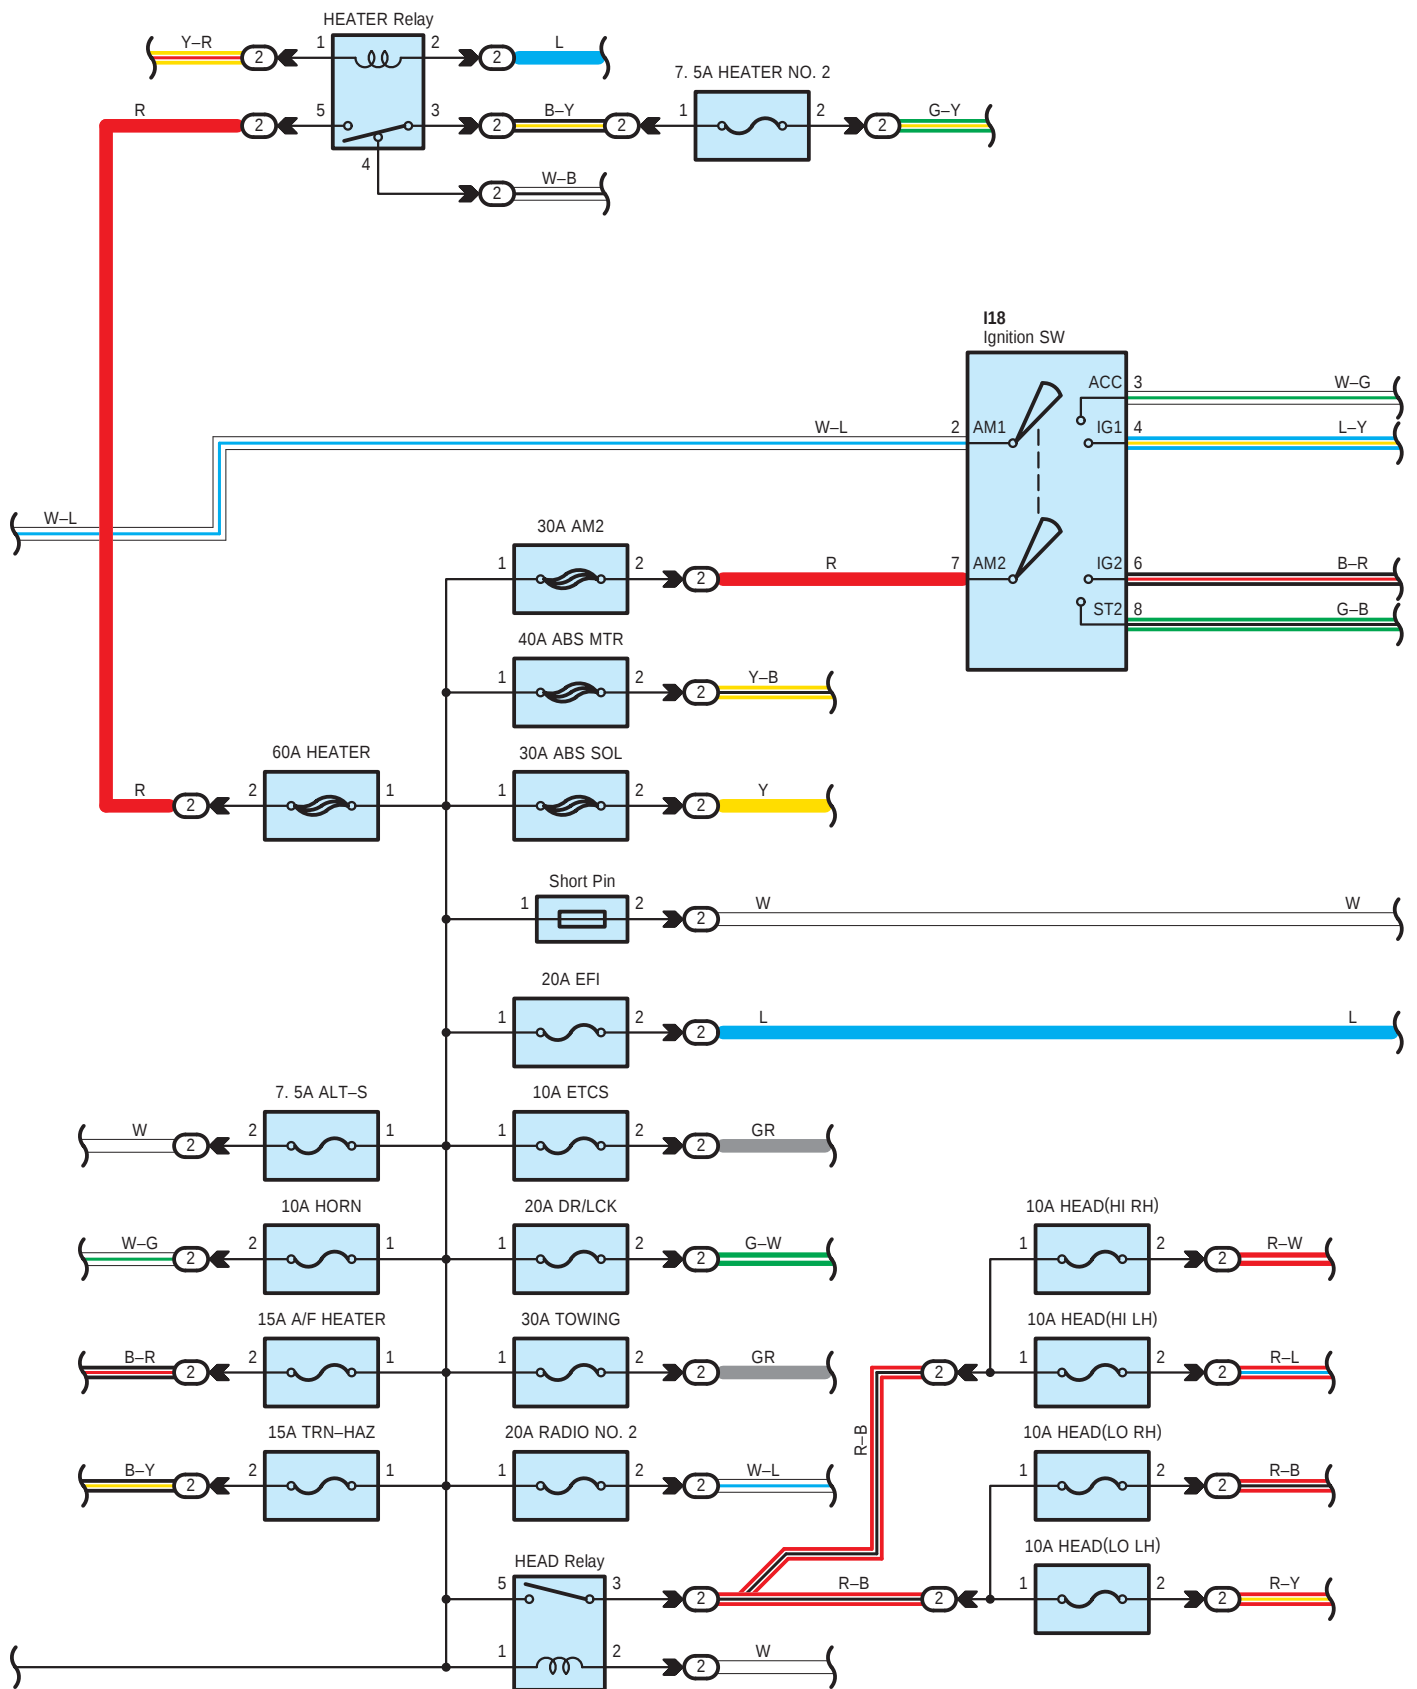

Power Source

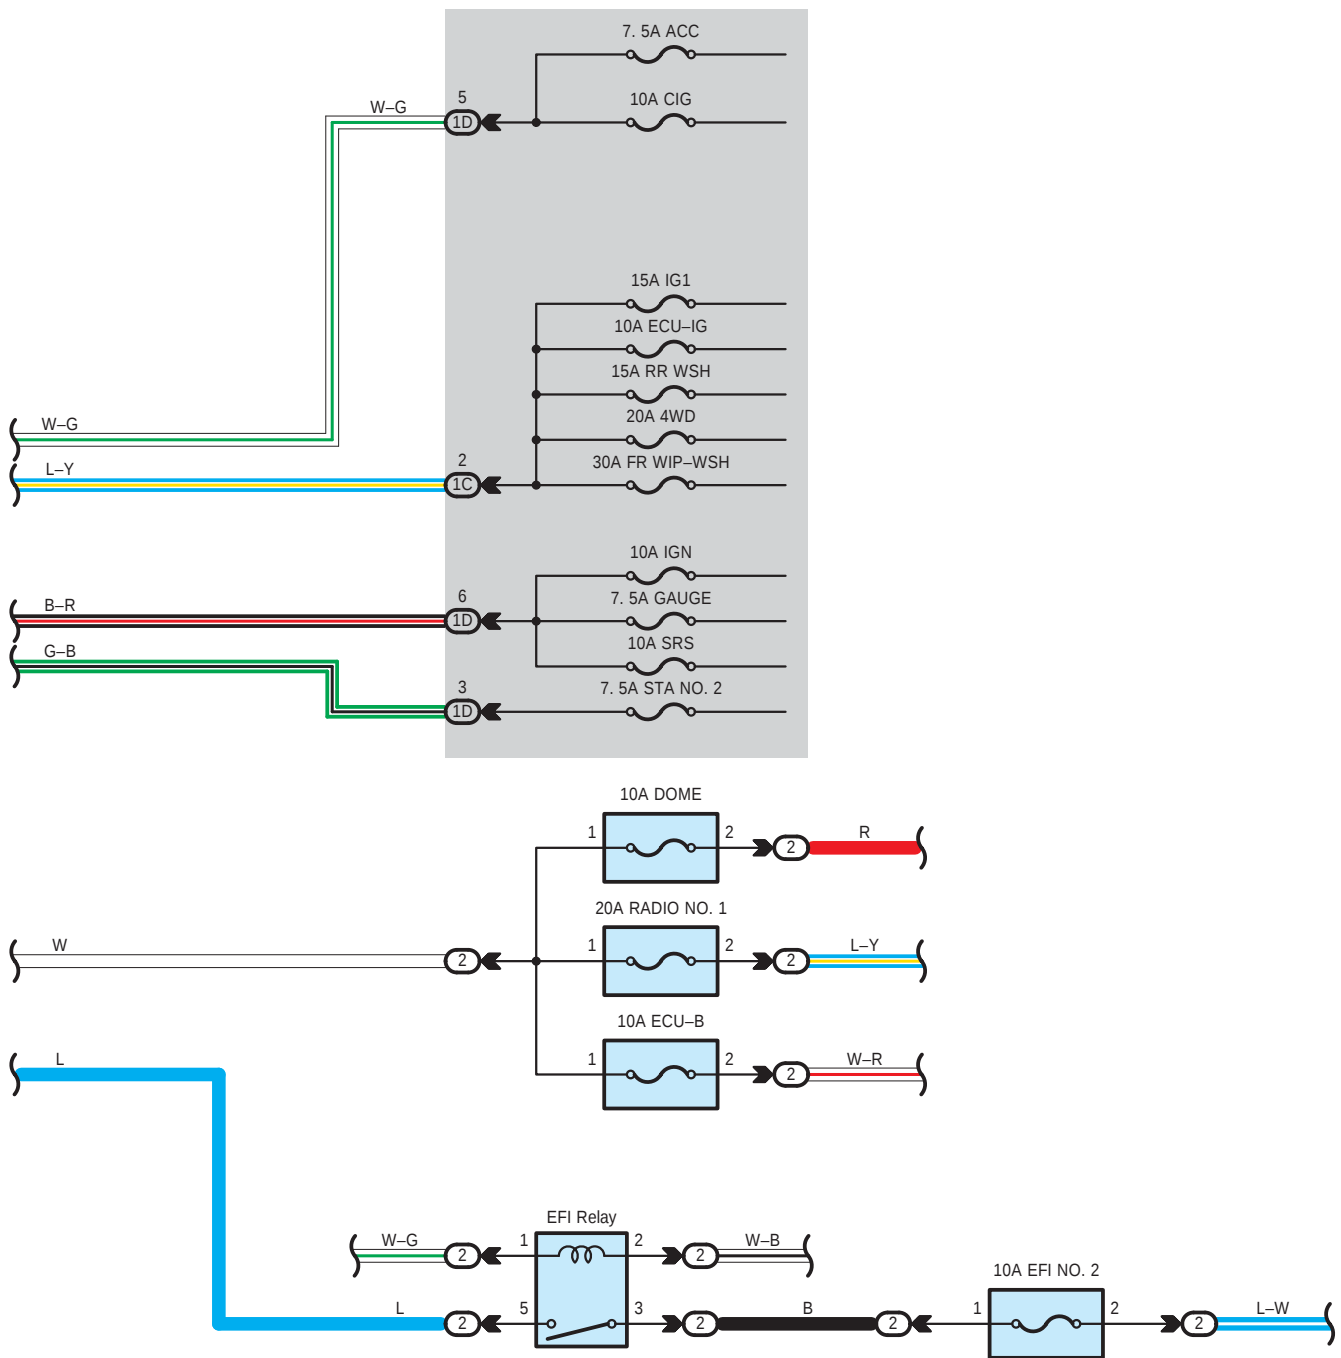

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
I18	37				

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)
4	23	Engine Room R/B No.4 (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1D		