




I GROUND POINT

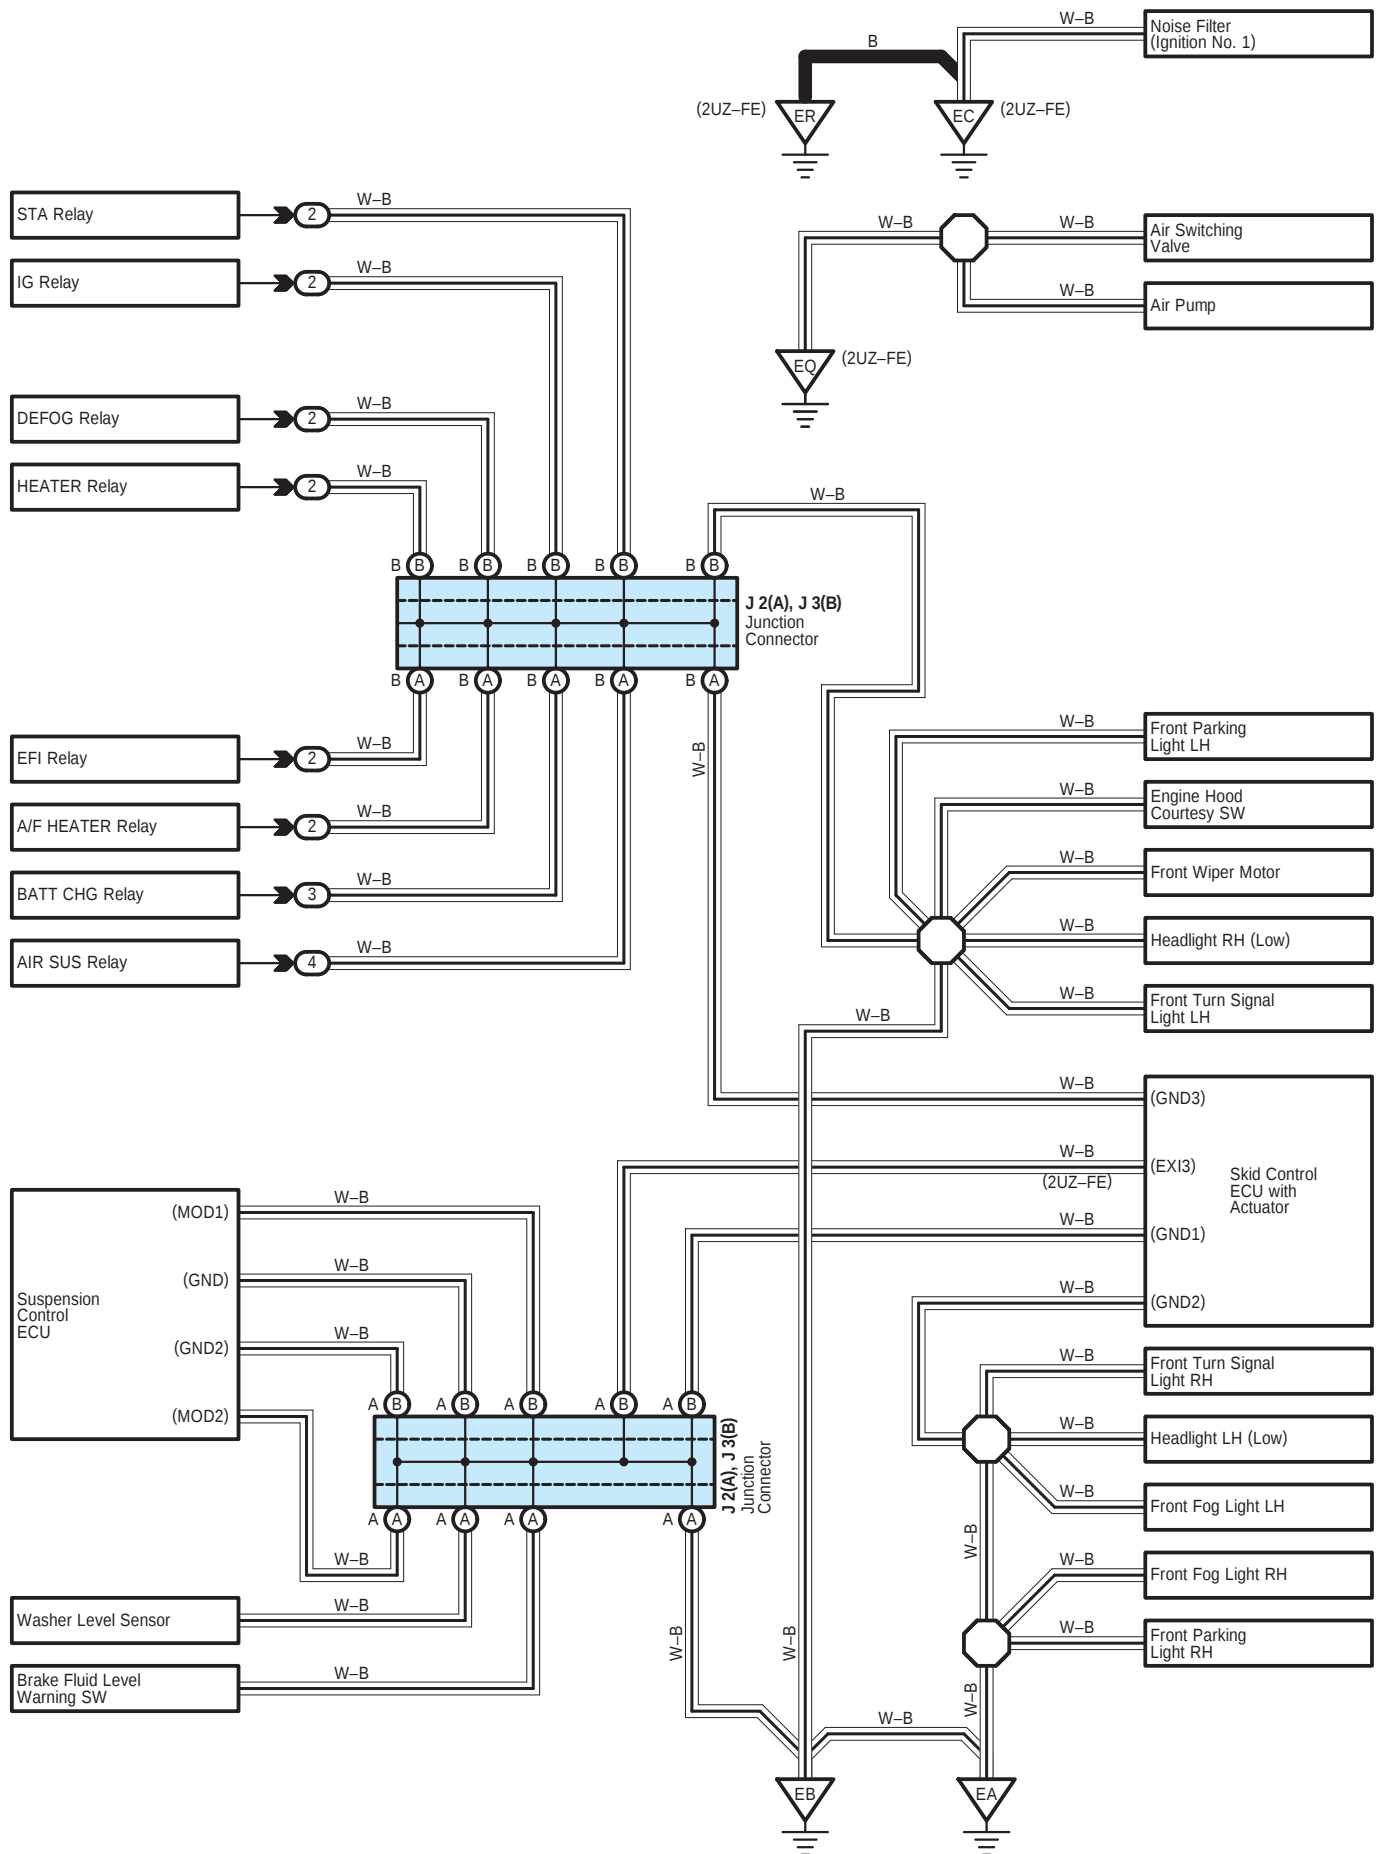


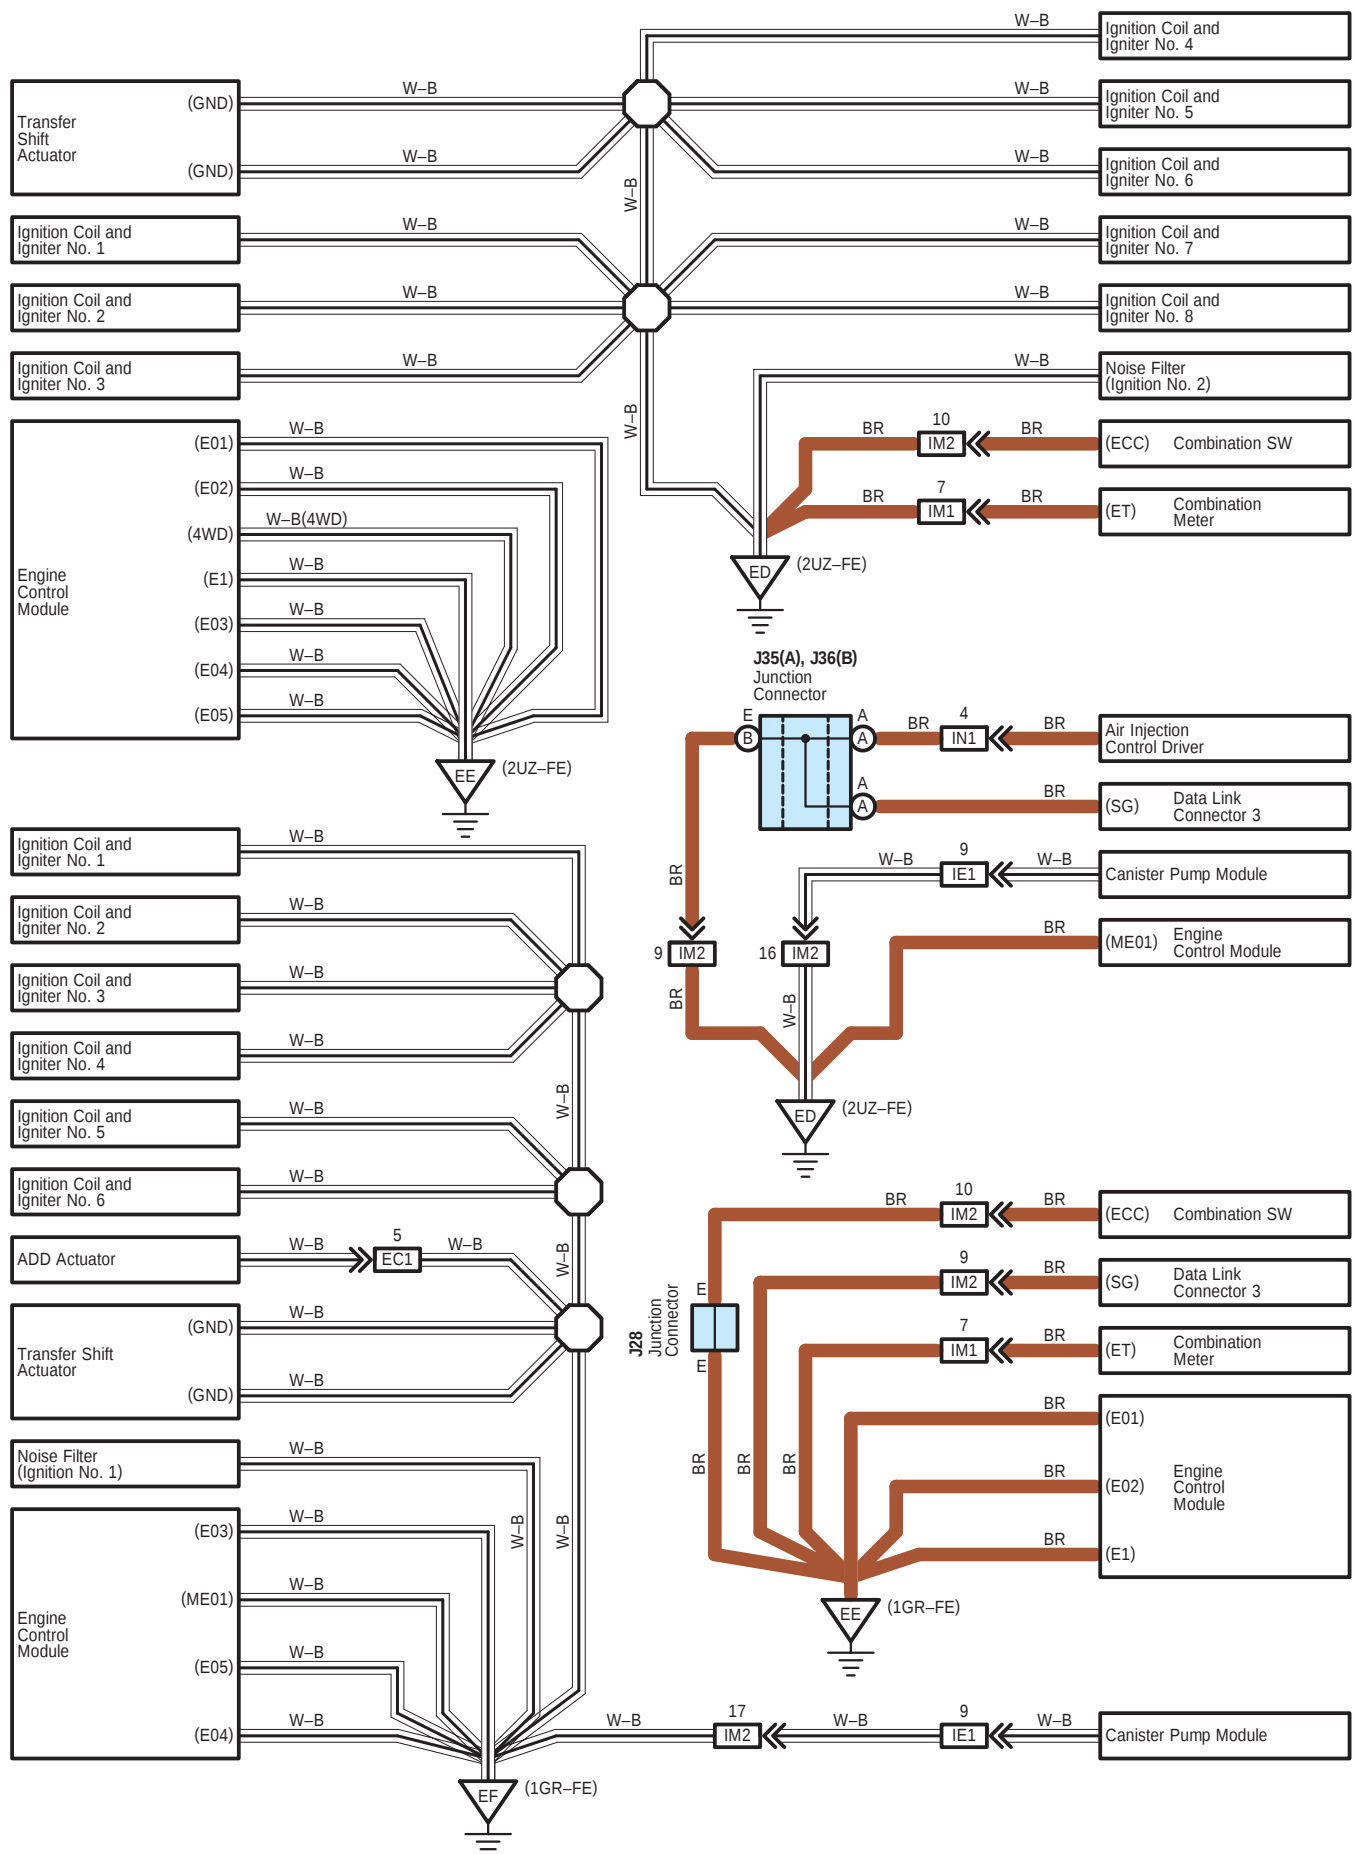


I GROUND POINT

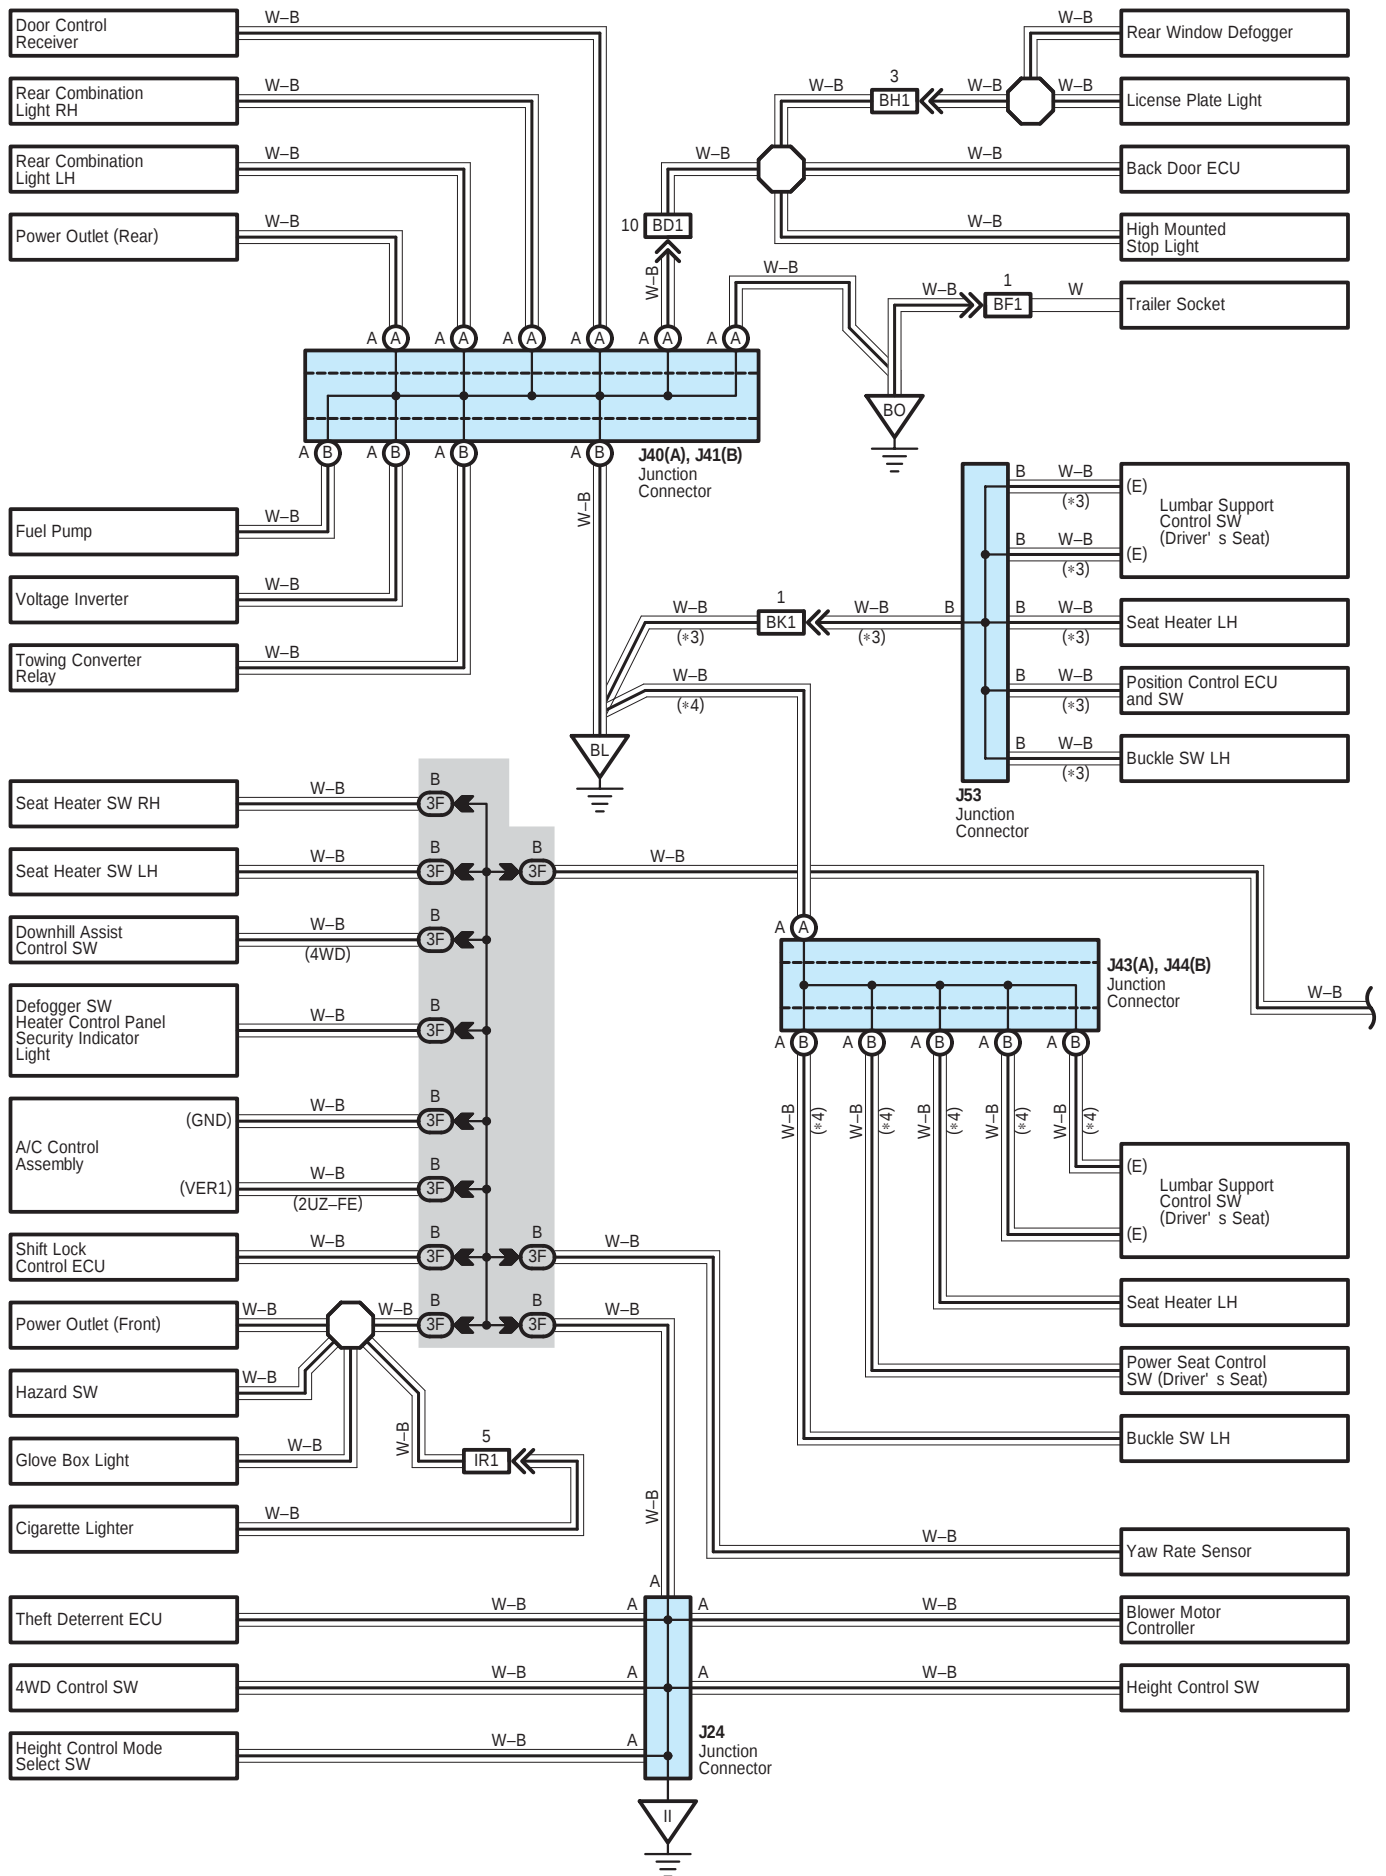

- * 1 : w/ Daytime Running Light
- * 2 : w/o Daytime Running Light
- * 3 : w/ Driving Position Memory
- * 4 : w/o Driving Position Memory

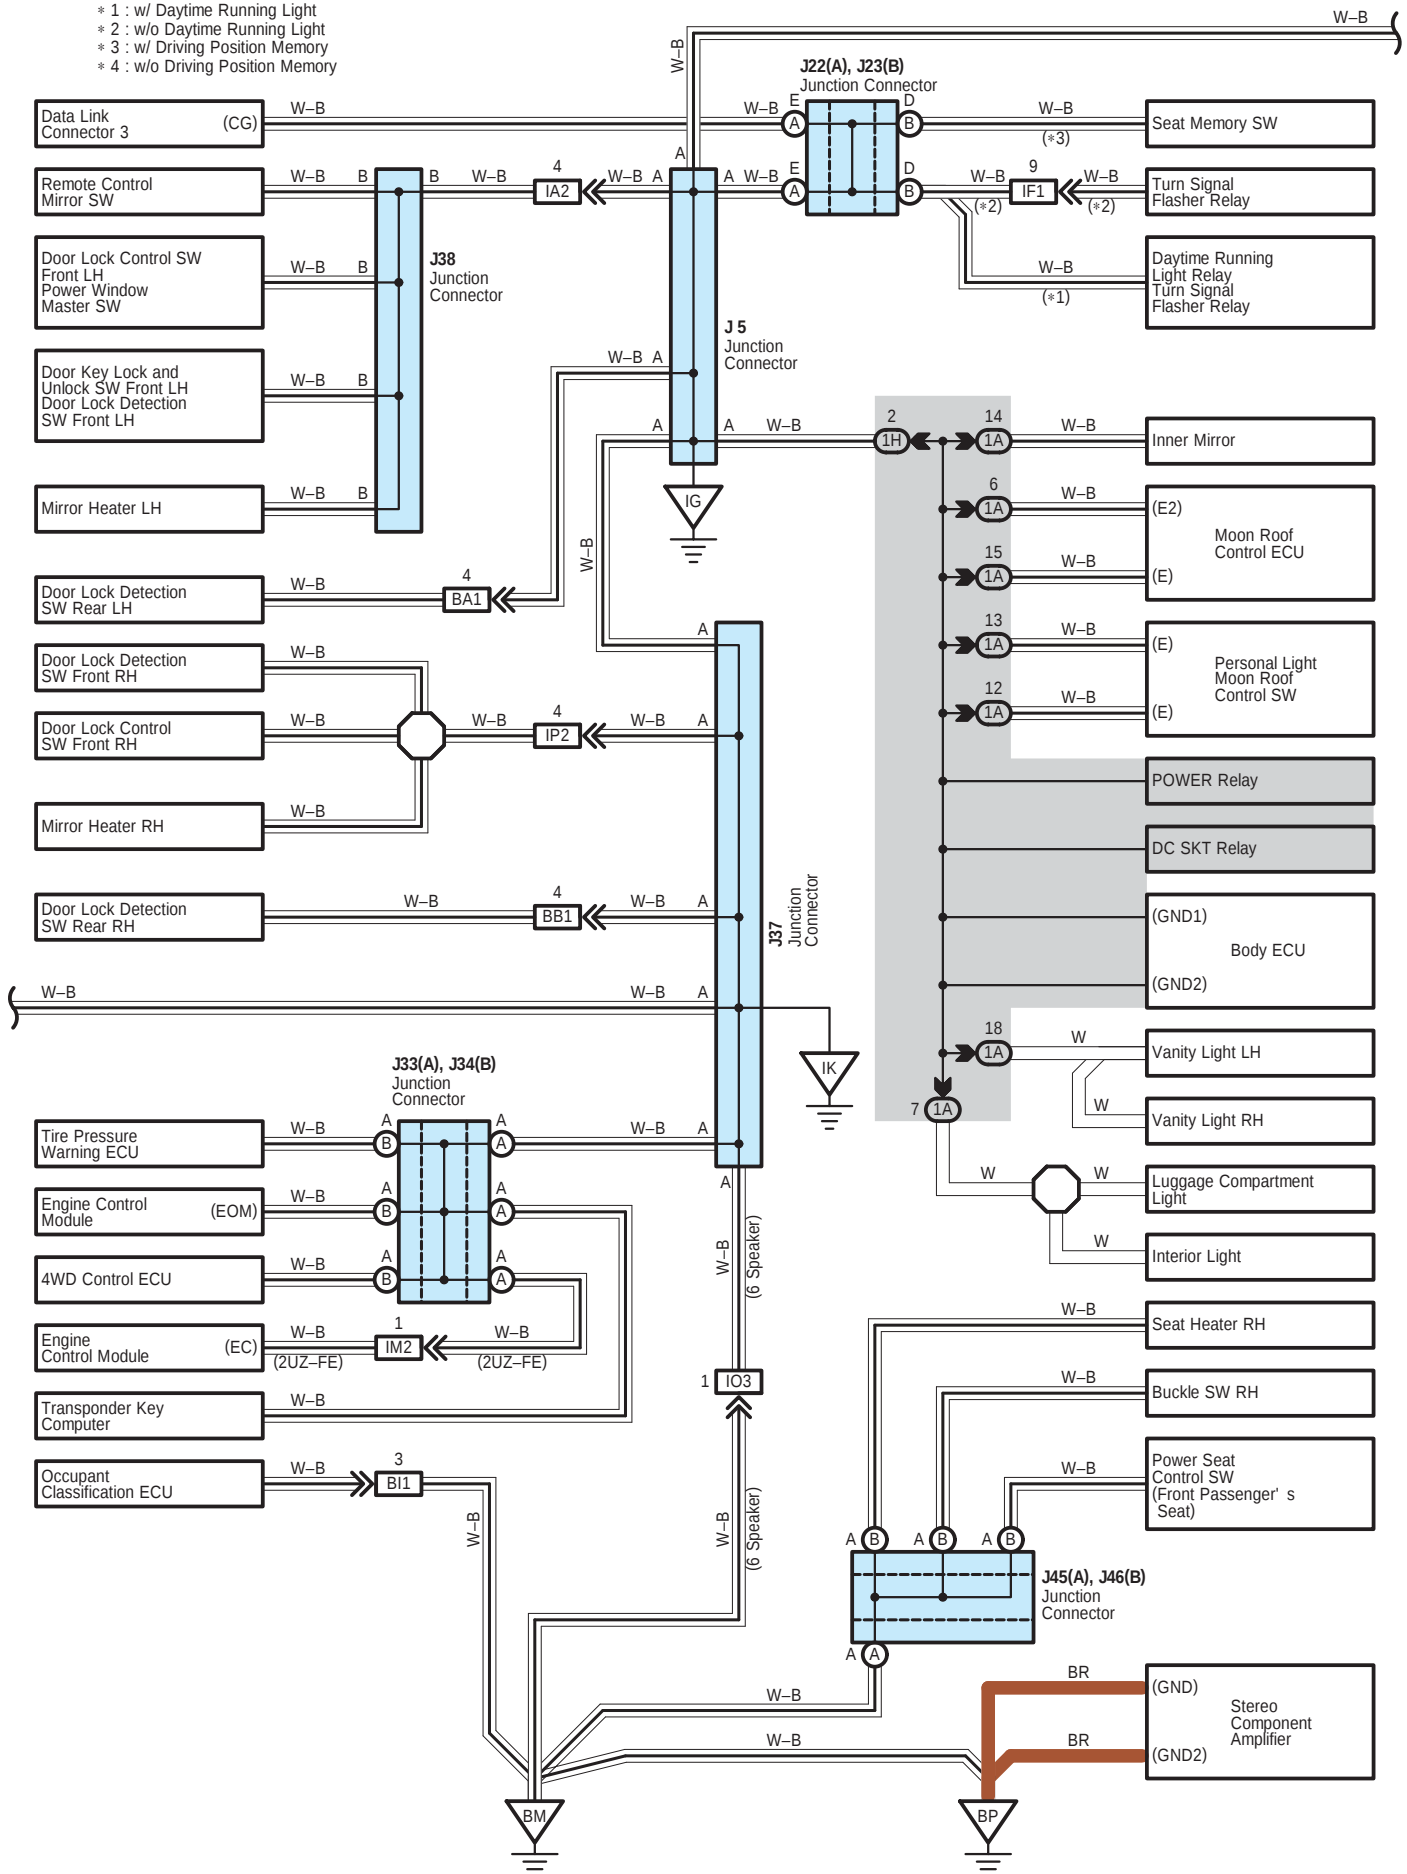

I GROUND POINT

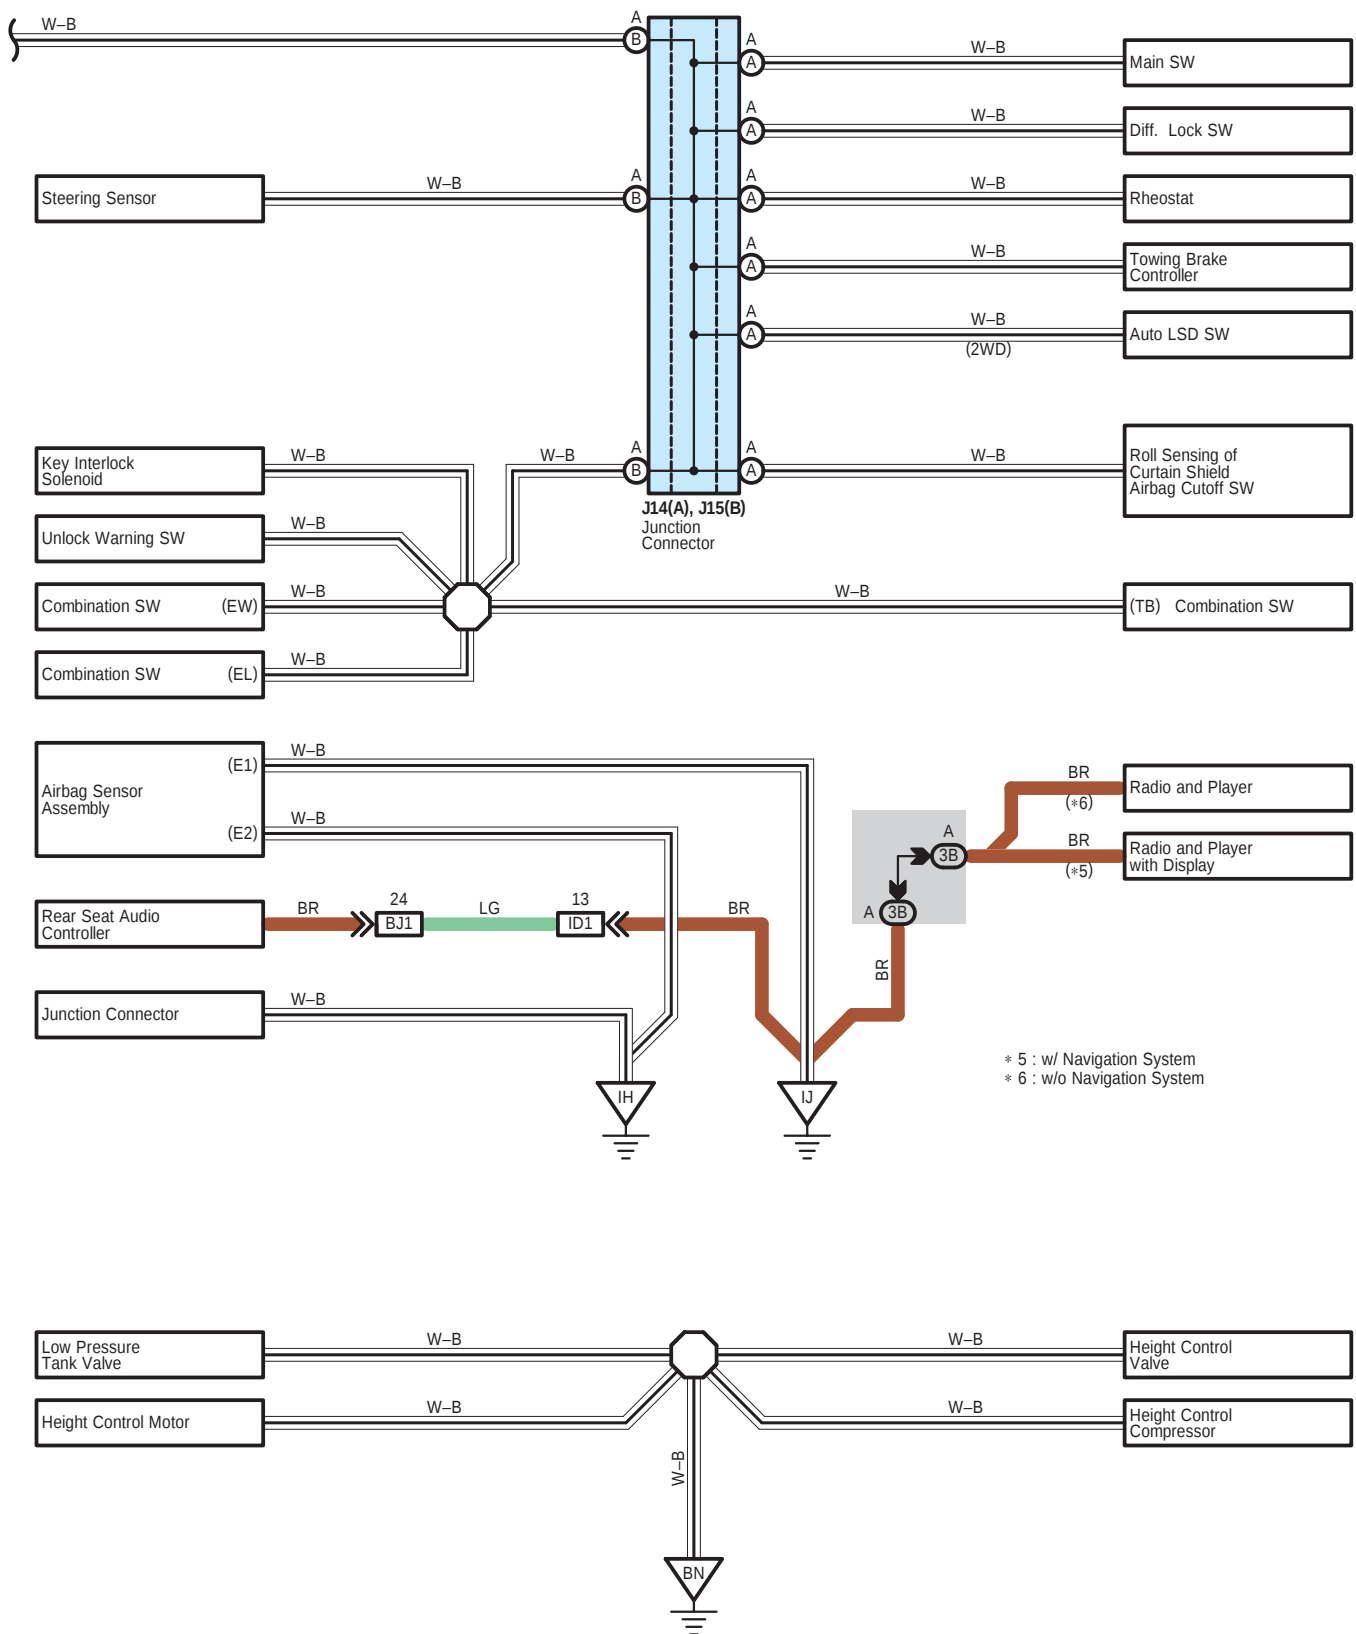

 : Parts Location

Code		See Page	Code		See Page	Code		See Page
J2	A	33 (2UZ–FE)	J28		38	J43	A	43 (*2)
		35 (1GR–FE)	J33	A	38	J44	B	42 (*1)
J3	B	33 (2UZ–FE)	J34	B	38			J45
		35 (1GR–FE)	J35	A	38	42 (*1)		
J5		38	J36	B	38	43 (*2)		
J14	A	38	J37		38	J46	B	42 (*1)
J15	B	38	J38		40			43 (*2)
J22	A	38	J40	A	40	J53		42 (*1)
J23	B	38	J41	B	40			
J24		38	J43	A	42 (*1)			

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)
3	23	Engine Room R/B No.3 (Engine Compartment Left)
4	23	Engine Room R/B No.4 (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Roof Wire and Driver Side J/B (Lower Finish Panel)
1H	25	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
3B	28	Instrument Panel Wire and Center J/B (Instrument Panel Brace RH)
3F		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EC1	45 (1GR-FE)	Engine Wire and Differential Wire (Near the Front Differential)
IA2	46	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
ID1	46	Radio Installation Wiring Sub Assembly and Instrument Panel Wire (Left Kick Panel)
IE1	46	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
IF1	46	Instrument Panel Wire and Relay Wire (Behind the Instrument Panel J/B)
IM1	47	Engine Wire and Instrument Panel Wire (Right Side of Blower Unit)
IM2		
IN1	47	Instrument Panel Wire and Engine Room Main Wire (Right Kick Panel)
IO3	47	Instrument Panel Wire and Floor Wire (Right Kick Panel)
IP2	47	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IR1	47	Instrument Panel Wire and Cigarette Lighter Wiring Assembly (Rear Console)
BA1	48	Rear Door No.2 Wire and Instrument Panel Wire (Left Center Pillar)
BB1	48	Rear Door No.1 Wire and Instrument Panel Wire (Right Center Pillar)
BD1	48	Back Door No.1 Wire and Floor No.2 Wire (Left Rear Side of Roof)
BF1	48	Frame No.3 Wire and Floor No.2 Wire (Rear Side of Side Frame LH)
BH1	48	Back Door No.1 Wire and Back Door No.2 Wire (Left Side of Back Door)
BI1	50 (*1)	Floor Wire and Seat No.1 Wire (Under the Front RH Seat)
	51 (*2)	
BJ1	48	Radio Installation Wiring Sub Assembly and Radio Installation Wiring Sub Assembly (Center of Roof)
BK1	50 (*1)	Floor No.2 Wire and Seat No.2 Wire (Under the Front LH Seat)

* 1 : Power Seat * 2 : Manual Seat

I GROUND POINT



: Ground Points

Code	See Page	Ground Points Location
EA	44 (2UZ-FE)	Front Right Fender
	45 (1GR-FE)	
EB	44 (2UZ-FE)	Front Left Fender
	45 (1GR-FE)	
EC	44 (2UZ-FE)	Right Bank Cylinder Head
ED	44 (2UZ-FE)	Left Bank Cylinder Head
EE	44 (2UZ-FE)	Rear Side of Cylinder Block
	45 (1GR-FE)	Rear Side of Right Bank Cylinder Block
EF	45 (1GR-FE)	Rear Side of Left Bank Cylinder Block
EQ	44 (2UZ-FE)	Near the Starter
ER	44 (2UZ-FE)	Rear Side of Front Right Fender
IG	46	Left Kick Panel
IH	46	Instrument Panel Brace LH
II	46	Instrument Panel Brace RH
IJ		
IK	46	Right Kick Panel
BL	48	Floor Seat Crossmember LH
BM	48	Floor Seat Crossmember RH
BN	48	Near the No.5 Crossmember of Side Frame LH
BO	48	Rear Pillar LH
BP	48	Rear Pillar RH

