



Seat Belt Warning

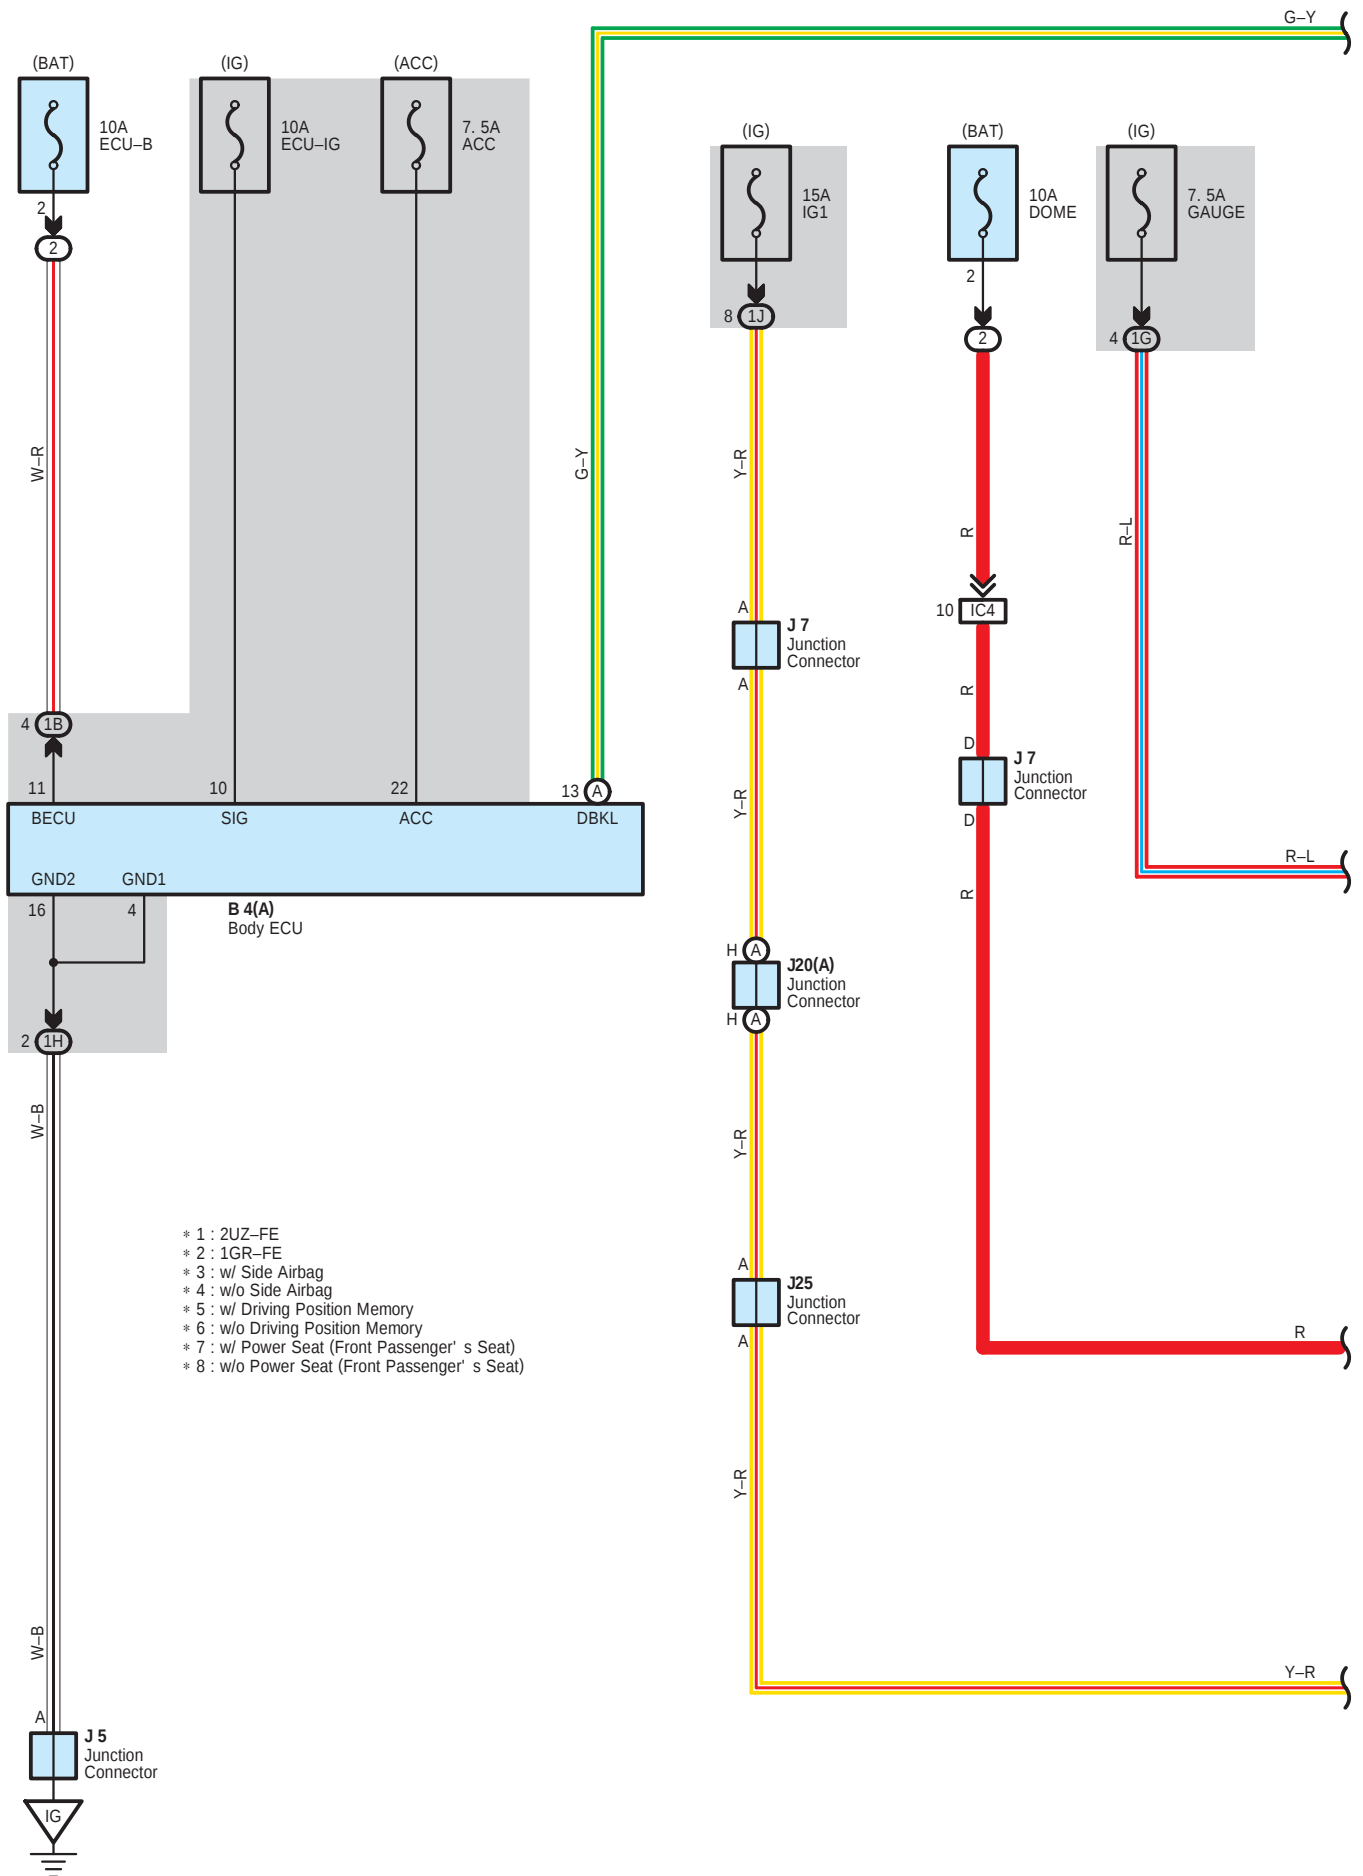

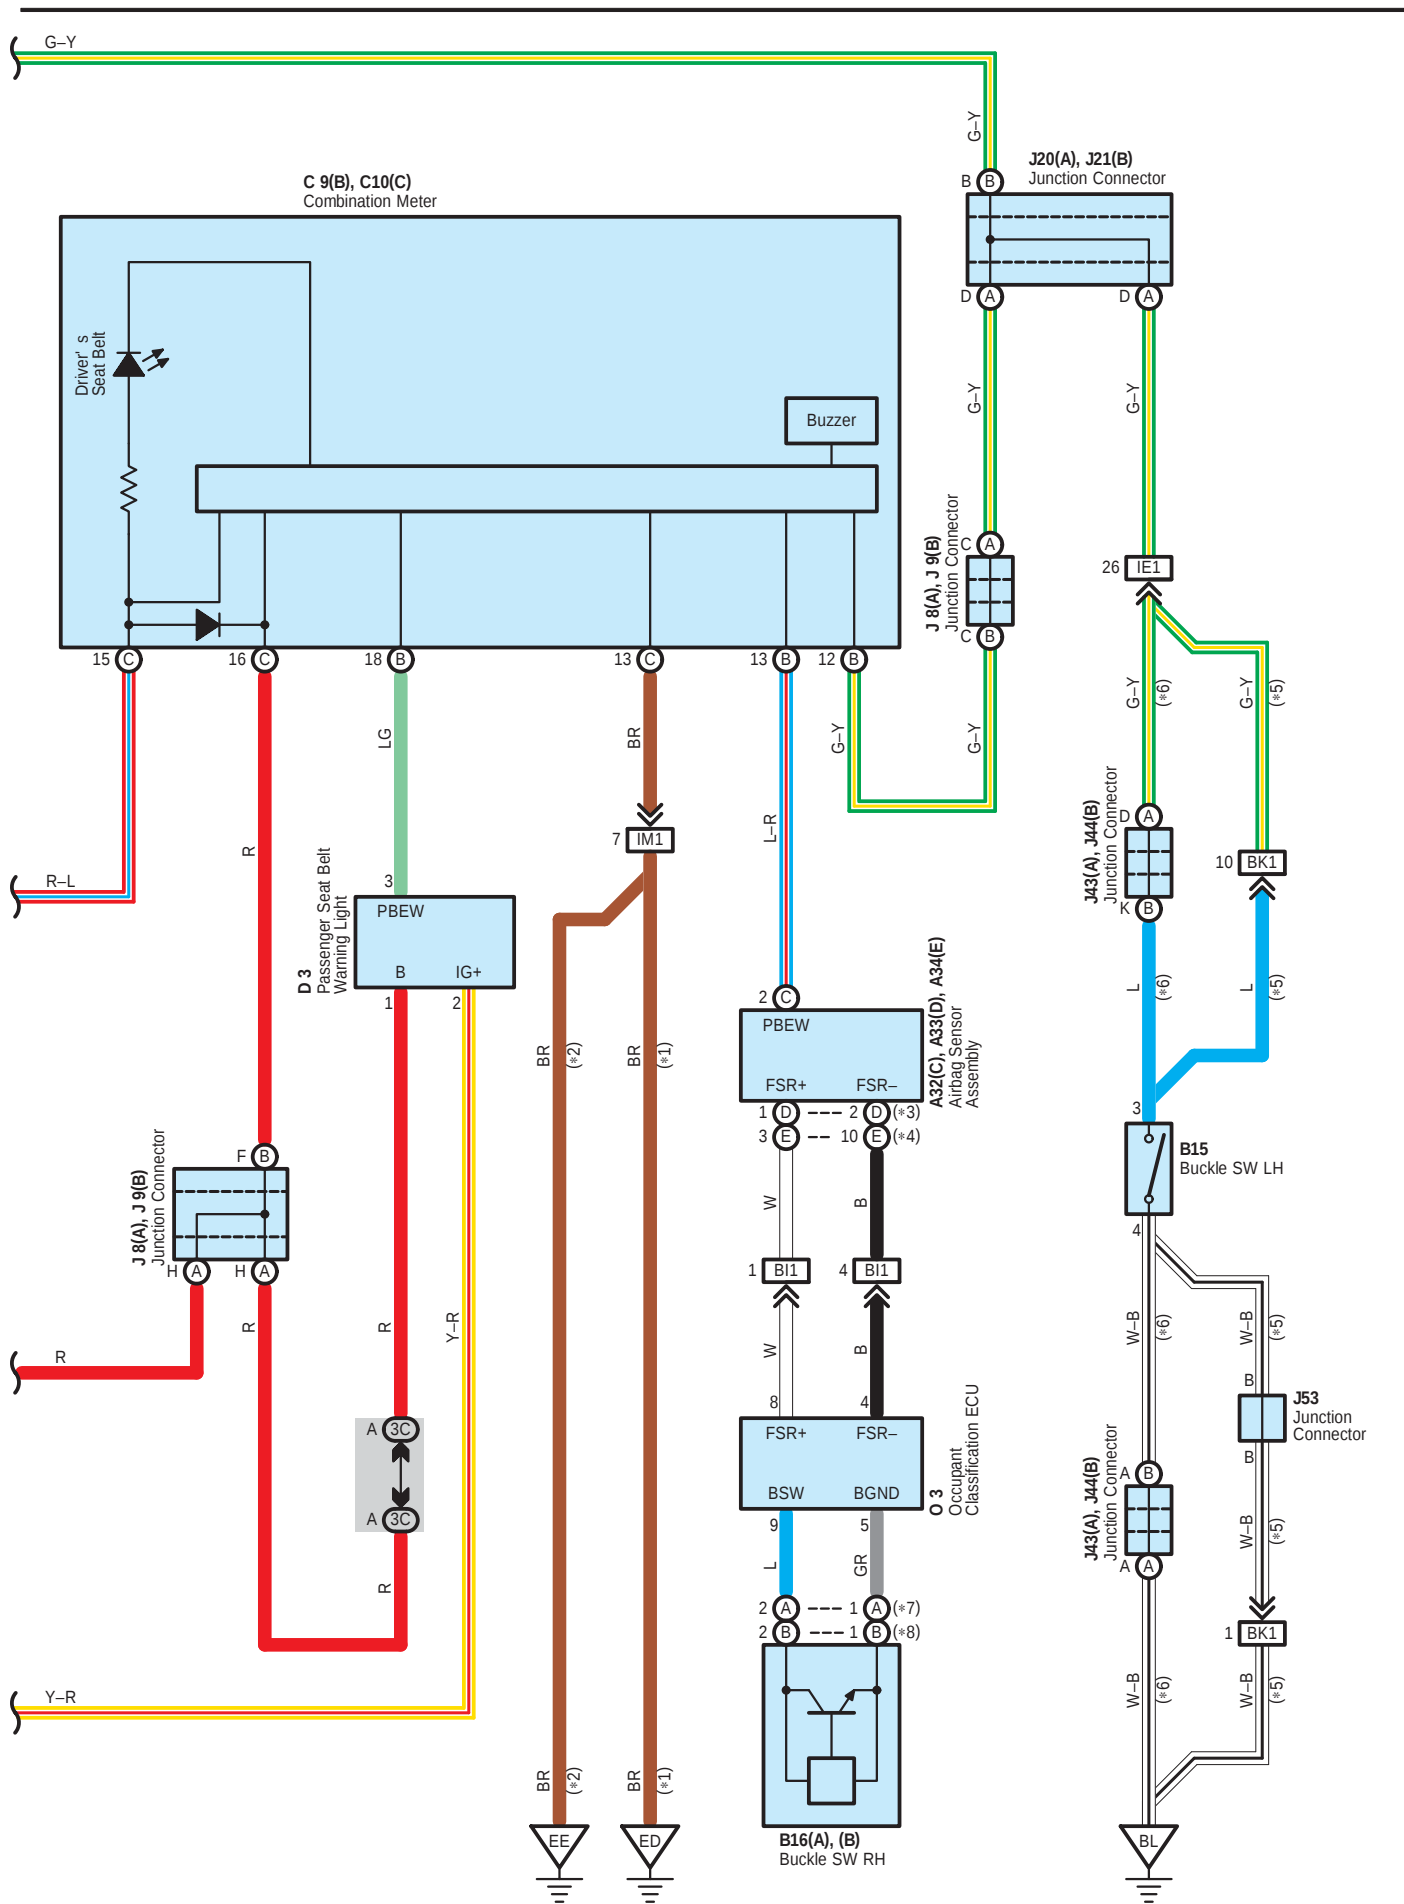

Seat Belt Warning

System Outline

When the driver has not fastened the seat belt while the ignition SW is ON, the driver seat belt warning light blinks, and a warning buzzer comes on.
Also, in the front passenger seat, a sensor recognizes passenger, and when the passenger has not fastened the seat belt, the front passenger seat belt warning light blinks.

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
A32	C	36	B16	B	43 (*2)	J21	B	38
A33	D	36	C9	B	37	J25		38
A34	E	36	C10	C	37	J43	A	42 (*1)
B4	A	36	D3		37			43 (*2)
B15		42 (*1)	J5		38	J44	B	42 (*1)
		43 (*2)	J7		38			43 (*2)
B16	A	42 (*1)	J8	A	38	J53		42 (*1)
		43 (*2)	J9	B	38	O3	42 (*1)	
	B	42 (*1)	J20	A	38		43 (*2)	

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1G	25	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1H		
1J		
3C	28	Instrument Panel Wire and Center J/B (Instrument Panel Brace RH)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC4	46	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
IE1	46	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
IM1	47	Engine Wire and Instrument Panel Wire (Right Side of Blower Unit)
BI1	50 (*1)	Floor Wire and Seat No.1 Wire (Under the Front RH Seat)
	51 (*2)	
BK1	50 (*1)	Floor No.2 Wire and Seat No.2 Wire (Under the Front LH Seat)

▽ : Ground Points

Code	See Page	Ground Points Location
ED	44 (2UZ-FE)	Left Bank Cylinder Head
EE	44 (2UZ-FE)	Rear Side of Cylinder Block
	45 (1GR-FE)	Rear Side of Right Bank Cylinder Block
IG	46	Left Kick Panel
BL	48	Floor Seat Crossmember LH

* 1 : Power Seat * 2 : Manual Seat

