


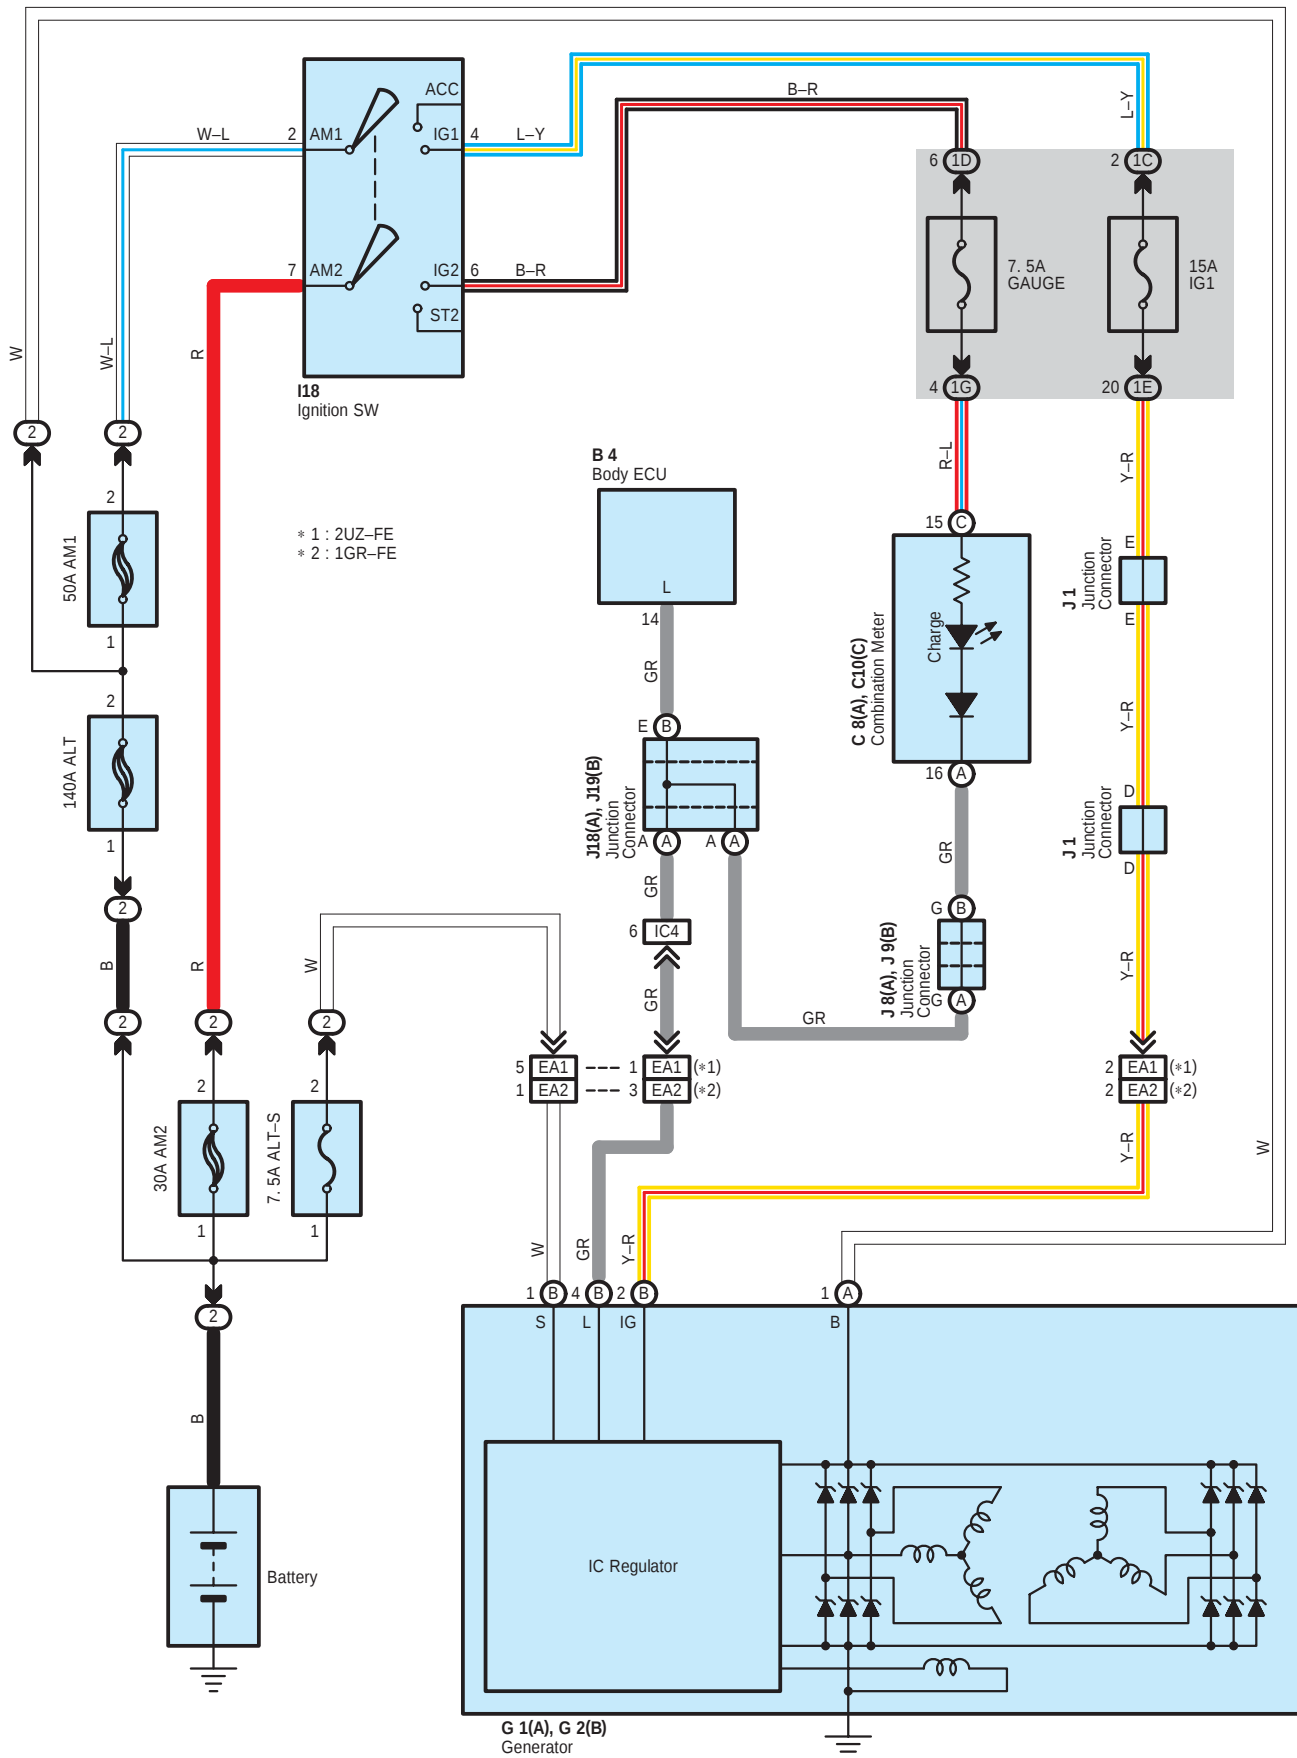

☐ : Parts Location

Code		See Page	Code		See Page	Code		See Page
B4		36	G2	B	32 (2UZ–FE)	J8	A	38
C8	A	37			34 (1GR–FE)	J9	B	38
C10	C	37	I18		37	J18	A	38
G1	A	32 (2UZ–FE)	J1		33 (2UZ–FE)	J19	B	38
		34 (1GR–FE)			35 (1GR–FE)			

☐ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

☐ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1D		
1E		
1G	25	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)

☐ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	44 (2UZ-FE)	Engine No.2 Wire and Engine Room Main Wire (Under the Engine Room R/B)
EA2	45 (1GR-FE)	
IC4	46	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)