


Electric Tension Reducer

* 1 : w/ Driving Position Memory
 * 2 : w/o Driving Position Memory

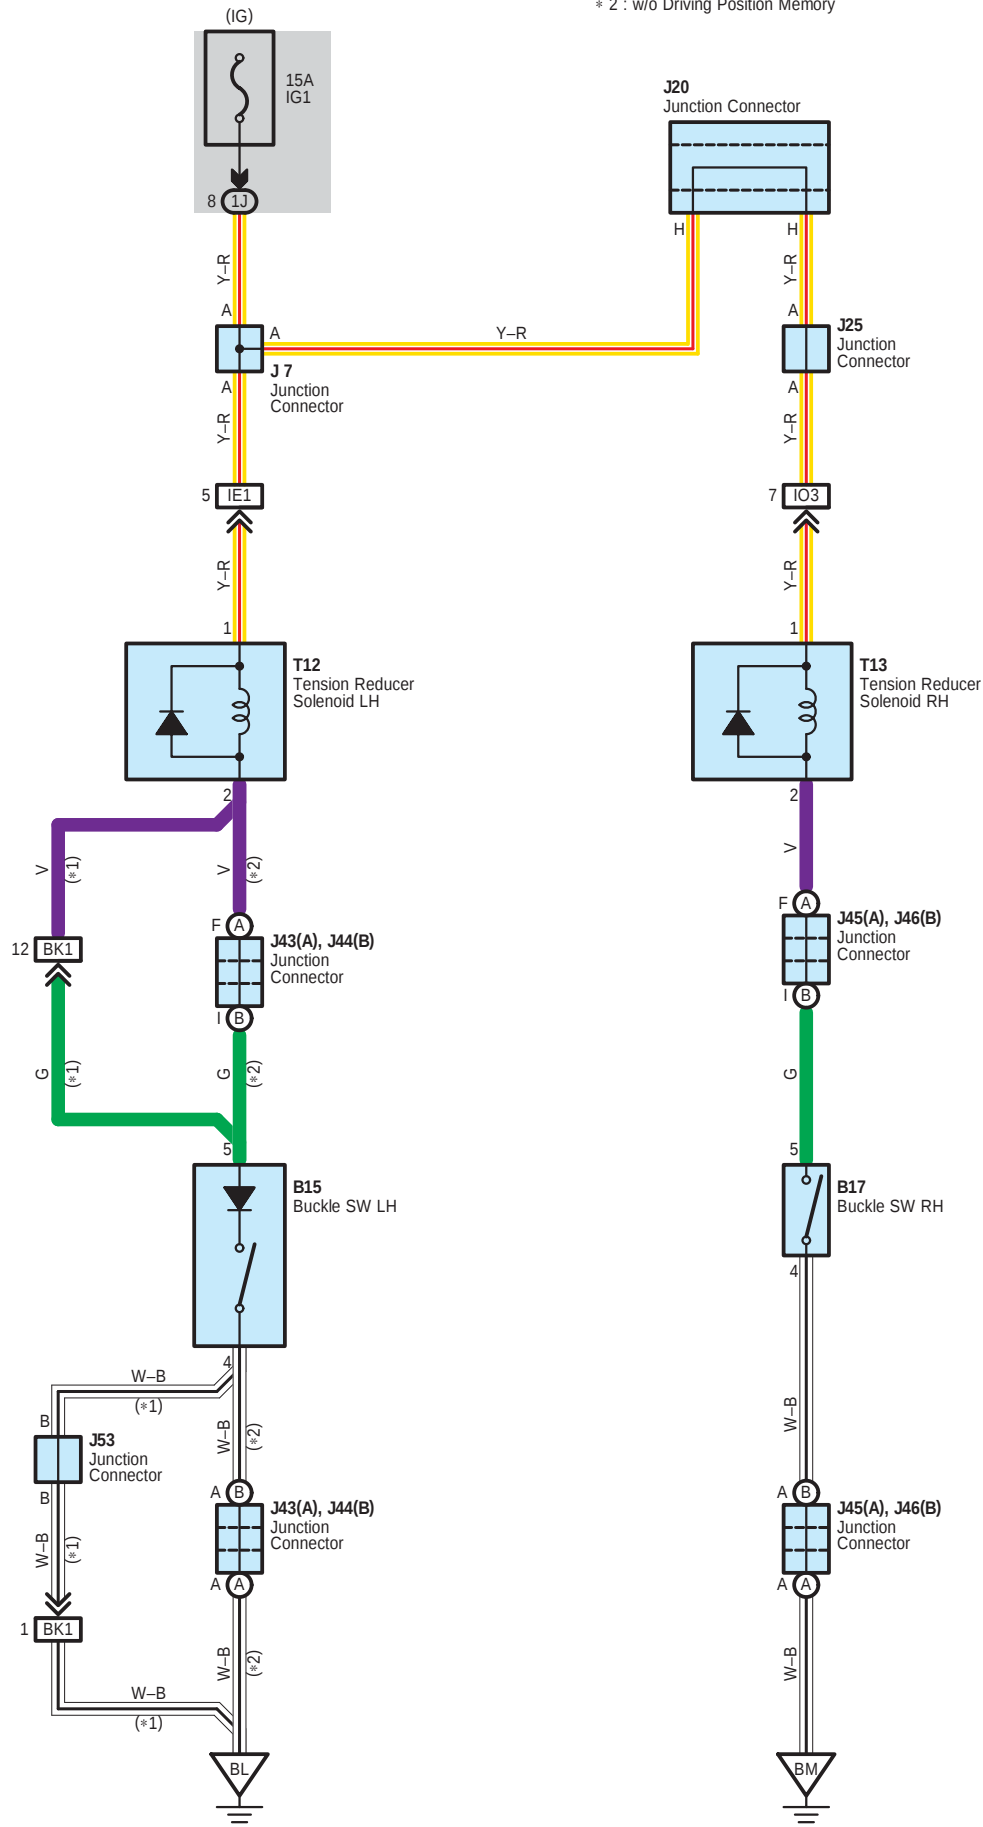

 : Parts Location

Code	See Page	Code	See Page	Code	See Page
B15	42 (*1)	J25		38	J45 A 43 (*2)
	43 (*2)	J43	A	42 (*1)	J46 B 42 (*1)
B17	42 (*1)			43 (*2)	
	43 (*2)	J44	B	42 (*1)	J53 42 (*1)
J7	38			43 (*2)	T12 41
J20	38	J45	A	42 (*1)	T13 41

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1J	25	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	46	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
IO3	47	Instrument Panel Wire and Floor Wire (Right Kick Panel)
BK1	50 (*1)	Floor No.2 Wire and Seat No.2 Wire (Under the Front LH Seat)

 : Ground Points

Code	See Page	Ground Points Location
BL	48	Floor Seat Crossmember LH
BM	48	Floor Seat Crossmember RH

* 1 : Power Seat * 2 : Manual Seat