



Power Seat for Driver's Seat with Memory

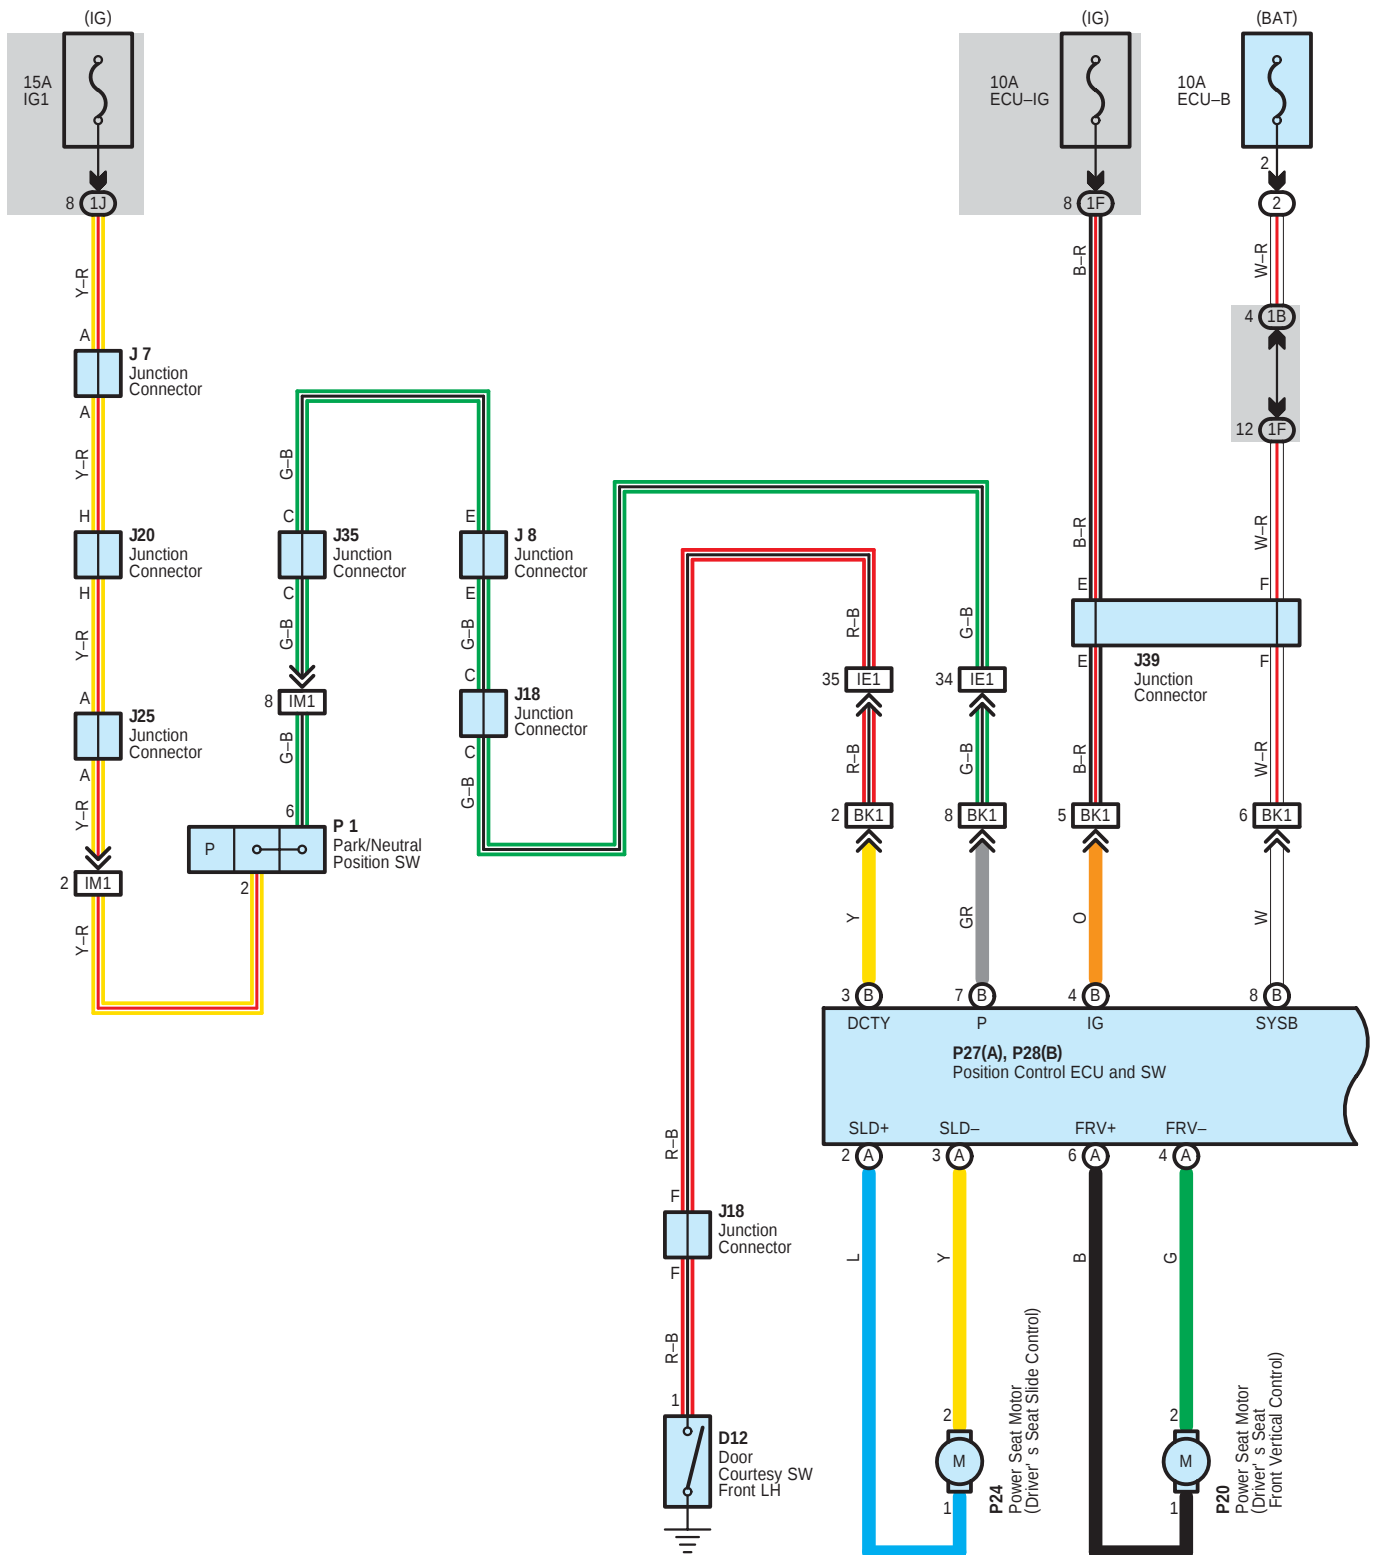

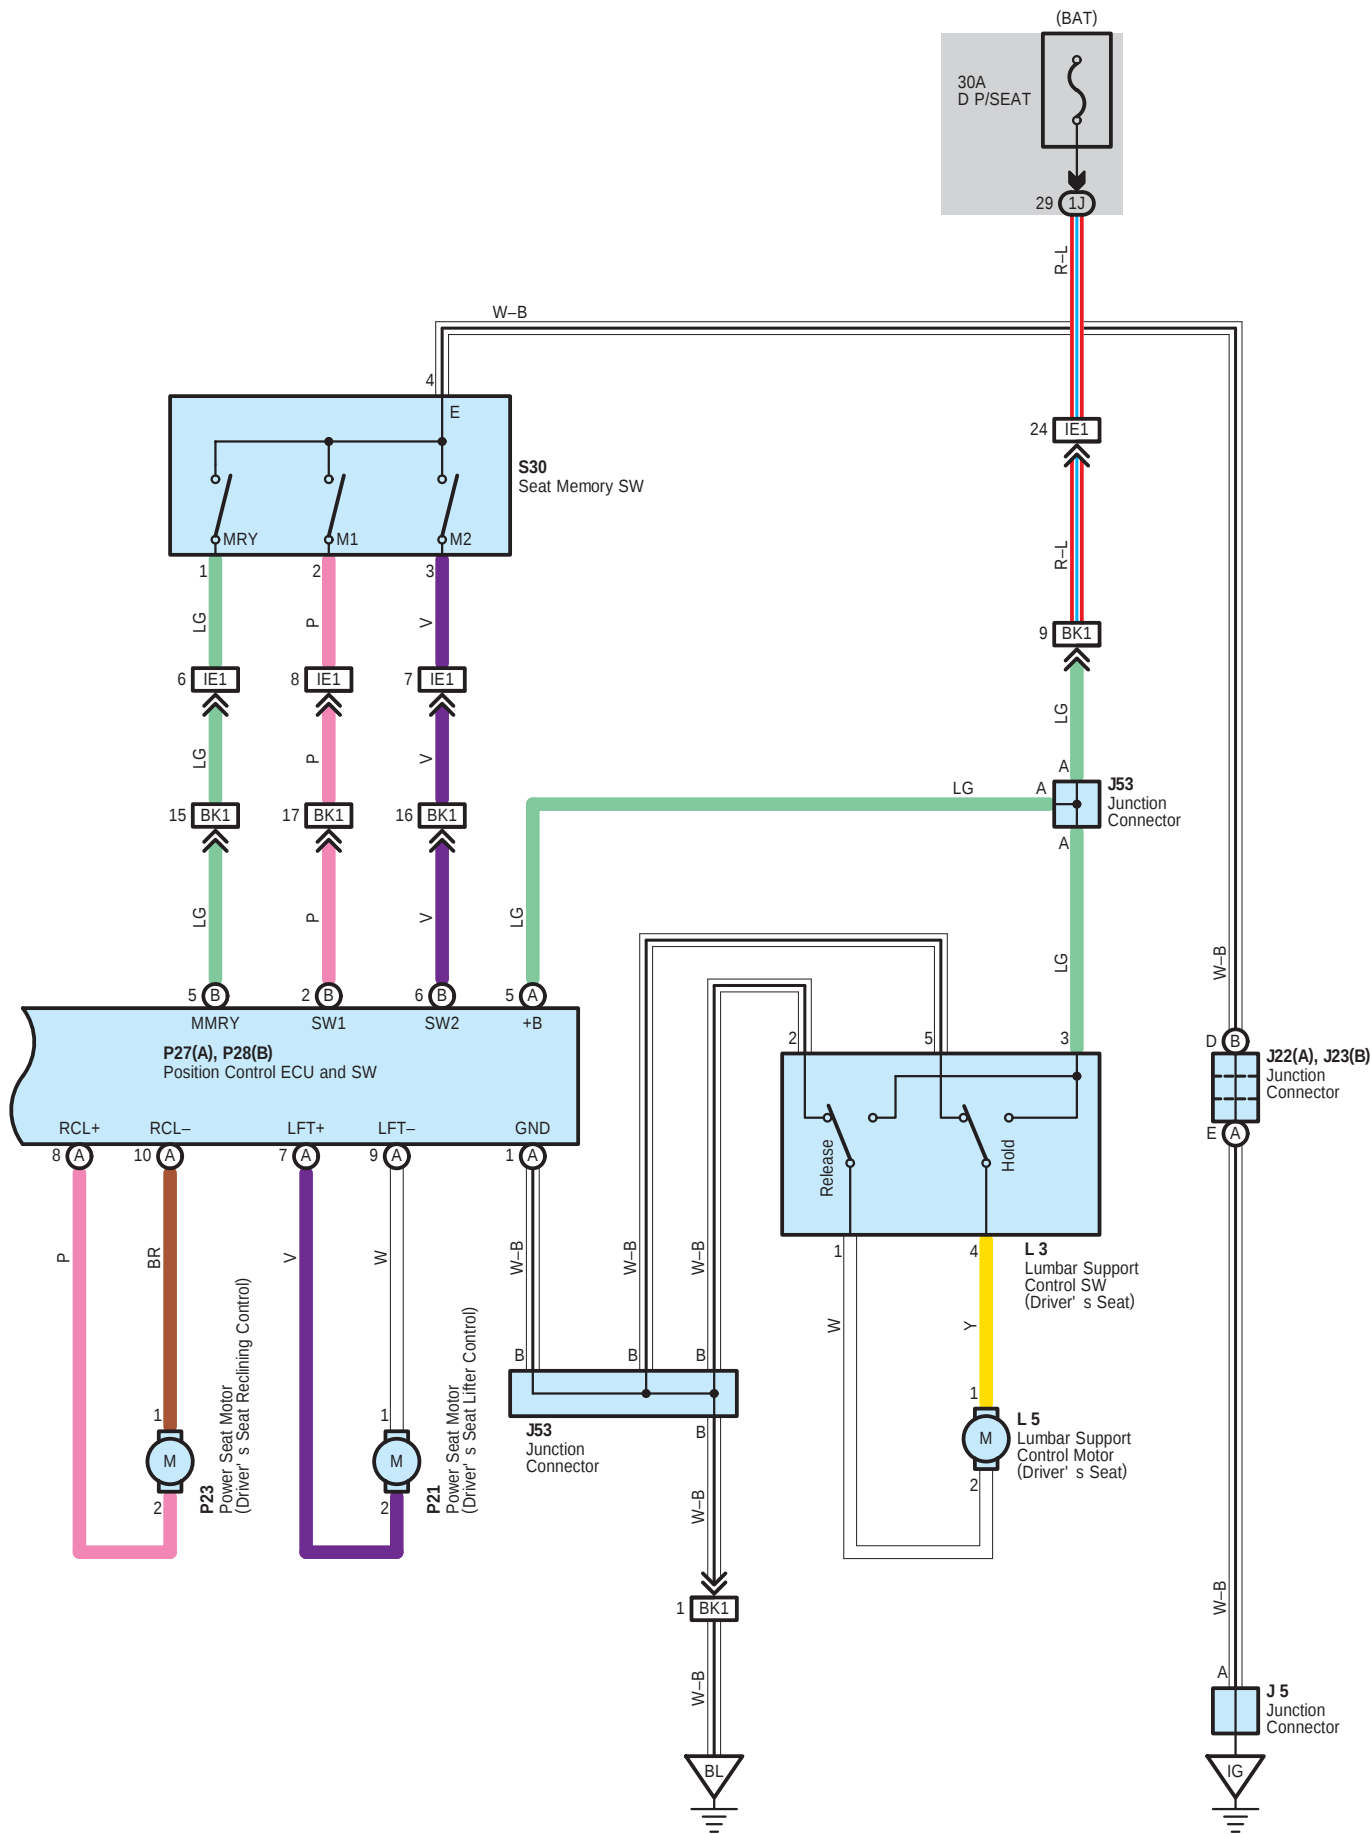

Power Seat for Driver's Seat with Memory

System Outline

- * In the power seat system, the position control ECU and SW receives the operation signal from the power seat control switch via infrared communication to operate each power seat motor and adjust the seat position.
- * In the event that malfunction occurs during infrared communication, this system has a fail-safe function to only slide or recline the seat.
- * This system has the following function:
 - * Manual slide operation
 - * Manual reclining control
 - * Manual front vertical control
 - * Manual rear vertical operation
 - * Driving position memory function

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
D12	40	J35	38	P20	42 (*1)
J5	38	J39	40	P21	42 (*1)
J7	38	J53	42 (*1)	P23	42 (*1)
J8	38	L3	42 (*1)	P24	42 (*1)
J18	38		43 (*2)	P27	A 42 (*1)
J20	38	L5	42 (*1)	P28	B 42 (*1)
J22	A 38		43 (*2)	S30	39
J23	B 38	P1	33 (2UZ-FE)		
J25	38		35 (1GR-FE)		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1F	24	Floor No.2 Wire and Driver Side J/B (Lower Finish Panel)
1J	25	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	46	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
IM1	47	Engine Wire and Instrument Panel Wire (Right Side of Blower Unit)
BK1	50 (*1)	Floor No.2 Wire and Seat No.2 Wire (Under the Front LH Seat)

▽ : Ground Points

Code	See Page	Ground Points Location
IG	46	Left Kick Panel
BL	48	Floor Seat Crossmember LH

* 1 : Power Seat * 2 : Manual Seat

