



Power Seat for Driver's Seat without Memory

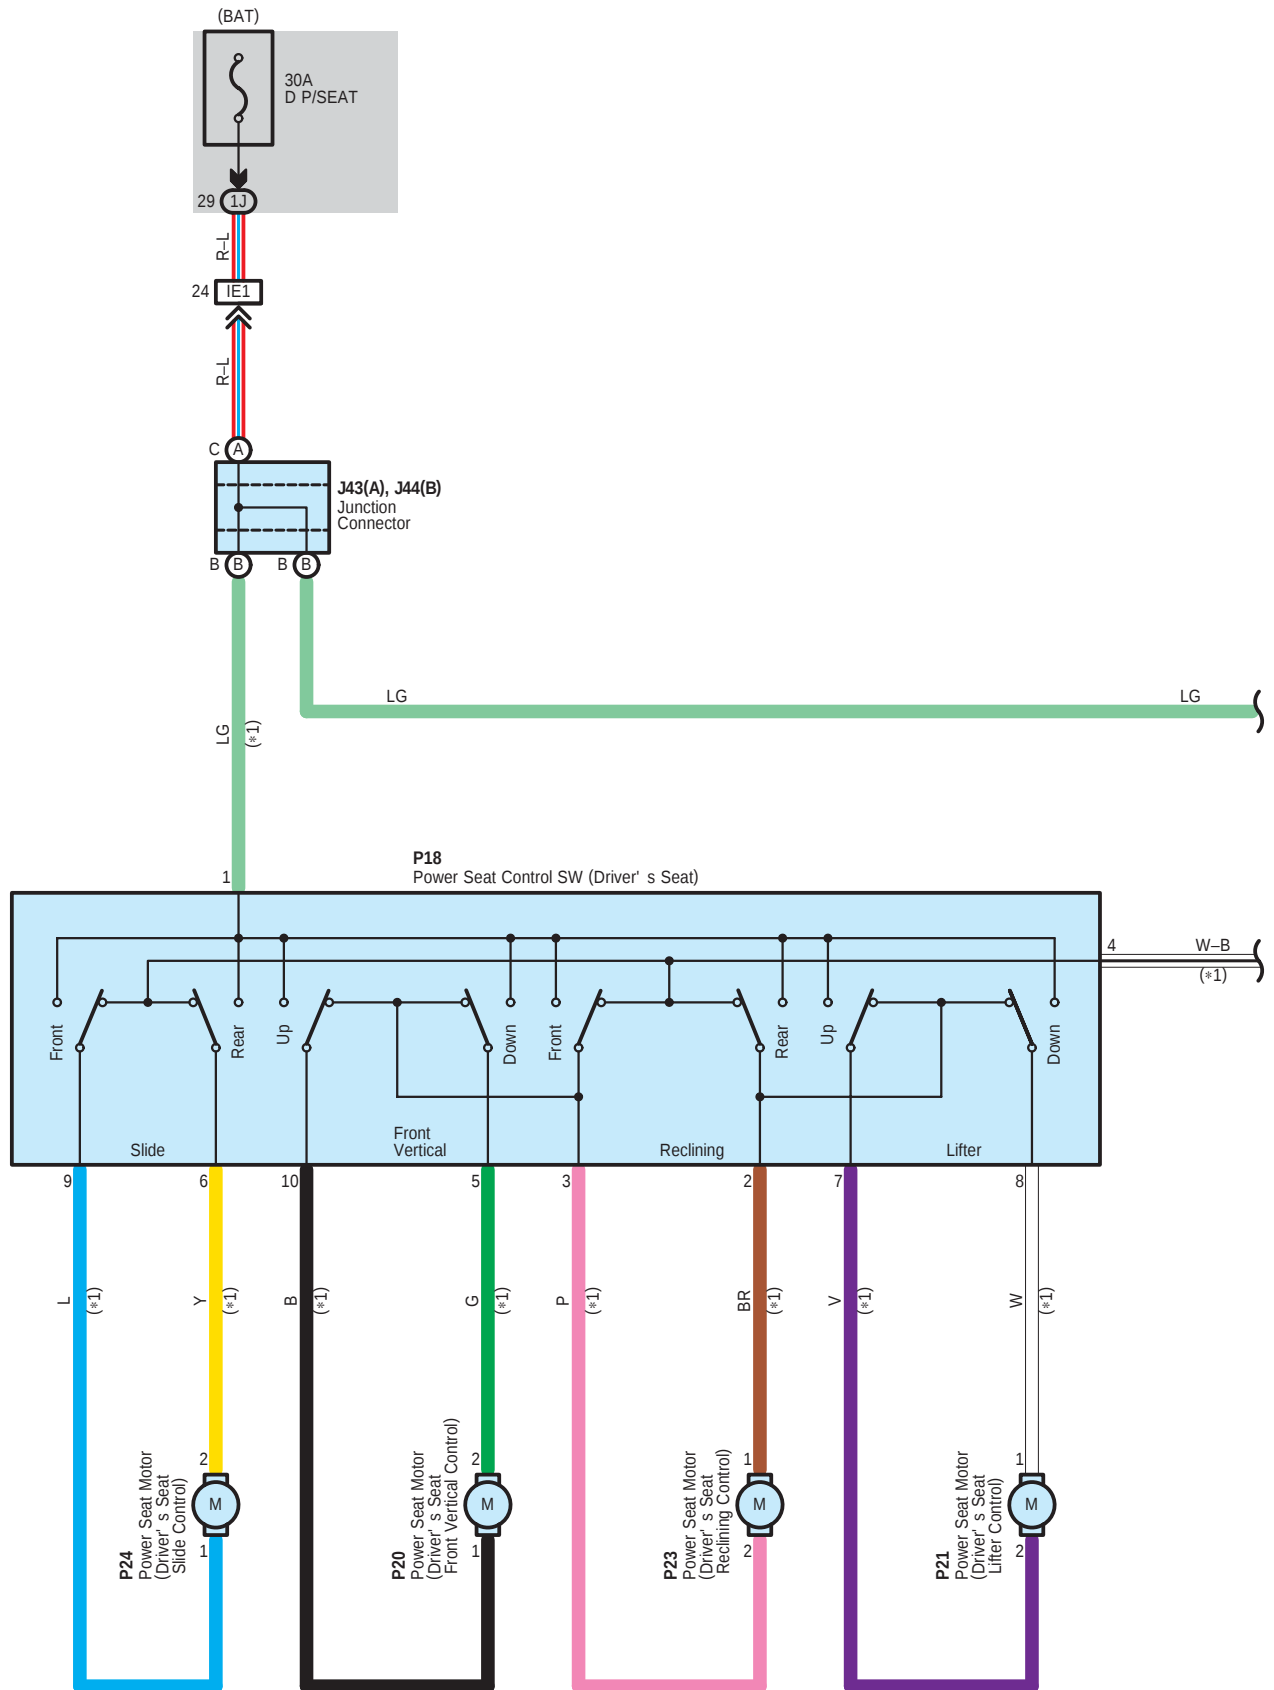

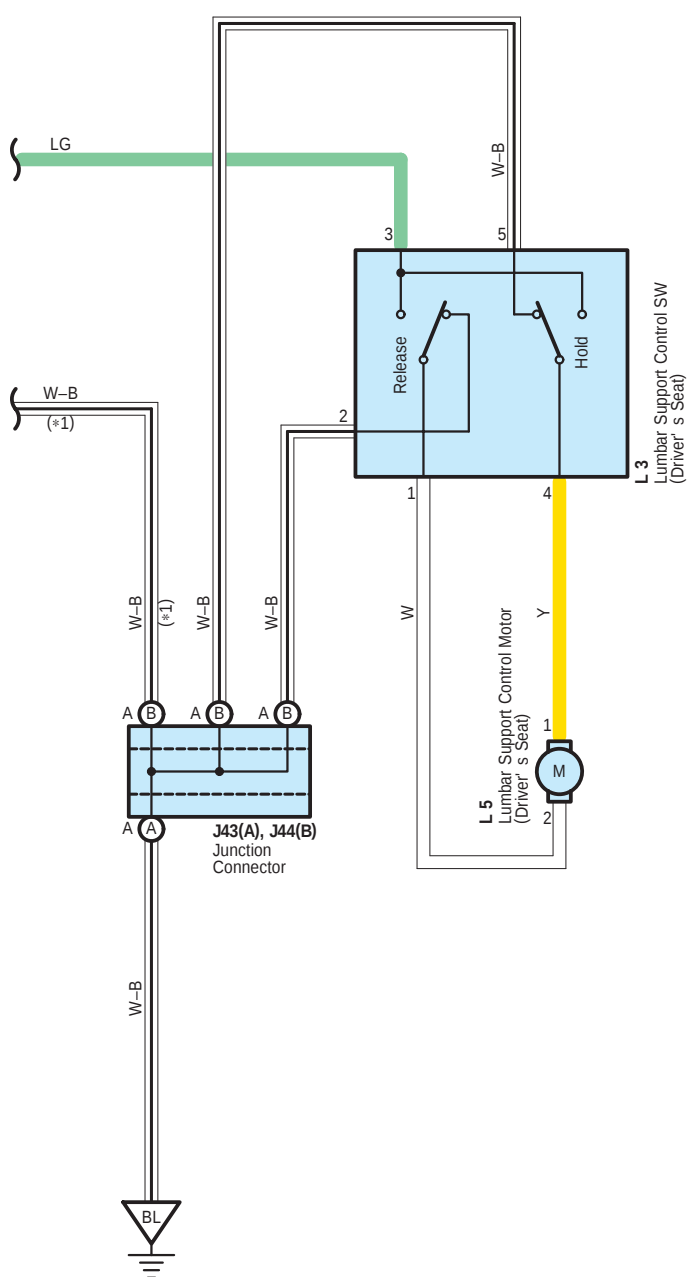

Power Seat for Driver's Seat without Memory

: Parts Location

Code		See Page	Code	See Page	Code	See Page
J43	A	42 (*1)	L3	43 (*2)	P21	42 (*1)
		43 (*2)		42 (*1)	P23	42 (*1)
J44	B	42 (*1)		43 (*2)	P24	42 (*1)
		43 (*2)	P18	42 (*1)		
L3		42 (*1)	P20	42 (*1)		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1J	25	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	46	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
BL	48	Floor Seat Crossmember LH

* 1 : Power Seat * 2 : Manual Seat

