


Power Seat for Front Passenger's Seat

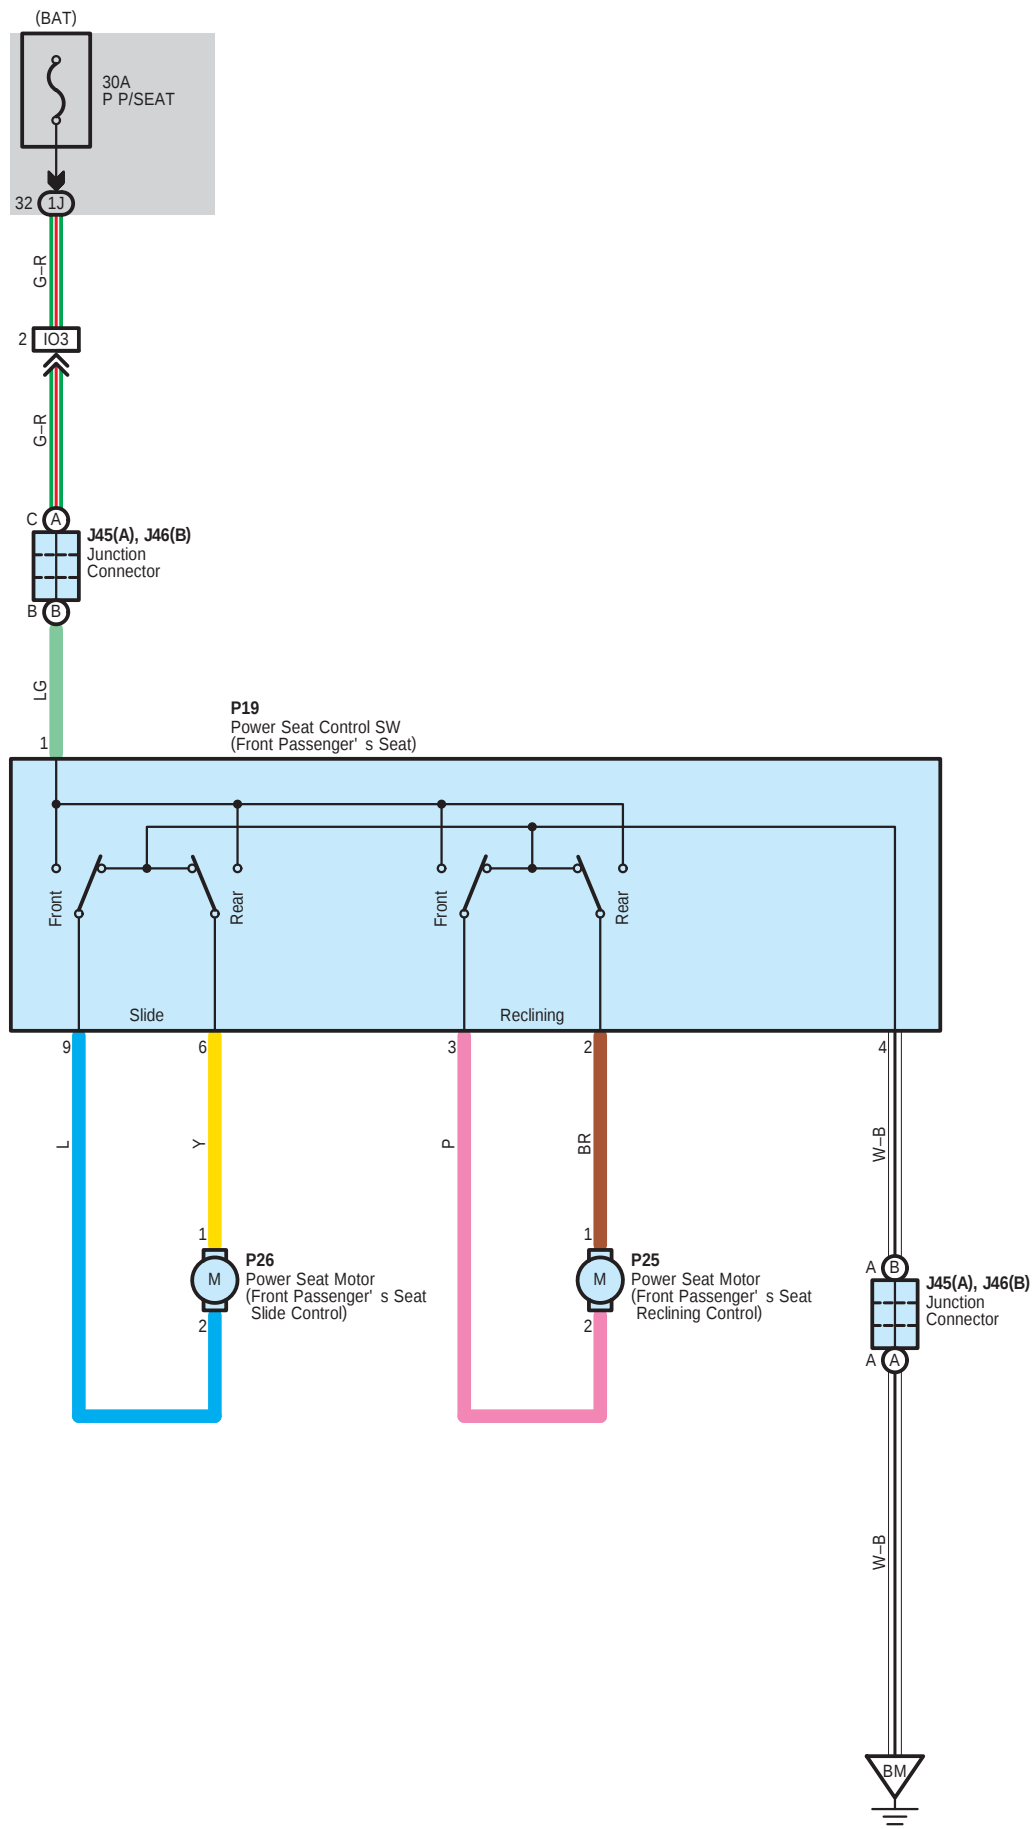

 : Parts Location

Code		See Page	Code		See Page	Code	See Page
J45	A	42 (*1)	J46	B	43 (*2)	P26	42 (*1)
		43 (*2)			P19		
J46	B	42 (*1)		P25	42 (*1)		

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1J	25	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IO3	47	Instrument Panel Wire and Floor Wire (Right Kick Panel)

 : Ground Points

Code	See Page	Ground Points Location
BM	48	Floor Seat Crossmember RH

* 1 : Power Seat * 2 : Manual Seat