



Seat Heater

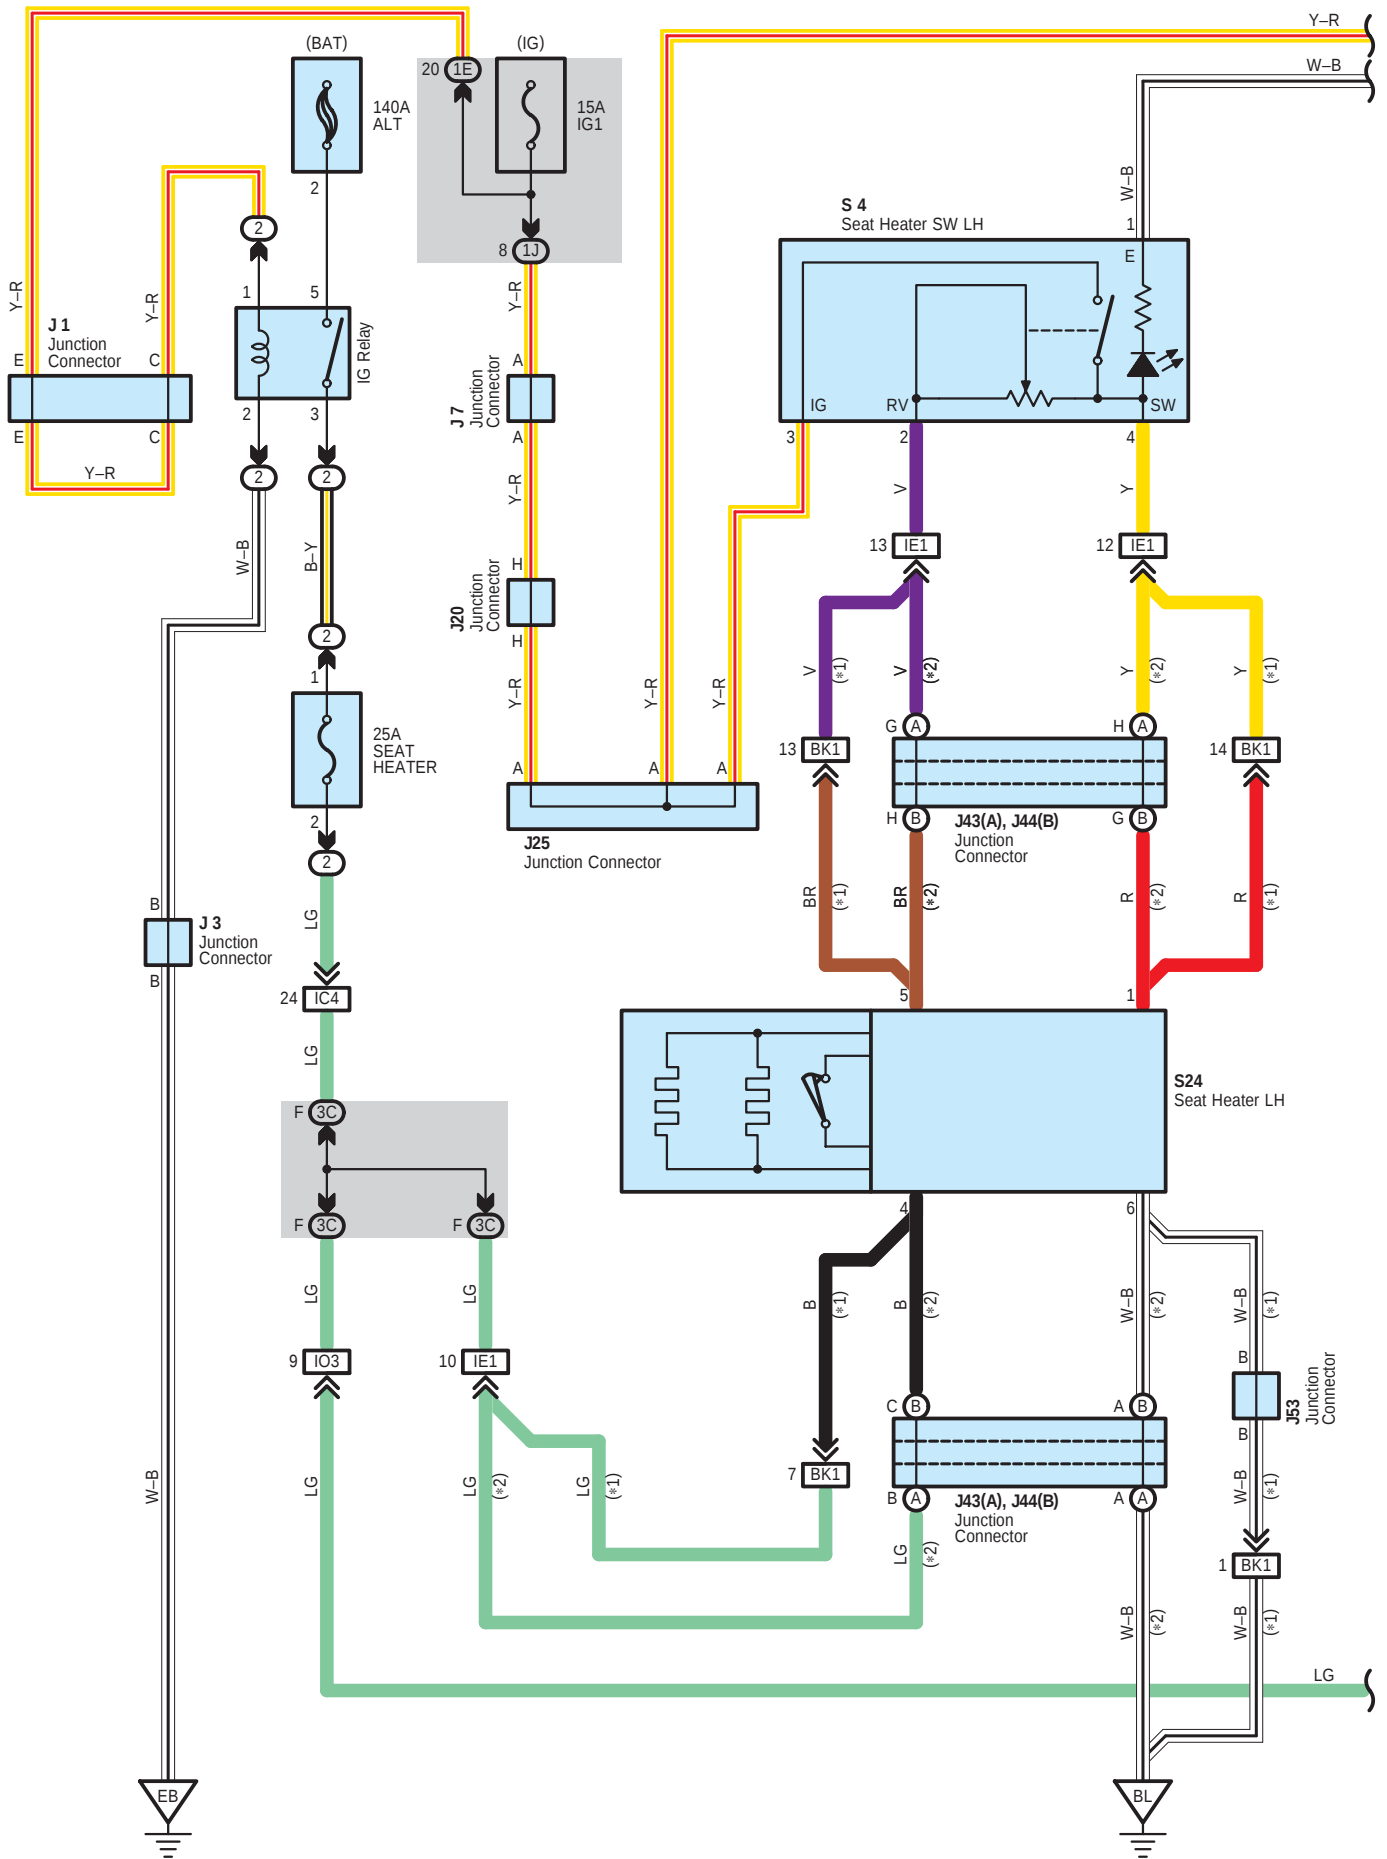

* 1 : w/ Driving Position Memory
 * 2 : w/o Driving Position Memory

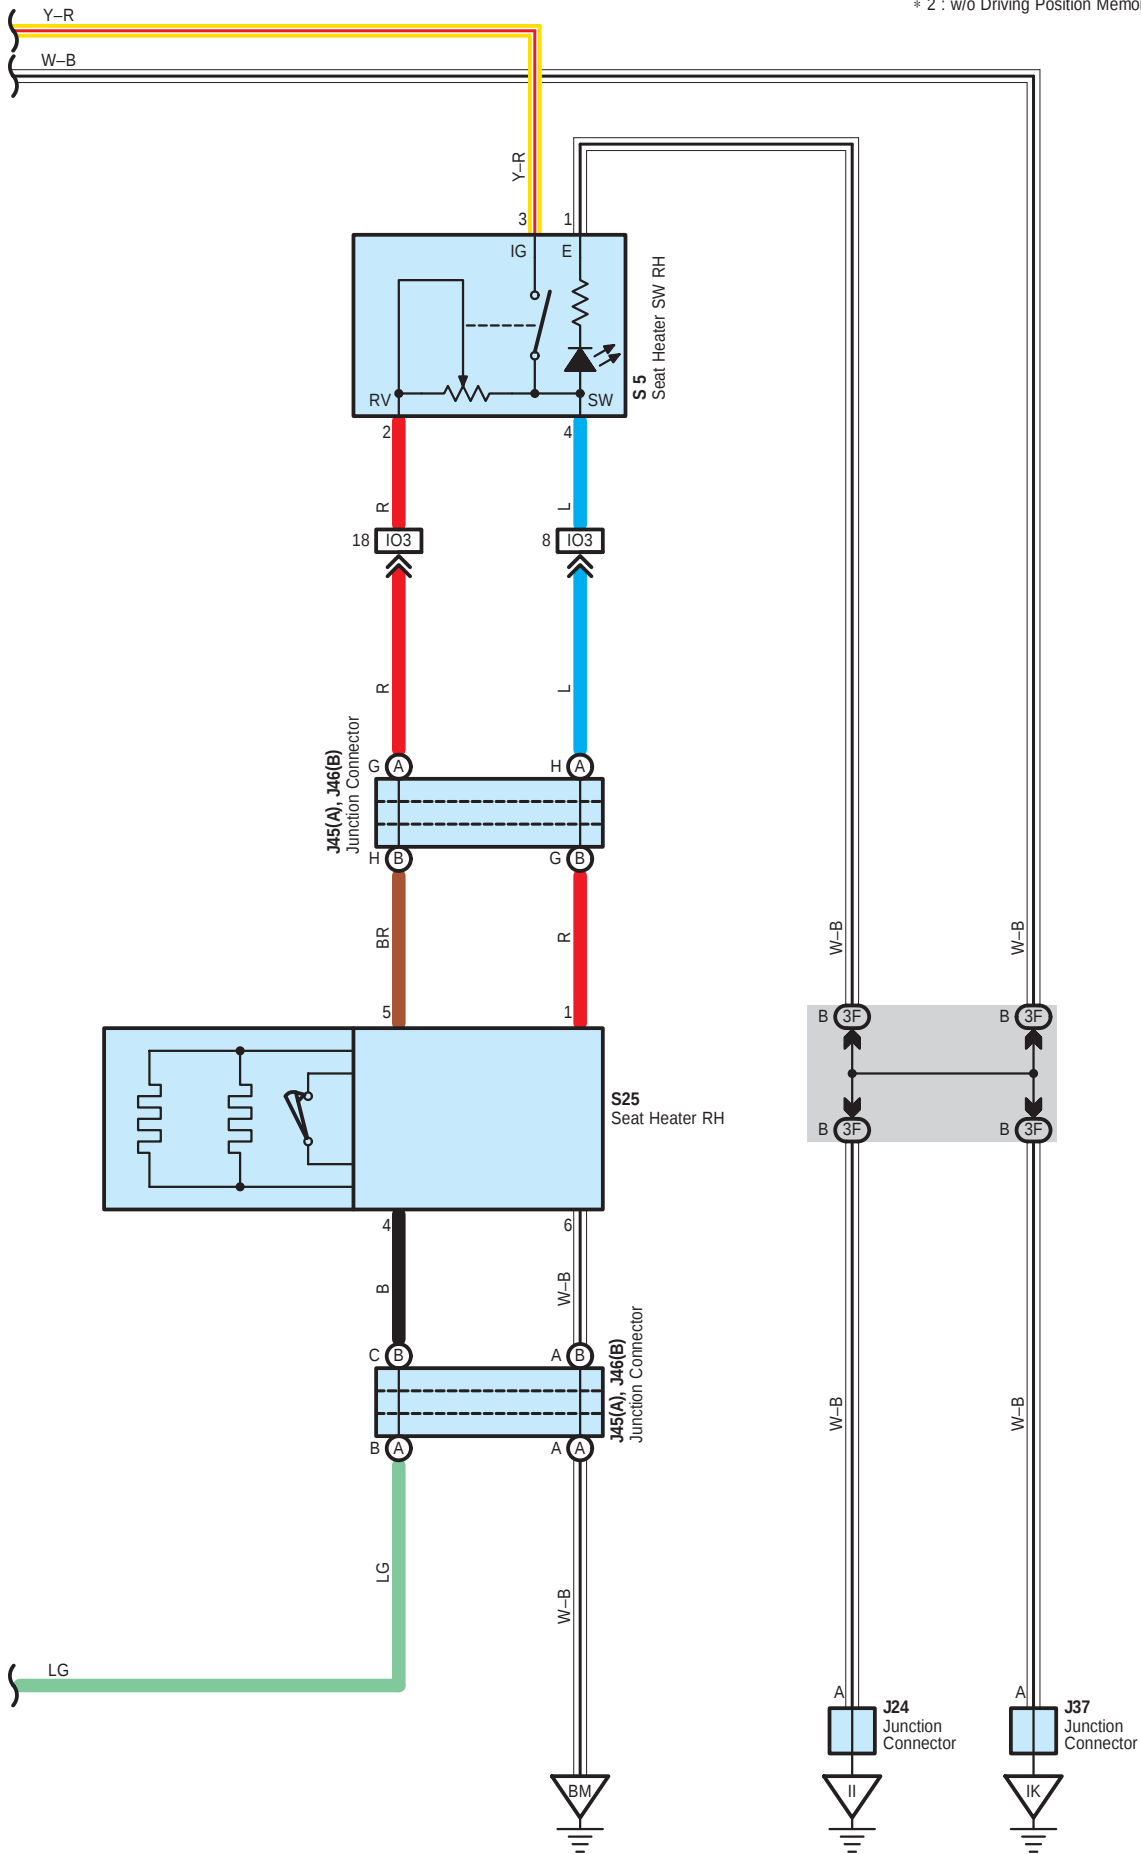

Seat Heater

: Parts Location

Code	See Page	Code		See Page	Code		See Page
J1	33 (2UZ-FE)	J37		38	J46	B	43 (*2)
	35 (1GR-FE)	J43	A	42 (*1)	J53		42 (*1)
J3	33 (2UZ-FE)			43 (*2)	S4		39
	35 (1GR-FE)	J44	B	42 (*1)	S5		39
J7	38			43 (*2)	S24		42 (*1)
J20	38	J45	A	42 (*1)	S25		42 (*1)
J24	38			43 (*2)			
J25	38	J46	B	42 (*1)			

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	24	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1J	25	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
3C	28	Instrument Panel Wire and Center J/B (Instrument Panel Brace RH)
3F		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC4	46	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
IE1	46	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
IO3	47	Instrument Panel Wire and Floor Wire (Right Kick Panel)
BK1	50 (*1)	Floor No.2 Wire and Seat No.2 Wire (Under the Front LH Seat)

: Ground Points

Code	See Page	Ground Points Location
EB	44 (2UZ-FE)	Front Left Fender
	45 (1GR-FE)	
II	46	Instrument Panel Brace RH
IK	46	Right Kick Panel
BL	48	Floor Seat Crossmember LH
BM	48	Floor Seat Crossmember RH

* 1 : Power Seat * 2 : Manual Seat

