



SERVICE HINTS

TURN SIGNAL FLASHER

2-GROUND : APPROX. 12 VOLTS WITH IGNITION SW ON OR HAZARD SW ON

1-GROUND : CHANGES FROM 12 TO 0 VOLTS WITH IGNITION SW ON AND TURN SIGNAL SW LEFT OR RIGHT, OR WITH HAZARD SW ON

3-GROUND : ALWAYS CONTINUITY

: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C11	30	H 7	31	R 7	33
C13	30	J 1	27 (5VZ-FE), 29 (3RZ-FE)	R 8	33
F 3	26 (5VZ-FE), 28 (3RZ-FE)	J 4	31		
F 4	26 (5VZ-FE), 28 (3RZ-FE)	J 9	31		

: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	20 (USA) 21 (CANADA)	ENGINE ROOM R/B (ENGINE COMPARTMENT LEFT)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	22	COWL WIRE AND DRIVER SIDE J/B (LOWER FINISH PANEL)
1B		
1C		
1D		
1E		
1J	22	ENGINE ROOM MAIN WIRE AND DRIVER SIDE J/B (LOWER FINISH PANEL)
3E	24	COWL WIRE AND CENTER J/B (NEAR THE STEERING COLUMN TUBE)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IE1	40	COWL WIRE AND FLOOR NO.2 WIRE (LEFT KICK PANEL)
IL1	40	COWL WIRE AND FLOOR WIRE (RIGHT KICK PANEL)


: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	36 (5VZ-FE) 38 (3RZ-FE)	FRONT LEFT FENDER
IE	40	COWL SIDE PANEL LH
IF	40	COWL SIDE PANEL RH


: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 5	40	COWL WIRE			


C11 BLUE

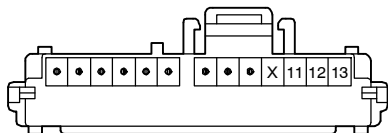


C13

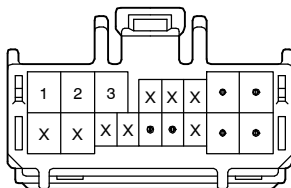


F 3, F 4 GRAY

 


H 7 BLACK

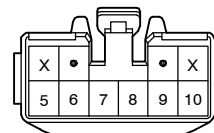

J 1 GRAY

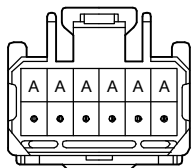


J 4, J 9

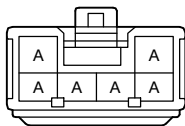

(HINT : SEE PAGE 7)

 R 7, R 8



(HINT : SEE PAGE 7)