



F RELAY LOCATIONS


[Engine Compartment]

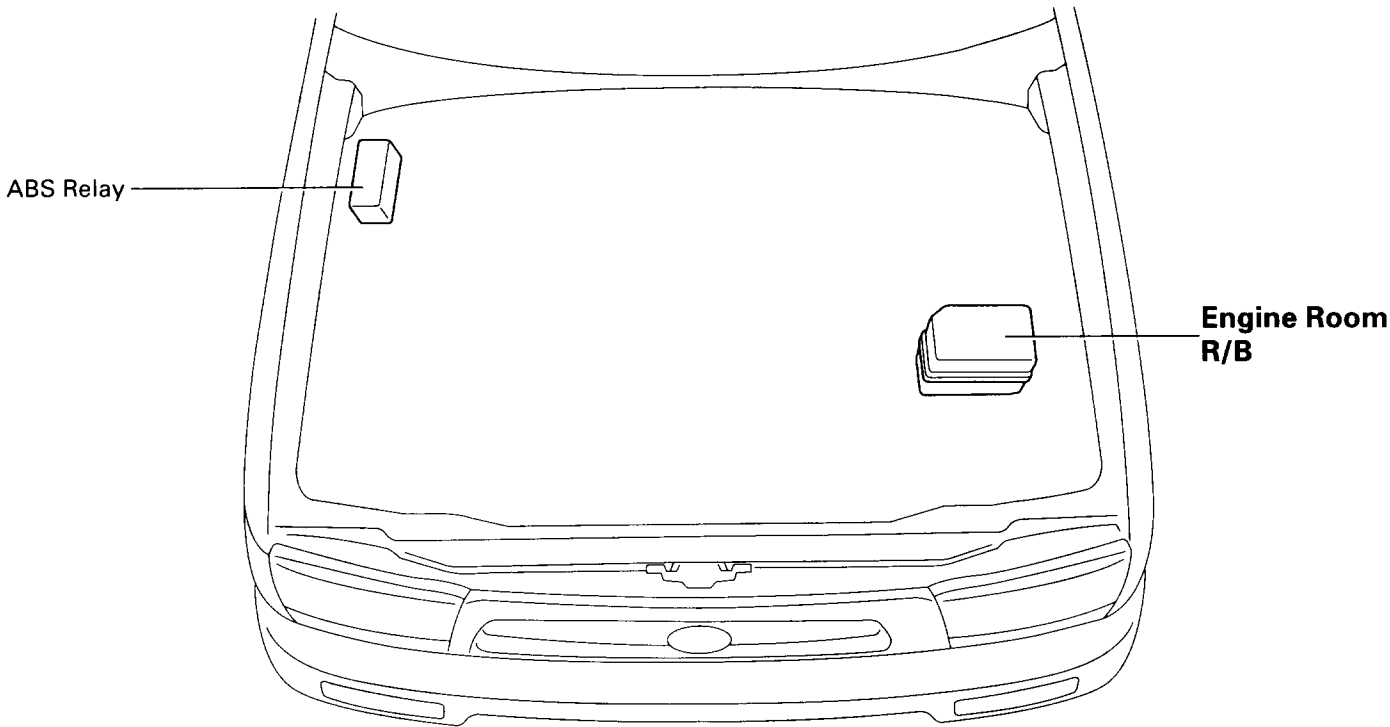

[Body]

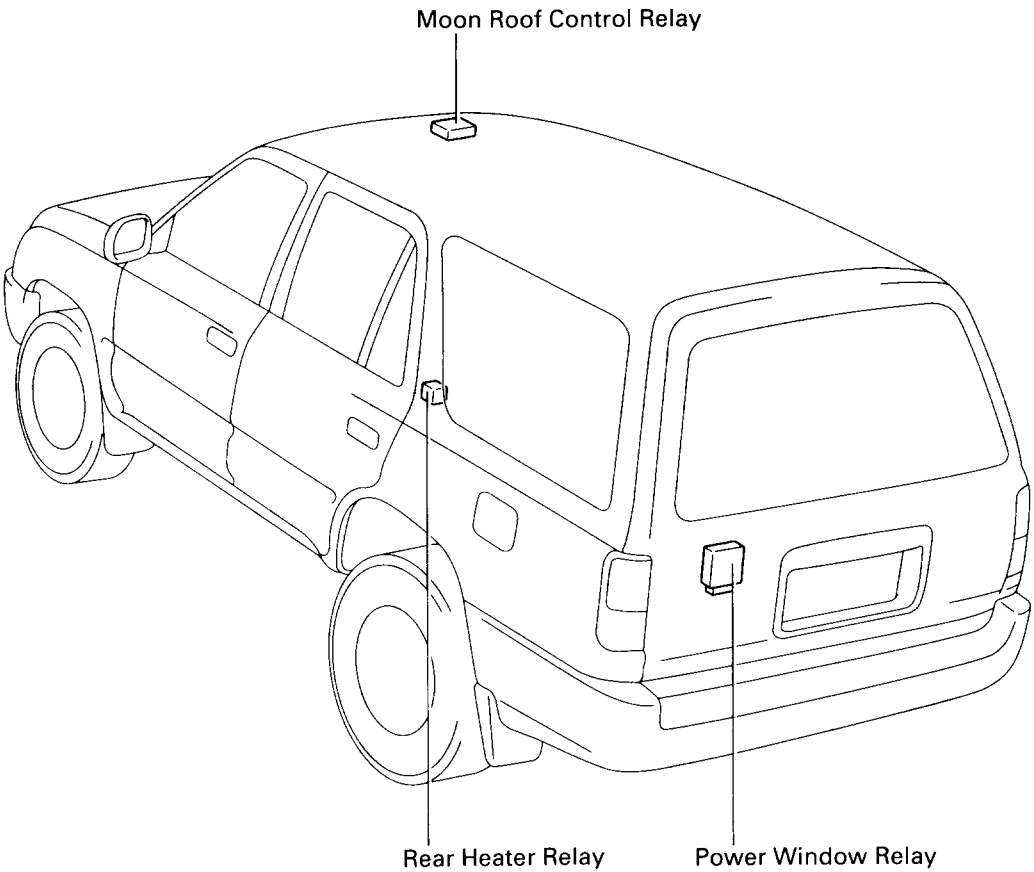

[Instrument Panel]

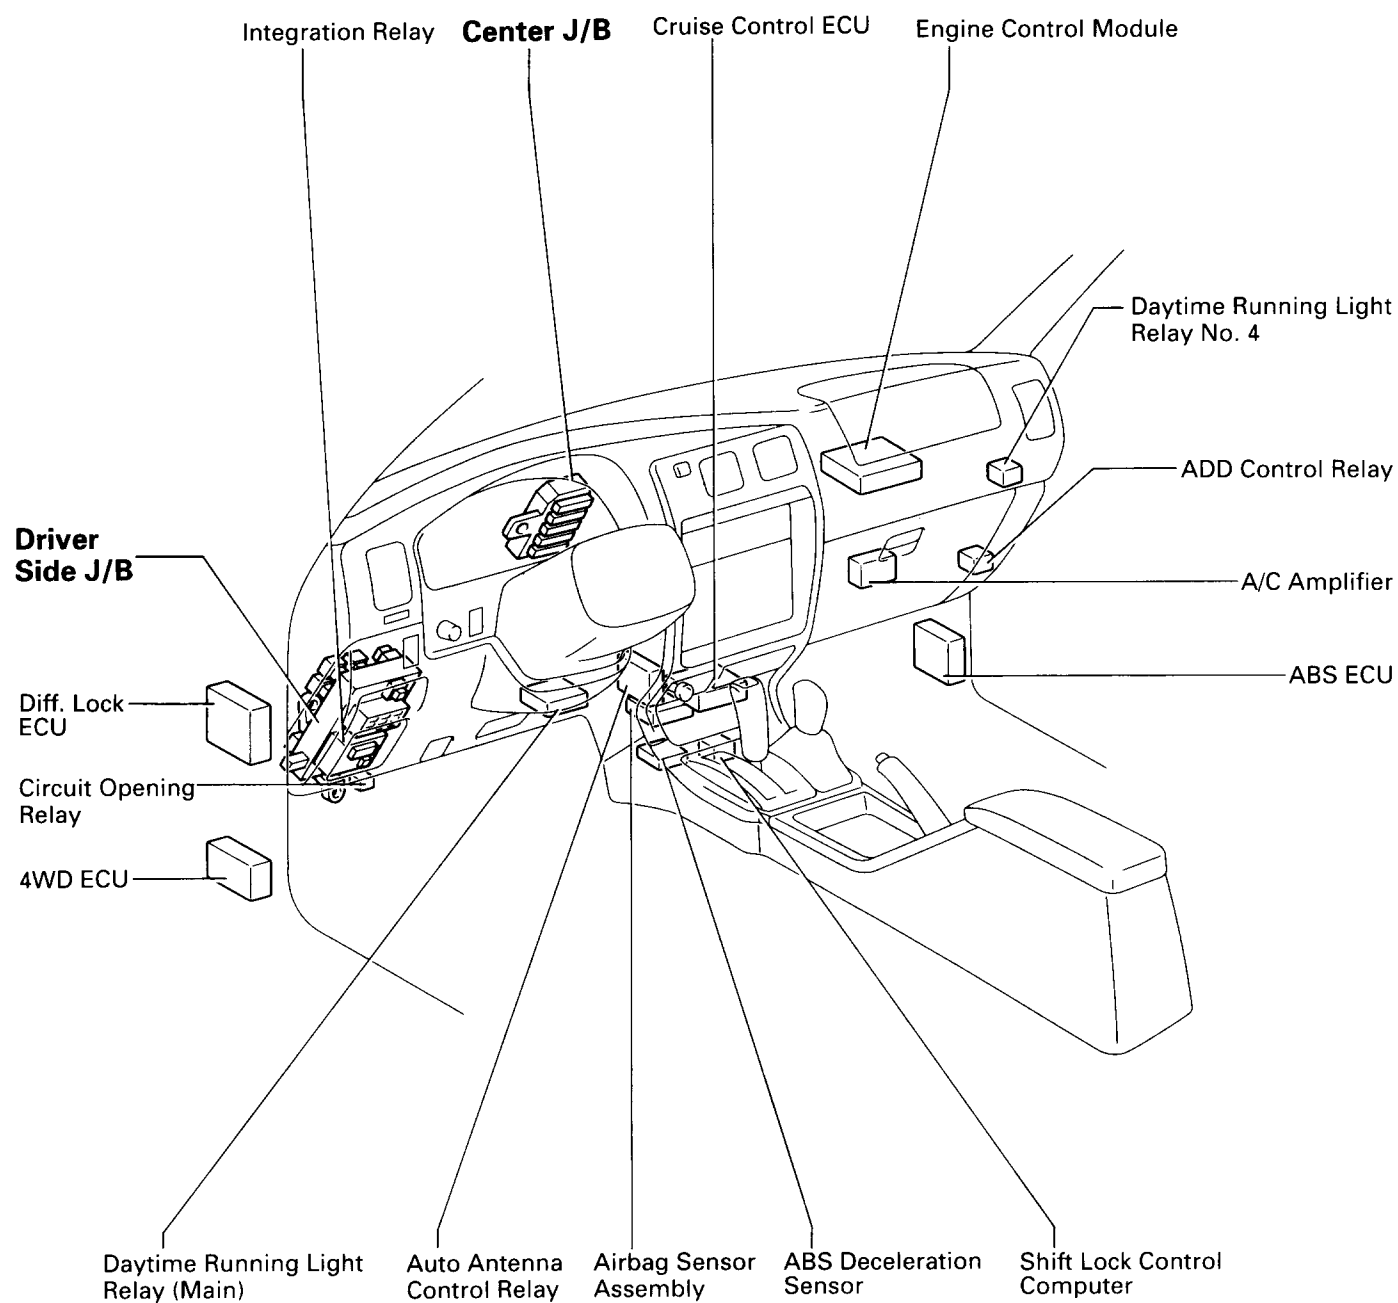


F RELAY LOCATIONS


② : Engine Room R/B

Engine Compartment Left (See Page 18)

(USA)

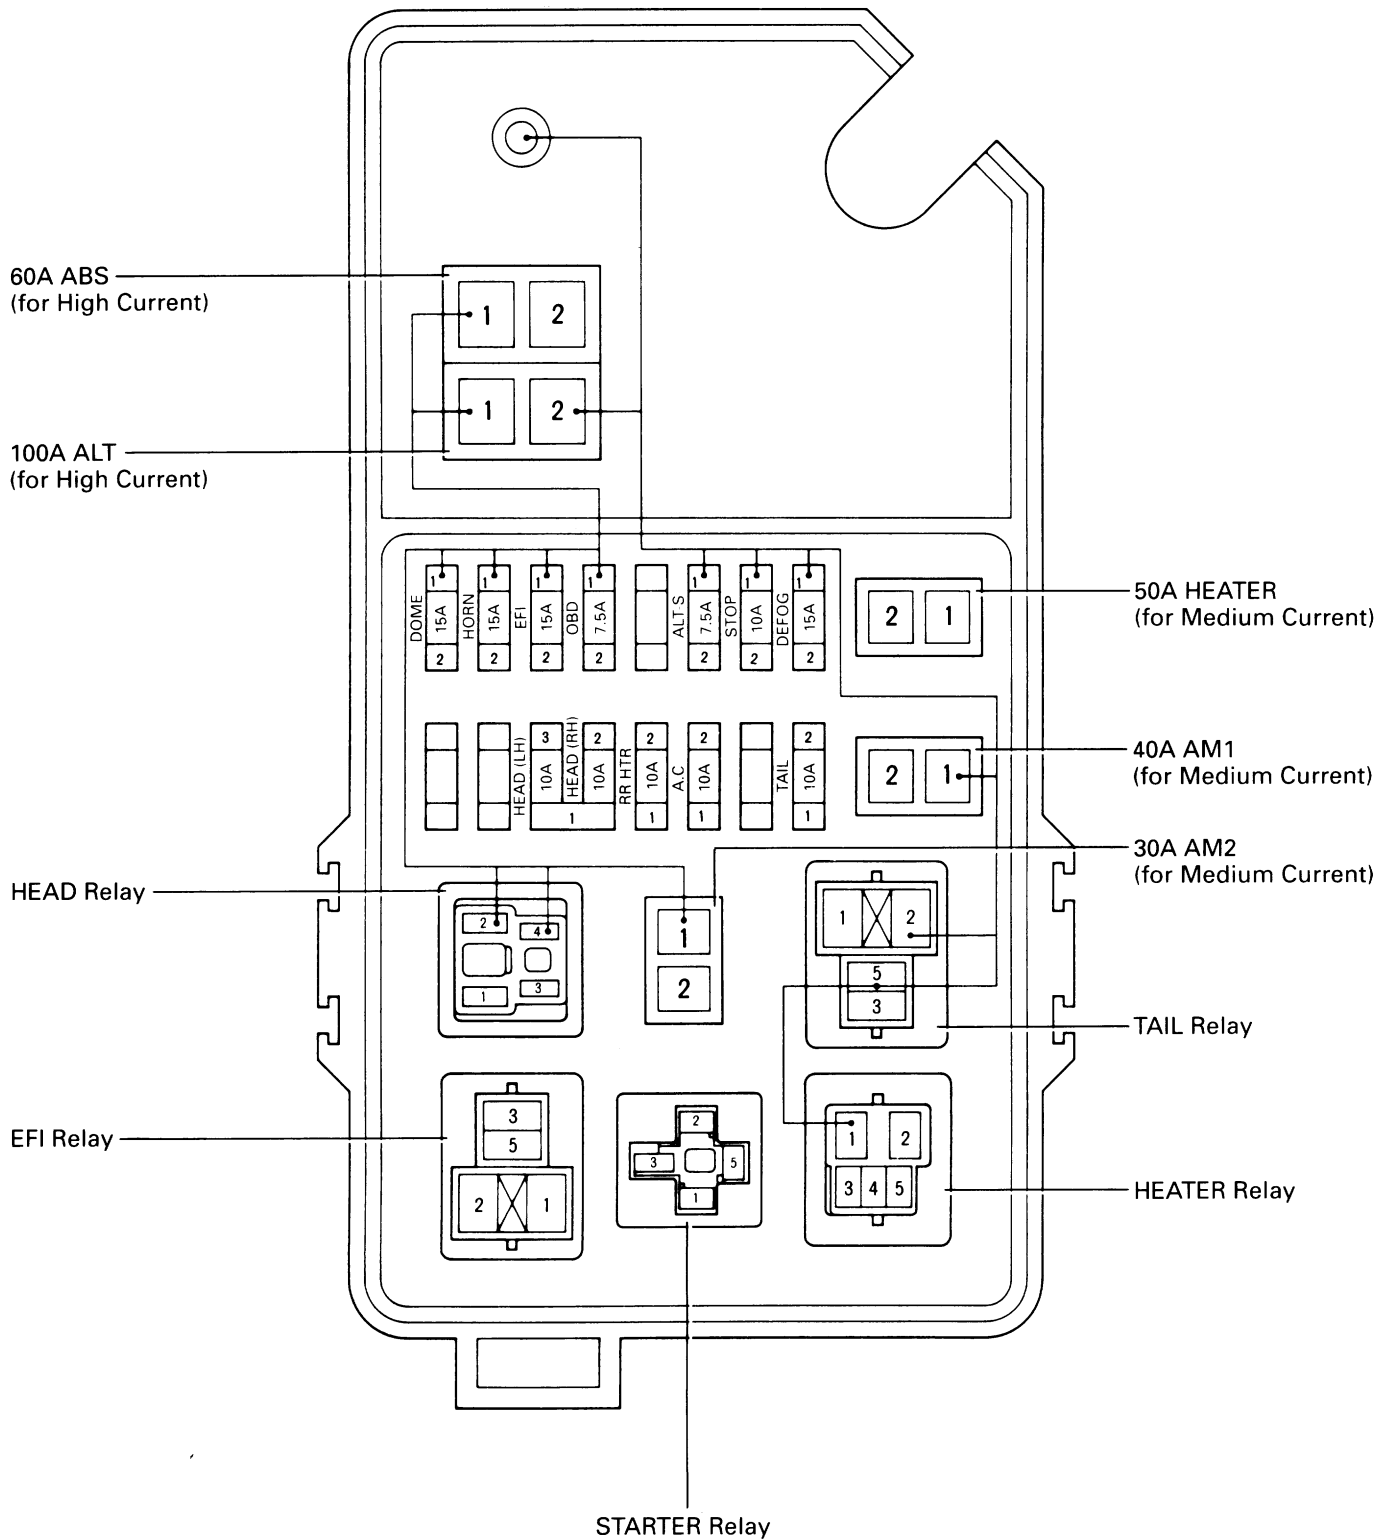



(Canada)

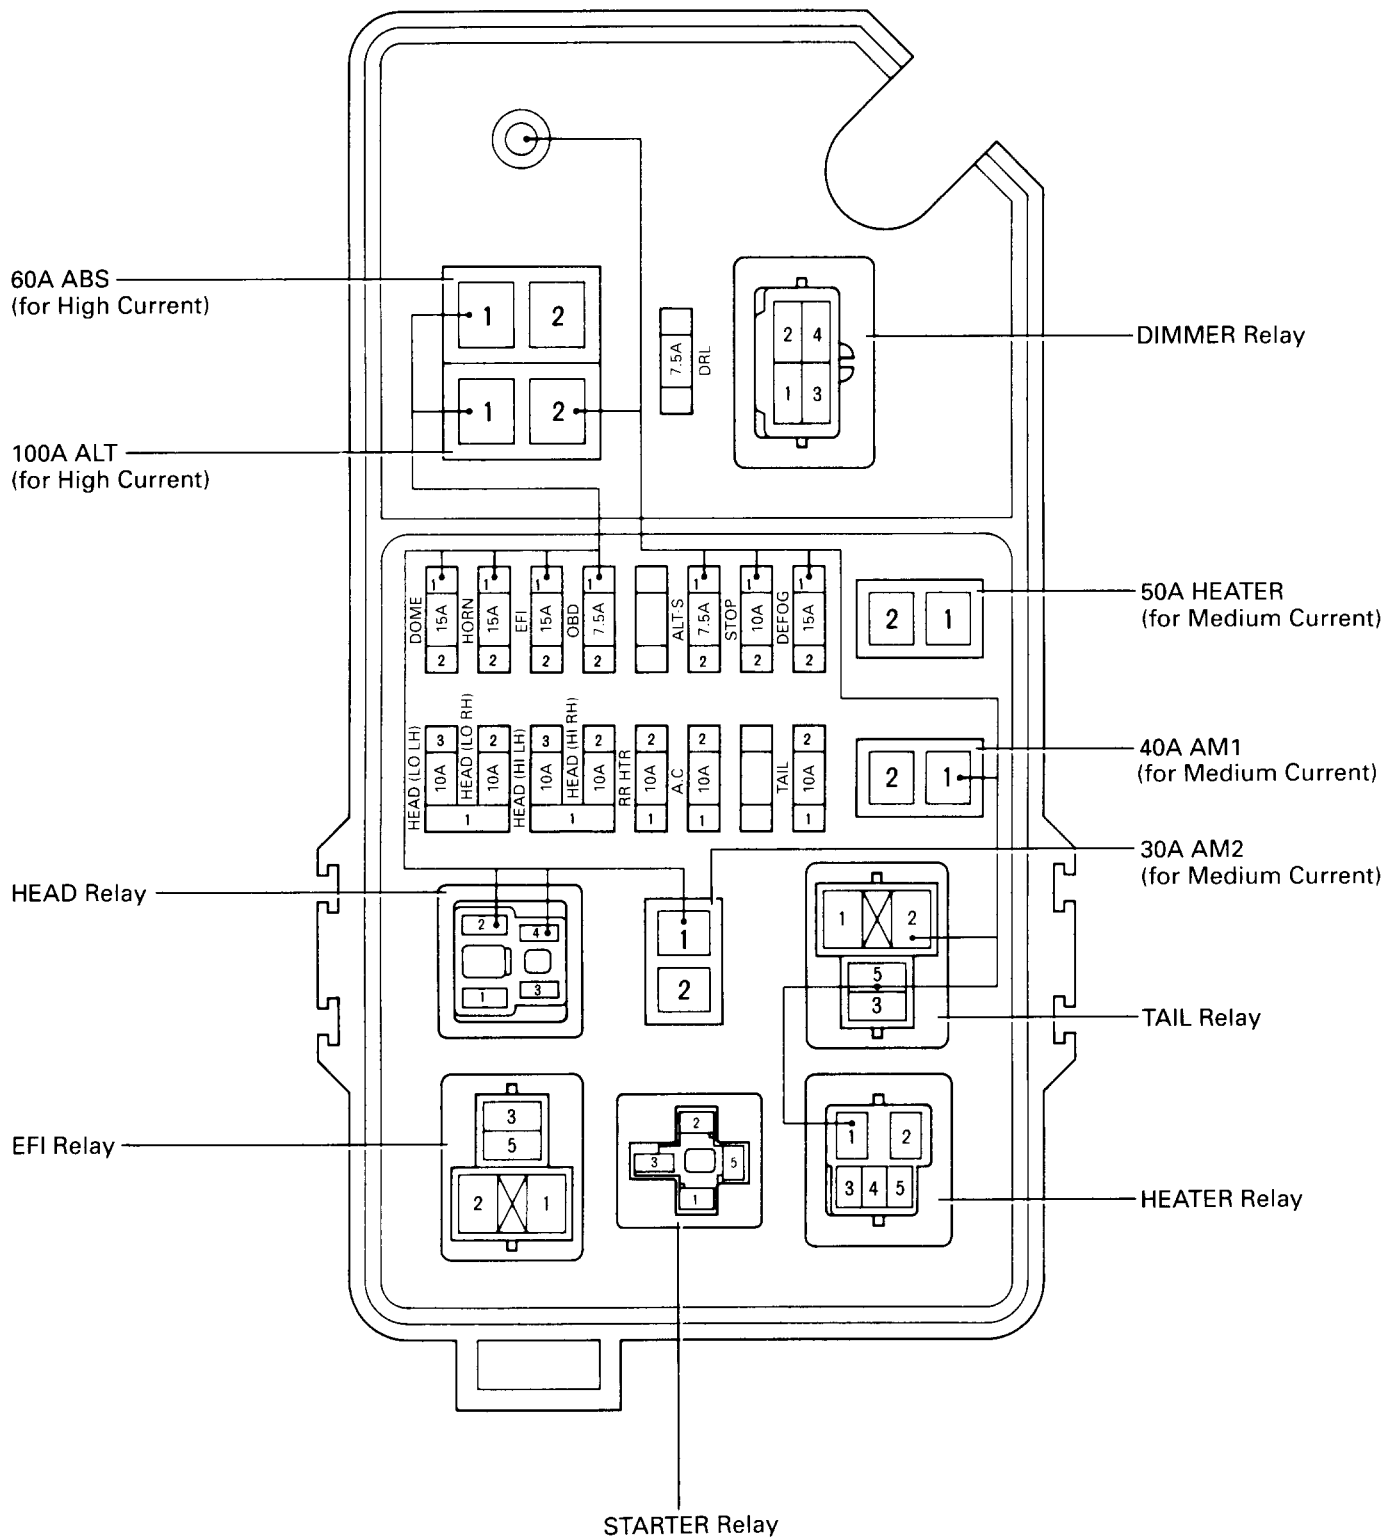


F RELAY LOCATIONS

 : Driver Side J/B

Lower Finish Panel (See Page 19)

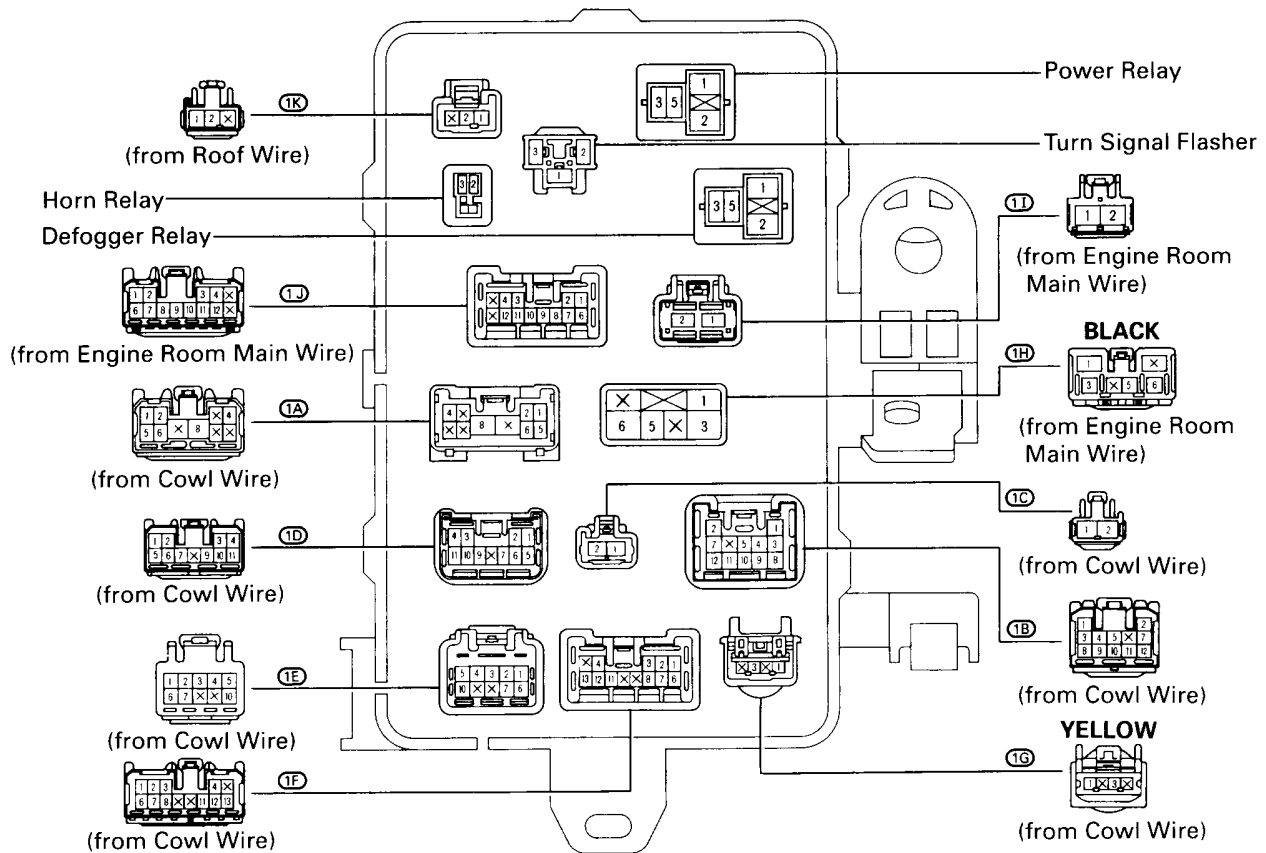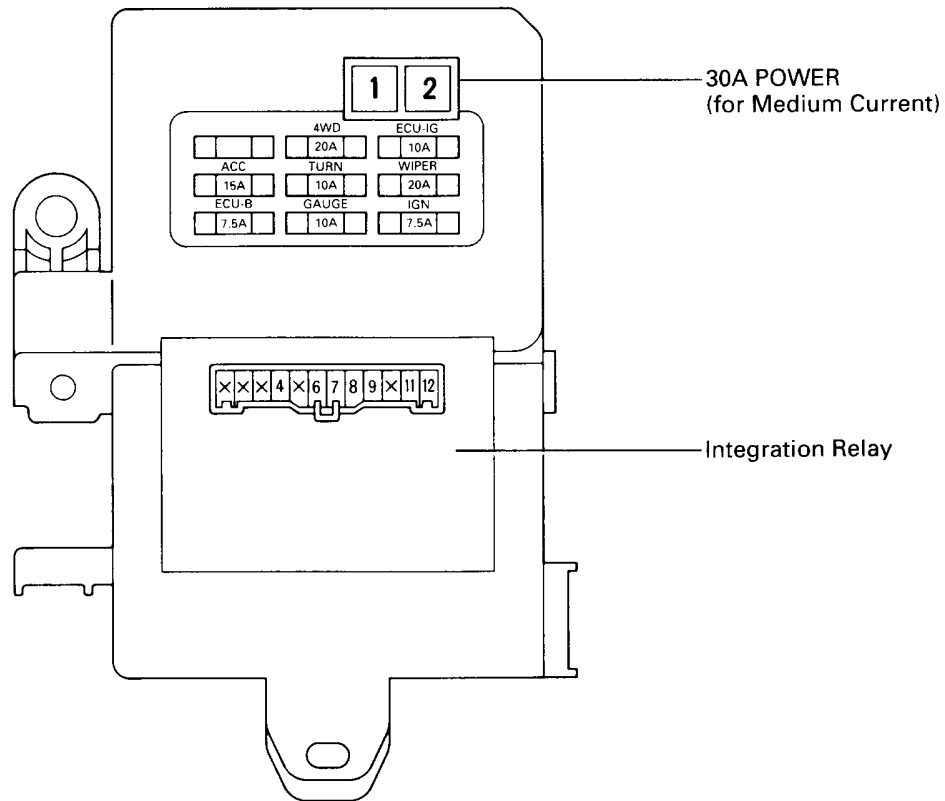


[Driver Side J/B Inner Circuit]

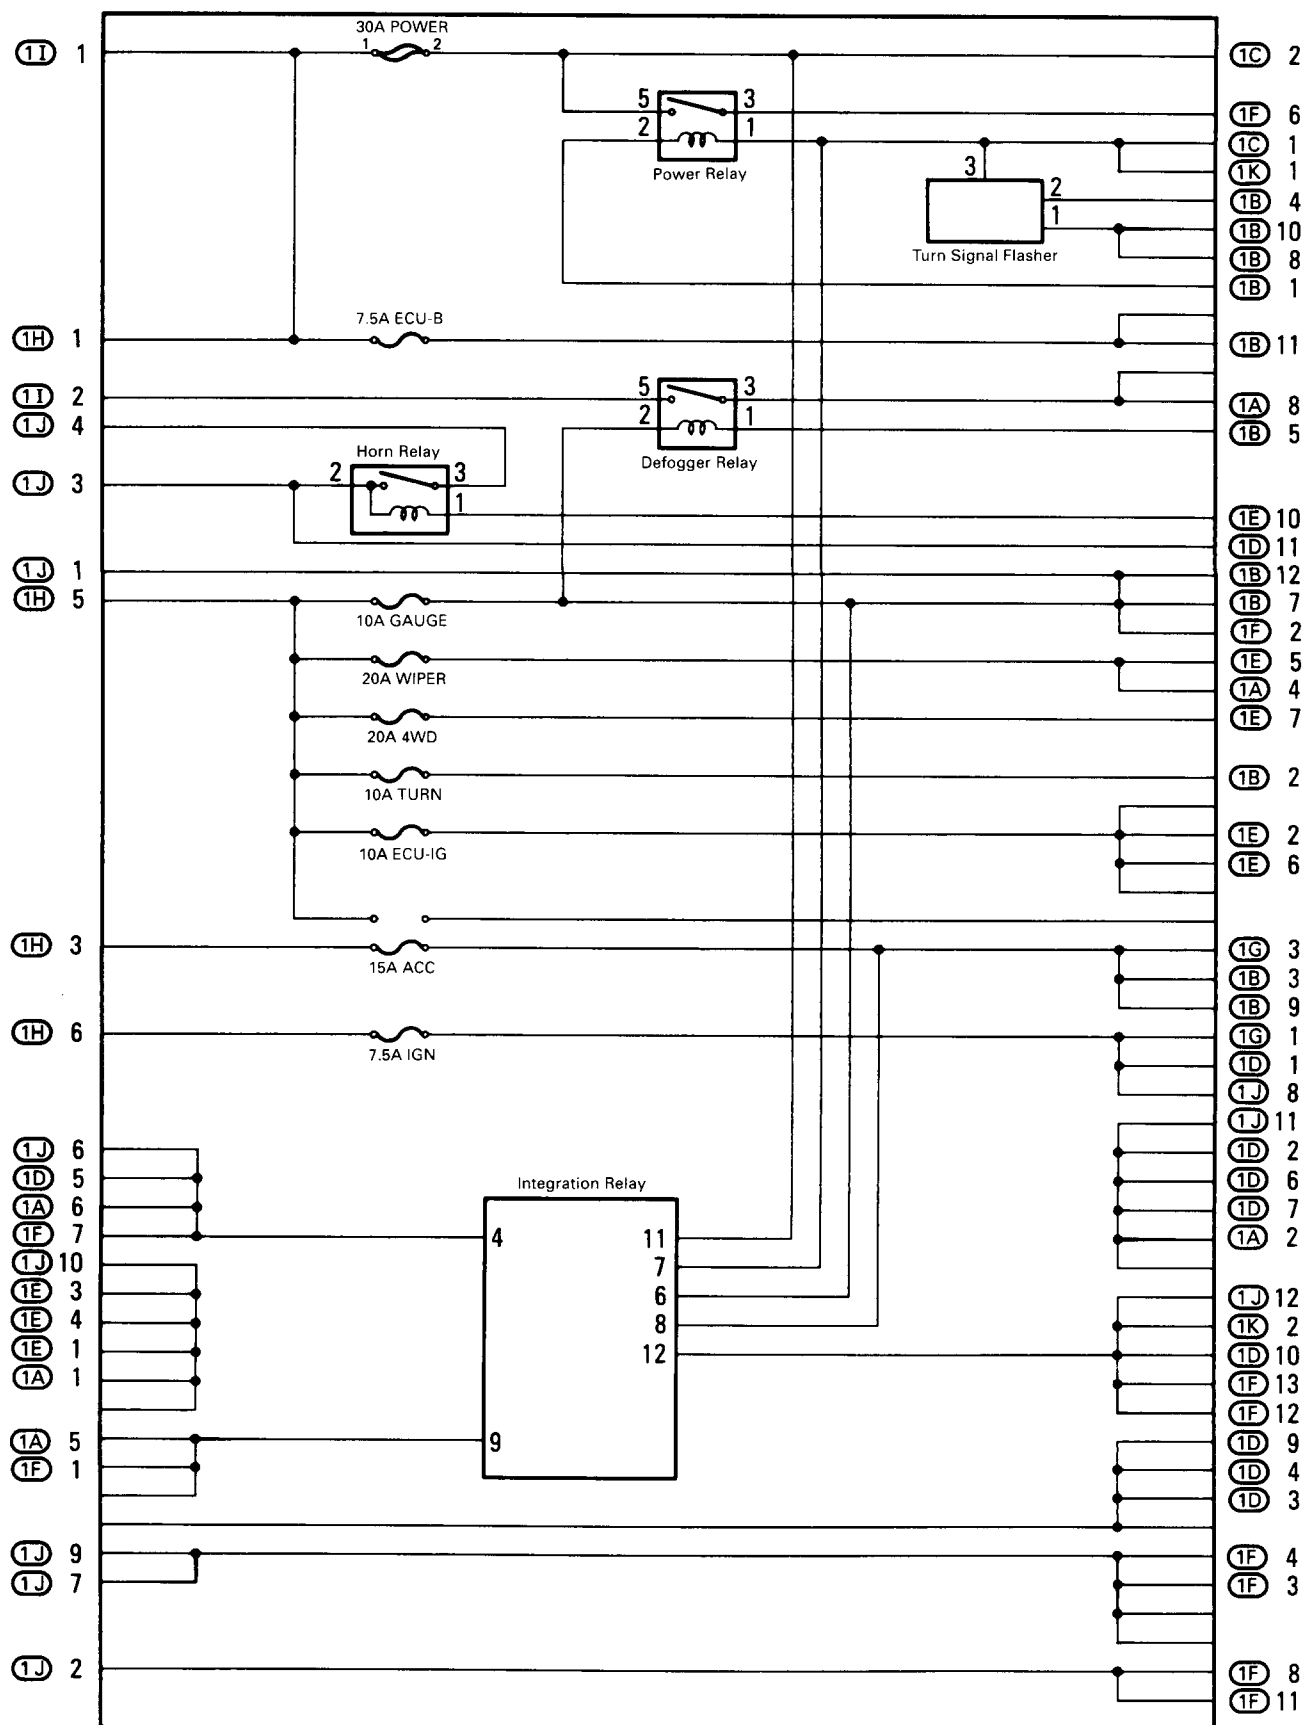

F RELAY LOCATIONS

 : Center J/B

Near The Steering Column Tube (See Page 19)

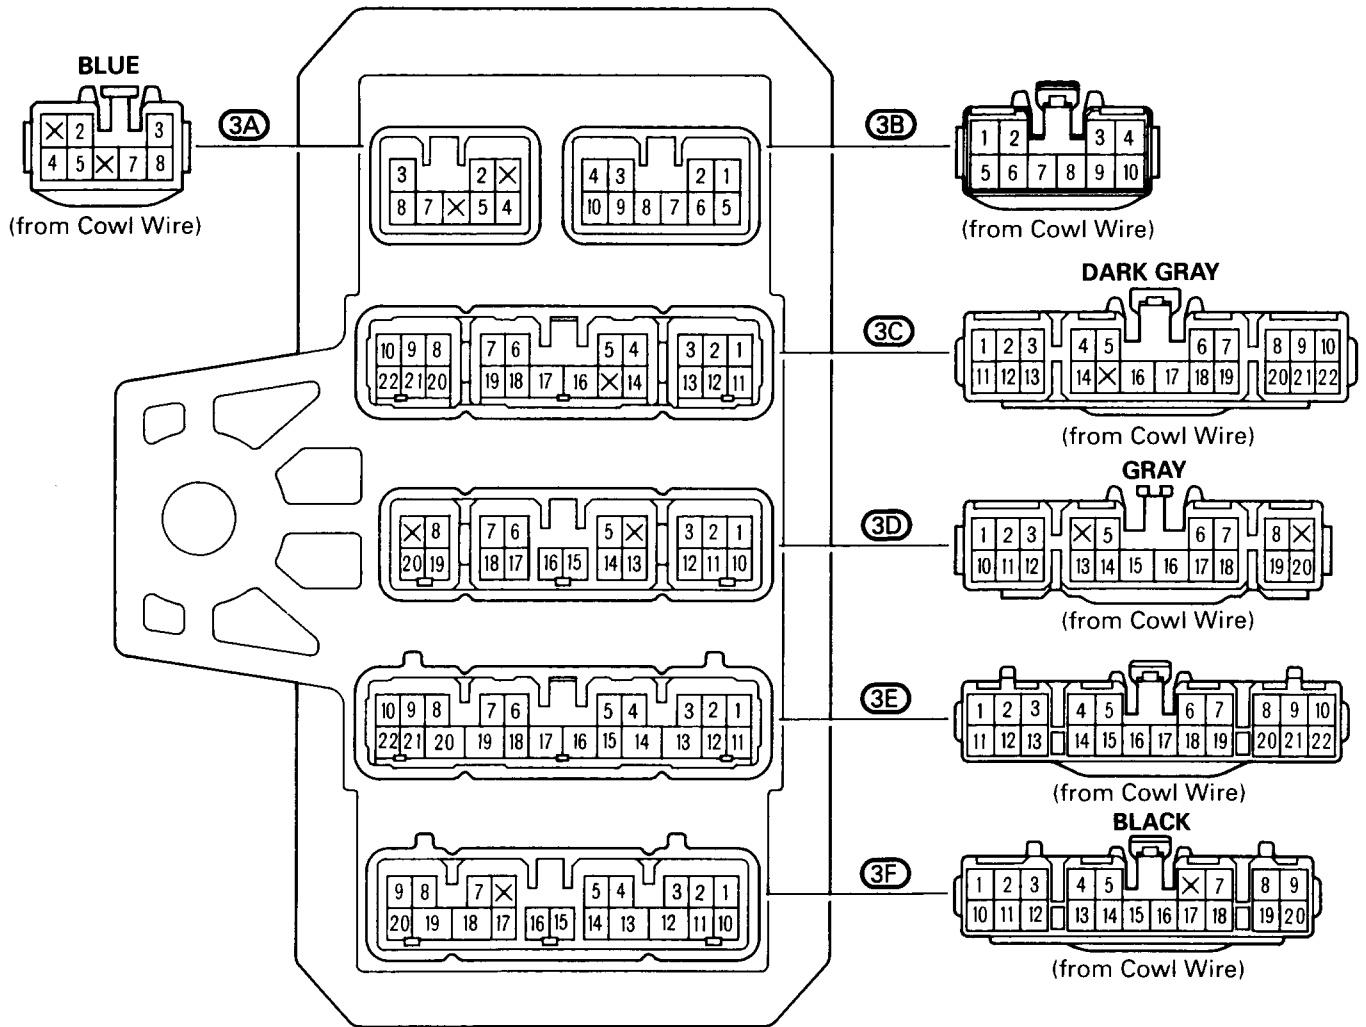

[Center J/B Inner Circuit]