



SERVICE HINTS

R 1 (A) RADIO AND PLAYER (BUILT-IN TYPE AMPLIFIER) OR STEREO POWER AMPLIFIER (SEPARATE TYPE AMPLIFIER)

- (A) GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT ON OR ACC POSITION
- (A) GROUND : ALWAYS APPROX. 12 VOLTS
- (A) GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A23	30	R 1	A	31	
F 8	32	R 2	B	31	
F 9	32	R11		33	

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	20 (USA) 21 (CANADA)	ENGINE ROOM R/B (ENGINE COMPARTMENT LEFT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1B	22	COWL WIRE AND DRIVER SIDE J/B (LOWER FINISH PANEL)
1F		
1J	22	ENGINE ROOM MAIN WIRE AND DRIVER SIDE J/B (LOWER FINISH PANEL)
3B	24	COWL WIRE AND CENTER J/B (NEAR THE STEERING COLUMN TUBE)
3C		

 
□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IE1	40	COWL WIRE AND FLOOR NO.2 WIRE (LEFT KICK PANEL)
IF1	40	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
IK1	40	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
IL2	40	COWL WIRE AND FLOOR WIRE (RIGHT KICK PANEL)
BM1	42	REAR DOOR LH WIRE AND FLOOR NO.2 WIRE (LEFT CENTER PILLAR)
BQ1	42	FRAME WIRE AND FLOOR NO.2 WIRE (UNDER THE LEFT SIDE OF REAR SEAT CUSHION)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	40	LEFT KICK PANEL


A23 GRAY




F 8, F 9

 

R 1 (A)

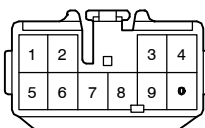

R 2 (B)

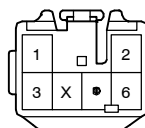

R11, R12

