



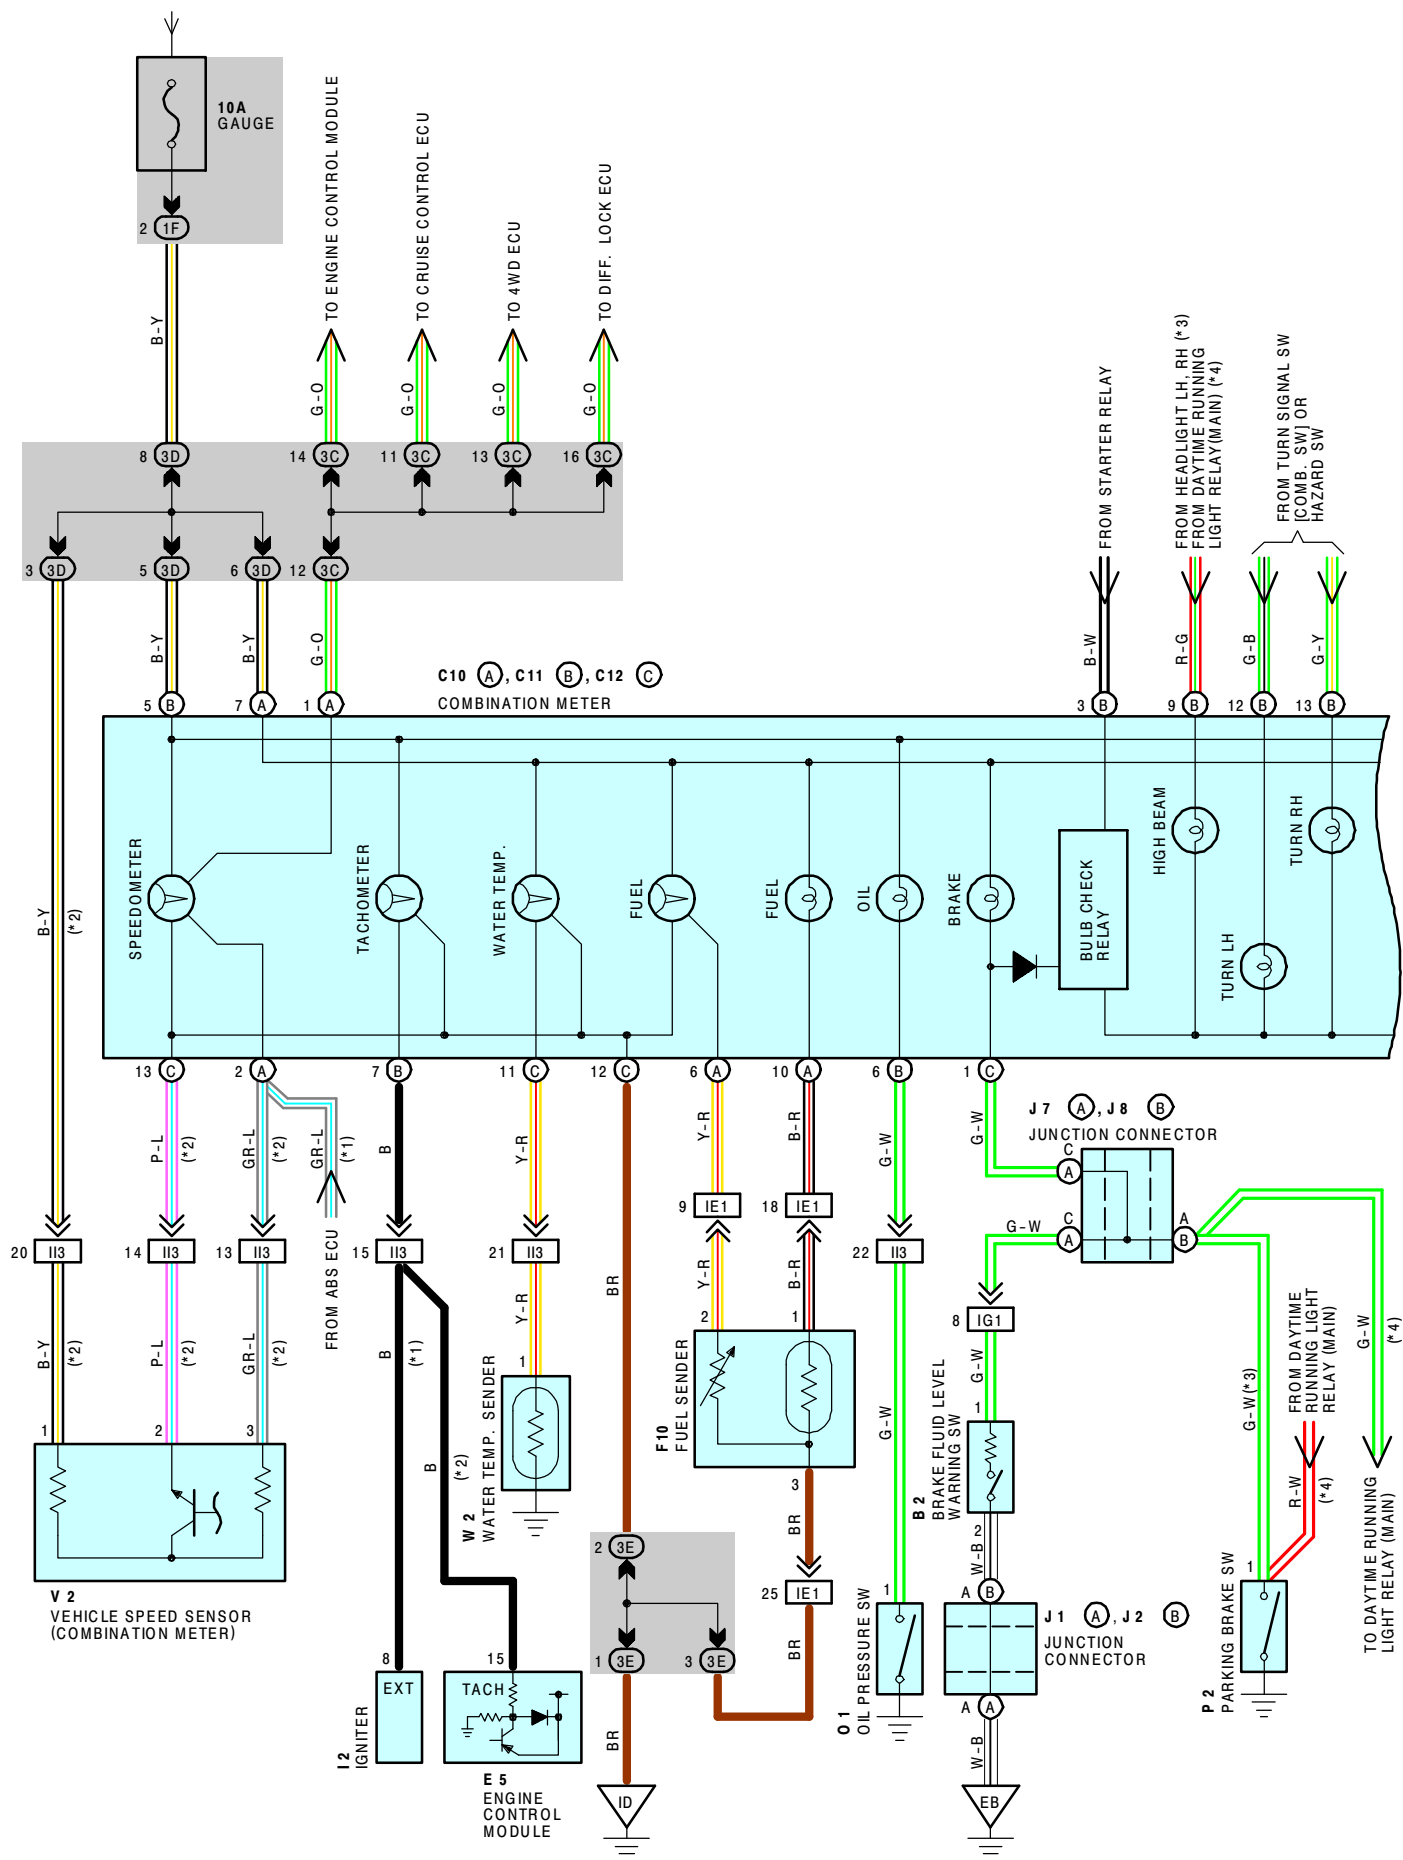

COMBINATION METER

FROM POWER SOURCE SYSTEM (SEE PAGE 58)

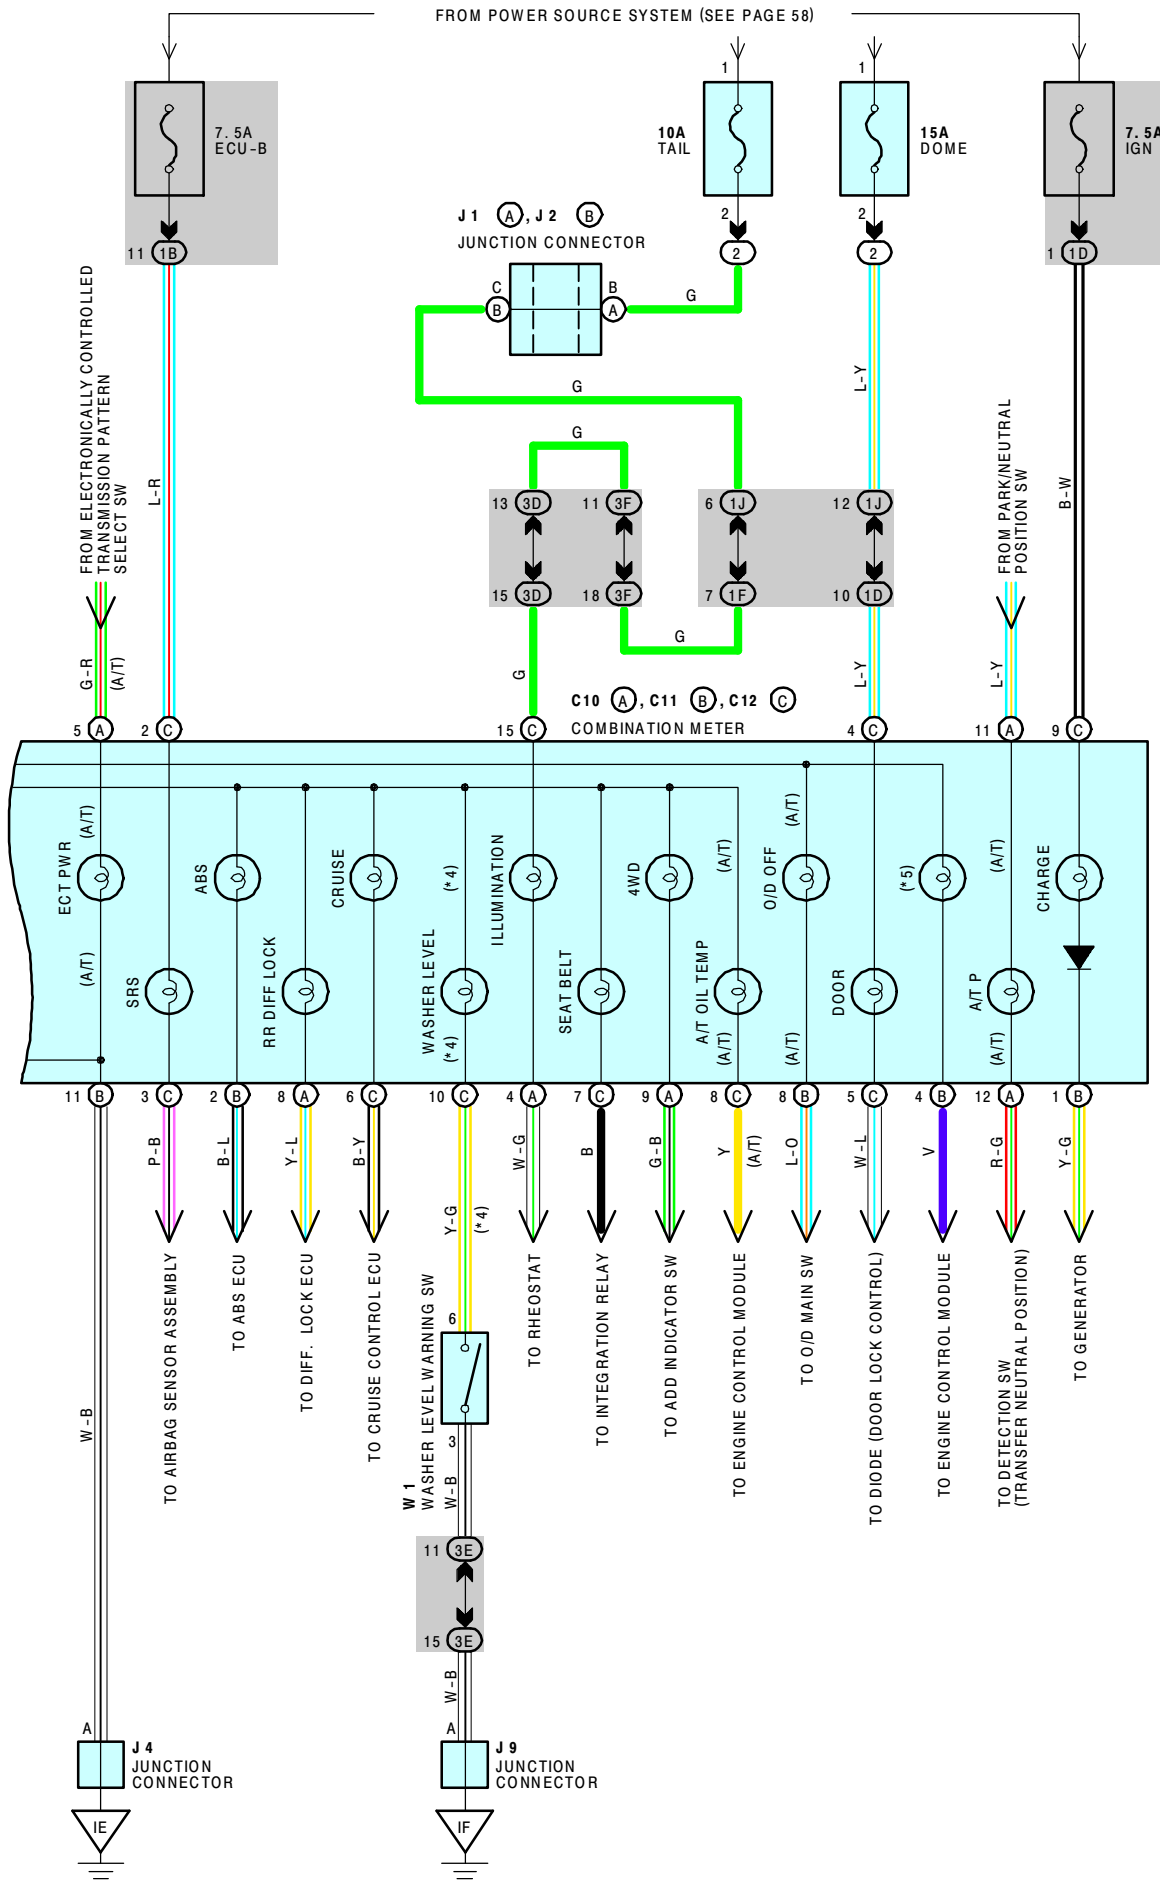





COMBINATION METER

SERVICE HINTS

B2 BRAKE FLUID LEVEL SW

1-2 : CLOSED WITH FLOAT DOWN

C10 , C11 , C12 COMBINATION METER

 9-GROUND : APPROX. 12 VOLTS WITH IGNITION SW ON

 5,  7-GROUND : APPROX. 12 VOLTS WITH IGNITION SW ON

 11,  12-GROUND : ALWAYS CONTINUITY

P 2 PARKING BRAKE SW

1-GROUND : CLOSED WITH PARKING BRAKE LEVER PULLED UP

: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B 2	26 (5VZ-FE), 28 (3RZ-FE)	I 2	27 (5VZ-FE)	J 9	31
C10	A 30	J 1	A 27 (5VZ-FE), 29 (3RZ-FE)	O 1	27 (VZ-FE), 29 (3RZ-FE)
C11	B 30	J 2	B 27 (5VZ-FE), 29 (3RZ-FE)	P 2	31
C12	C 30	J 4	31	V 2	29 (RZ-FE)
E 5	31	J 7	A 31	W 1	27 (VZ-FE), 29 (3RZ-FE)
F10	32	J 8	B 31	W 2	27 (VZ-FE), 29 (3RZ-FE)

: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	20 (USA) 21 (CANADA)	ENGINE ROOM R/B (ENGINE COMPARTMENT LEFT)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1B	22	COWL WIRE AND DRIVER SIDE J/B (LOWER FINISH PANEL)
1D		
1F		
1J	22	ENGINE ROOM MAIN WIRE AND DRIVER SIDE J/B (LOWER FINISH PANEL)
3C	24	COWL WIRE AND CENTER J/B (NEAR THE STEERING COLUMN TUBE)
3D		
3E		
3F		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IE1	40	COWL WIRE AND FLOOR NO.2 WIRE (LEFT KICK PANEL)
IG1	40	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
I13	40	ENGINE WIRE AND COWL WIRE (ON THE GLOVE BOX)

: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	36 (5VZ-FE) 38 (3RZ-FE)	FRONT LEFT FENDER
ID	40	LEFT KICK PANEL
IE	40	COIL SIDE PANEL LH
IF	40	COWL SIDE PANEL RH

