



SERVICE HINTS

R15 REAR HEATER BLOWER SW

2-3 : CLOSED WITH THE IGNITION SW AT ON AND REAR HEATER BLOWER SW AT **LO** POSITION
1, 3-2 : CLOSED WITH THE IGNITION SW AT ON AND REAR HEATER BLOWER SW AT **HI** POSITION

R16 REAR HEATER RELAY

5-3 : CLOSED WITH THE IGNITION SW AT **ON** POSITION AND REAR HEATER BLOWER SW AT **HIGH** OR **LOW** POSITION

○ : PARTS LOCATION

CODE		SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
I15	A	31	R13	33	R15	33
J 9		31	R14	33	R16	33

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	20 (USA) 21 (CANADA)	ENGINE ROOM R/B (ENGINE COMPARTMENT LEFT)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IG1	40	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
IL2	40	COWL WIRE AND FLOOR WIRE (RIGHT KICK PANEL)
BP1	42	FLOOR WIRE AND REAR HEATER SUB WIRE (UNDER THE FRONT PASSENGER'S SEAT)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IF	40	COWL SIDE PANEL RH

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B 8	42	REAR HEATER SUB WIRE			

