


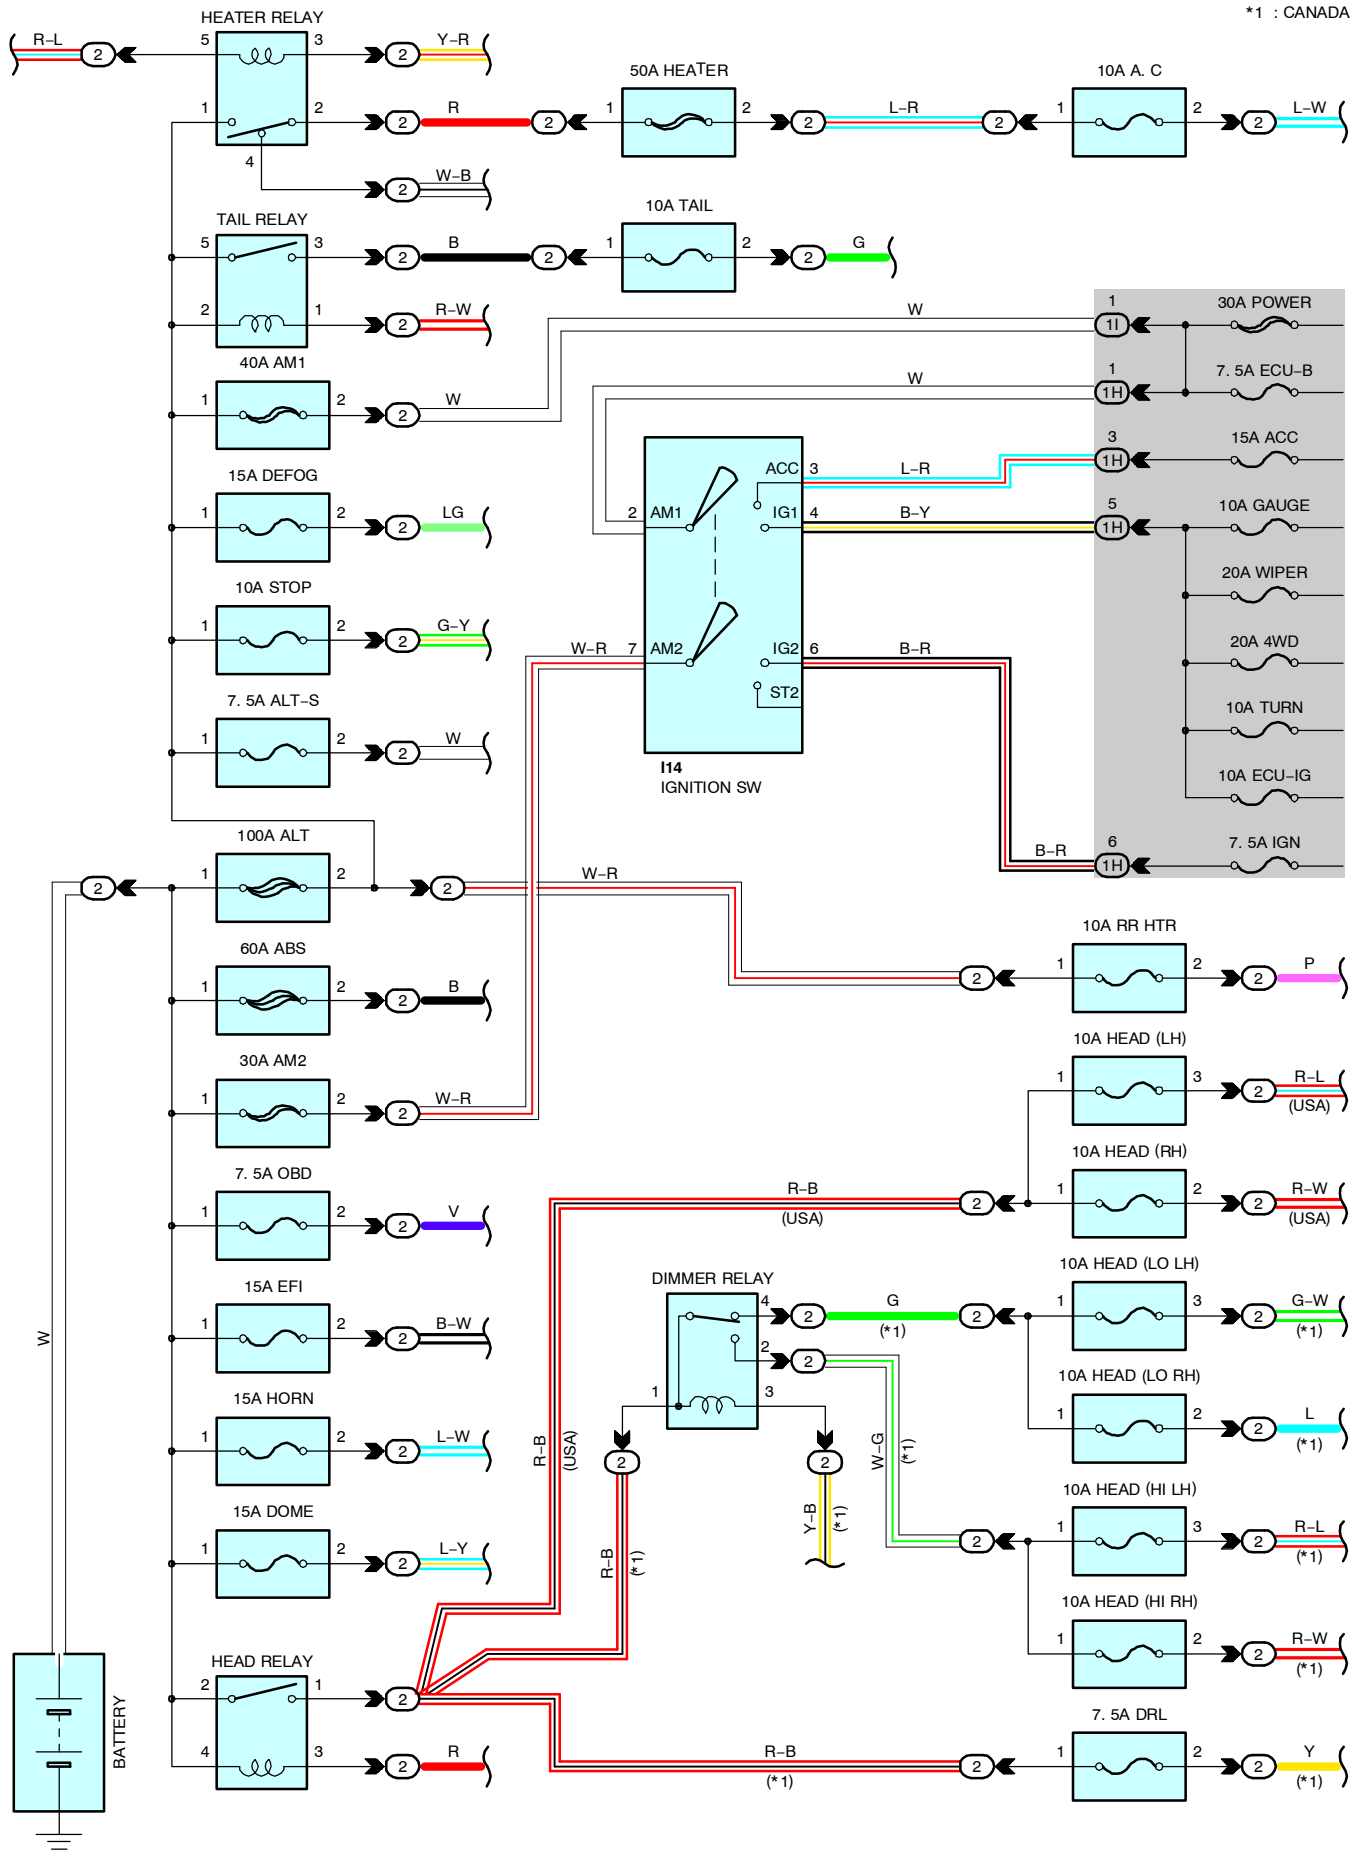

POWER SOURCE

*1 : CANADA



SERVICE HINTS

HEATER RELAY

(2) **(22)** 1 : CLOSED WITH IGNITION SW ON AND BLOWER SW ON

HEAD RELAY

(2) **2** **(2)** 1 : CLOSED WITH LIGHT CONTROL SW AT HEAD POSITION OR DIMMER SW AT FLASH POSITION
CLOSED WITH ENGINE RUNNING AND PARKING BRAKE LEVER RELEASED (CANADA)

I14 IGNITION SW

2-3 : CLOSED WITH IGNITION KEY AT **ACC** OR **ON** POSITION
2-4 : CLOSED WITH IGNITION KEY AT **ON** OR **ST** POSITION
7-6 : CLOSED WITH IGNITION KEY AT **ON** OR **ST** POSITION

TAIL RELAY

3-4: CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

DIMMER RELAY

CHANGED FROM HEAD(LO) TO HEAD(HI) WITH DIMMER SW AT **FLASH** POSITION OR WITH HEAD RELAY ON
AND DIMMER SW AT **HIGH** POSITION (CANADA)

: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
I14	31				

: RELAY BLOCKS

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
2	20 (USA)	ENGINE ROOM R/B (ENGINE COMPARTMENT LEFT)
	21 (CANADA)	

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1H	22	ENGINE ROOM MAIN WIRE AND DRIVER SIDE J/B (LOWER FINISH PANEL)
1I		

I14

