



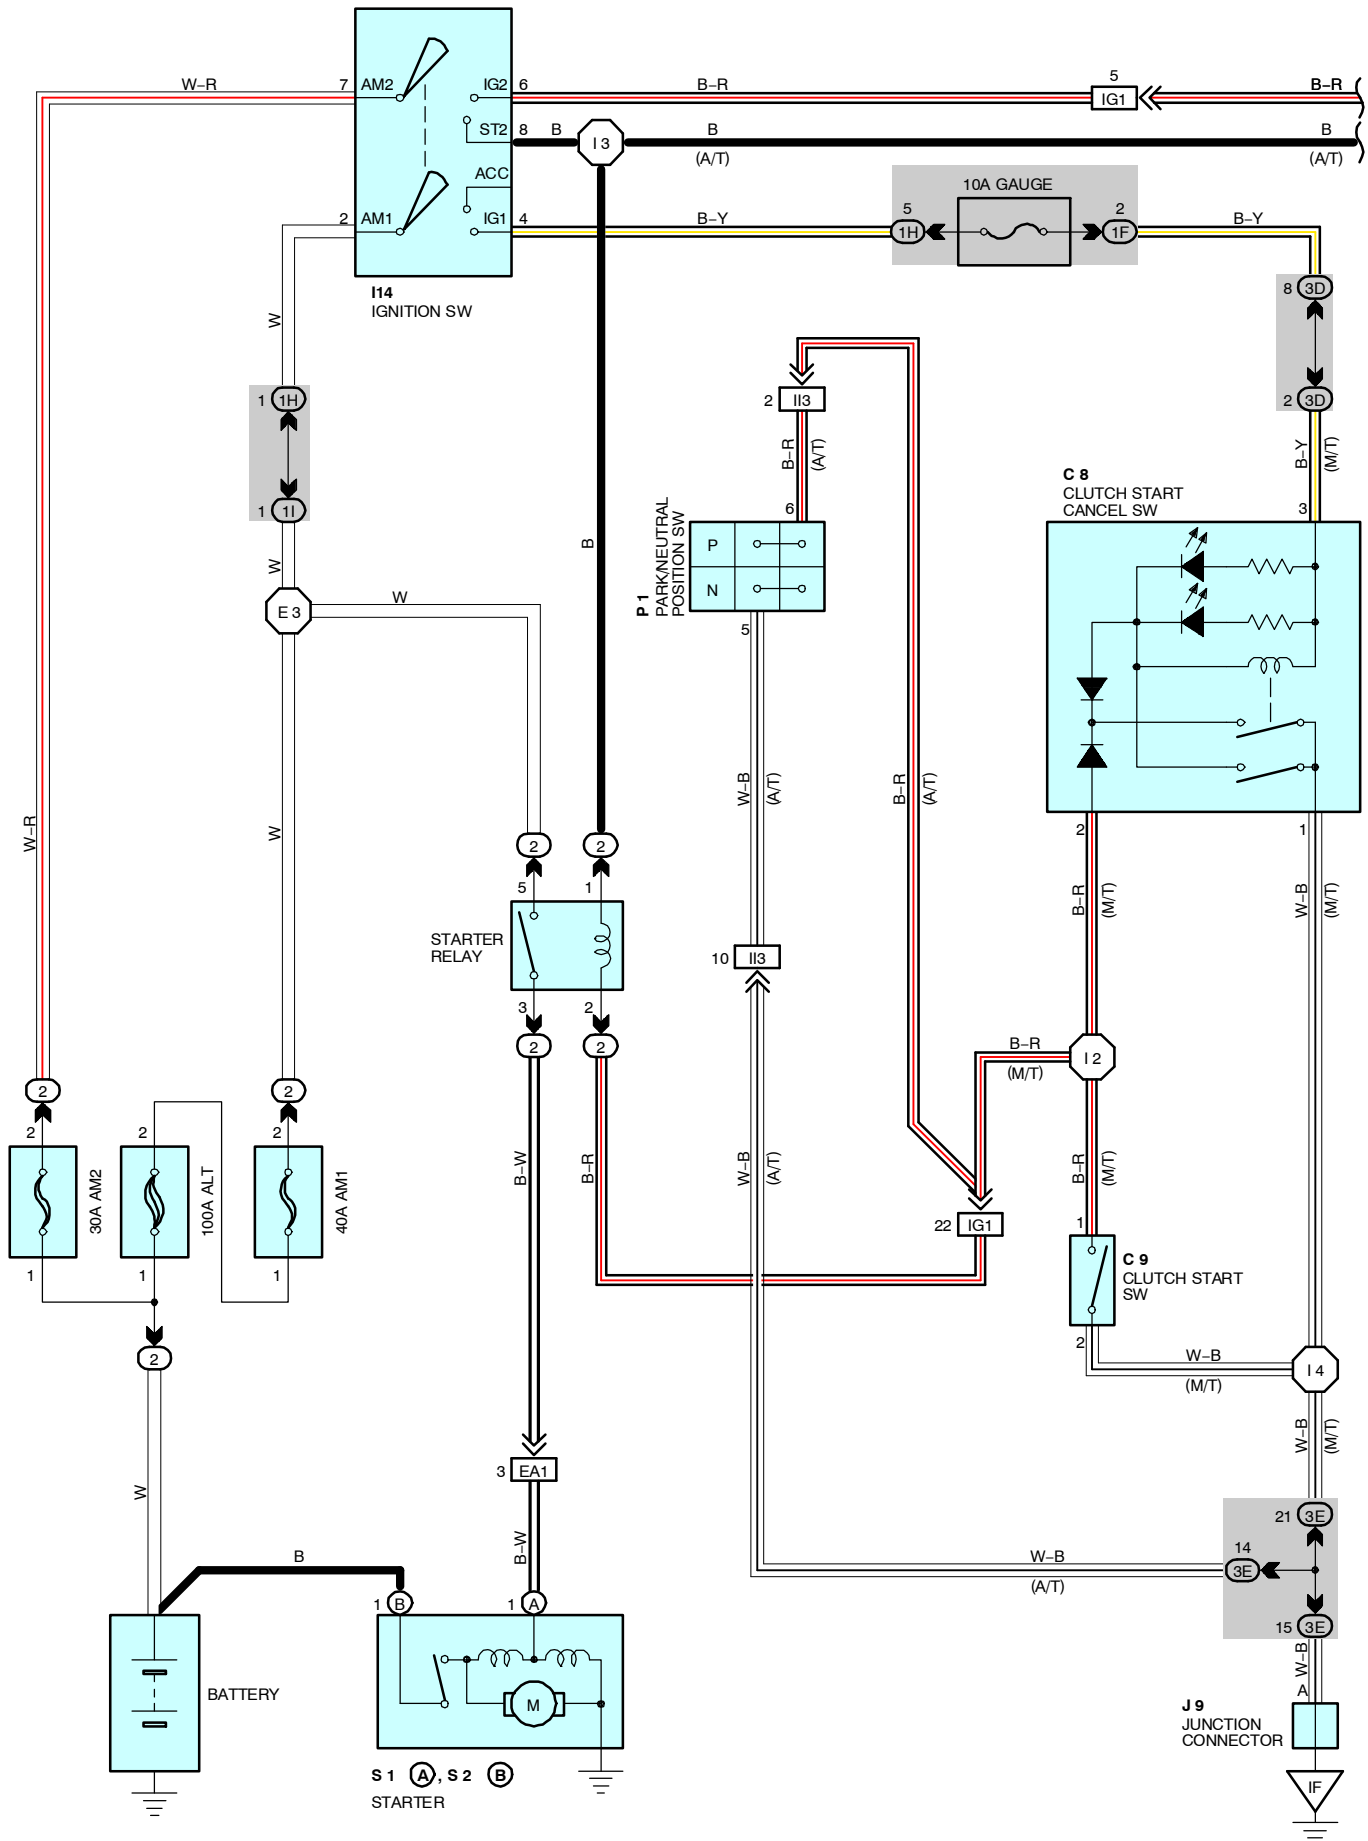

STARTING AND IGNITION (3RZ-FE)

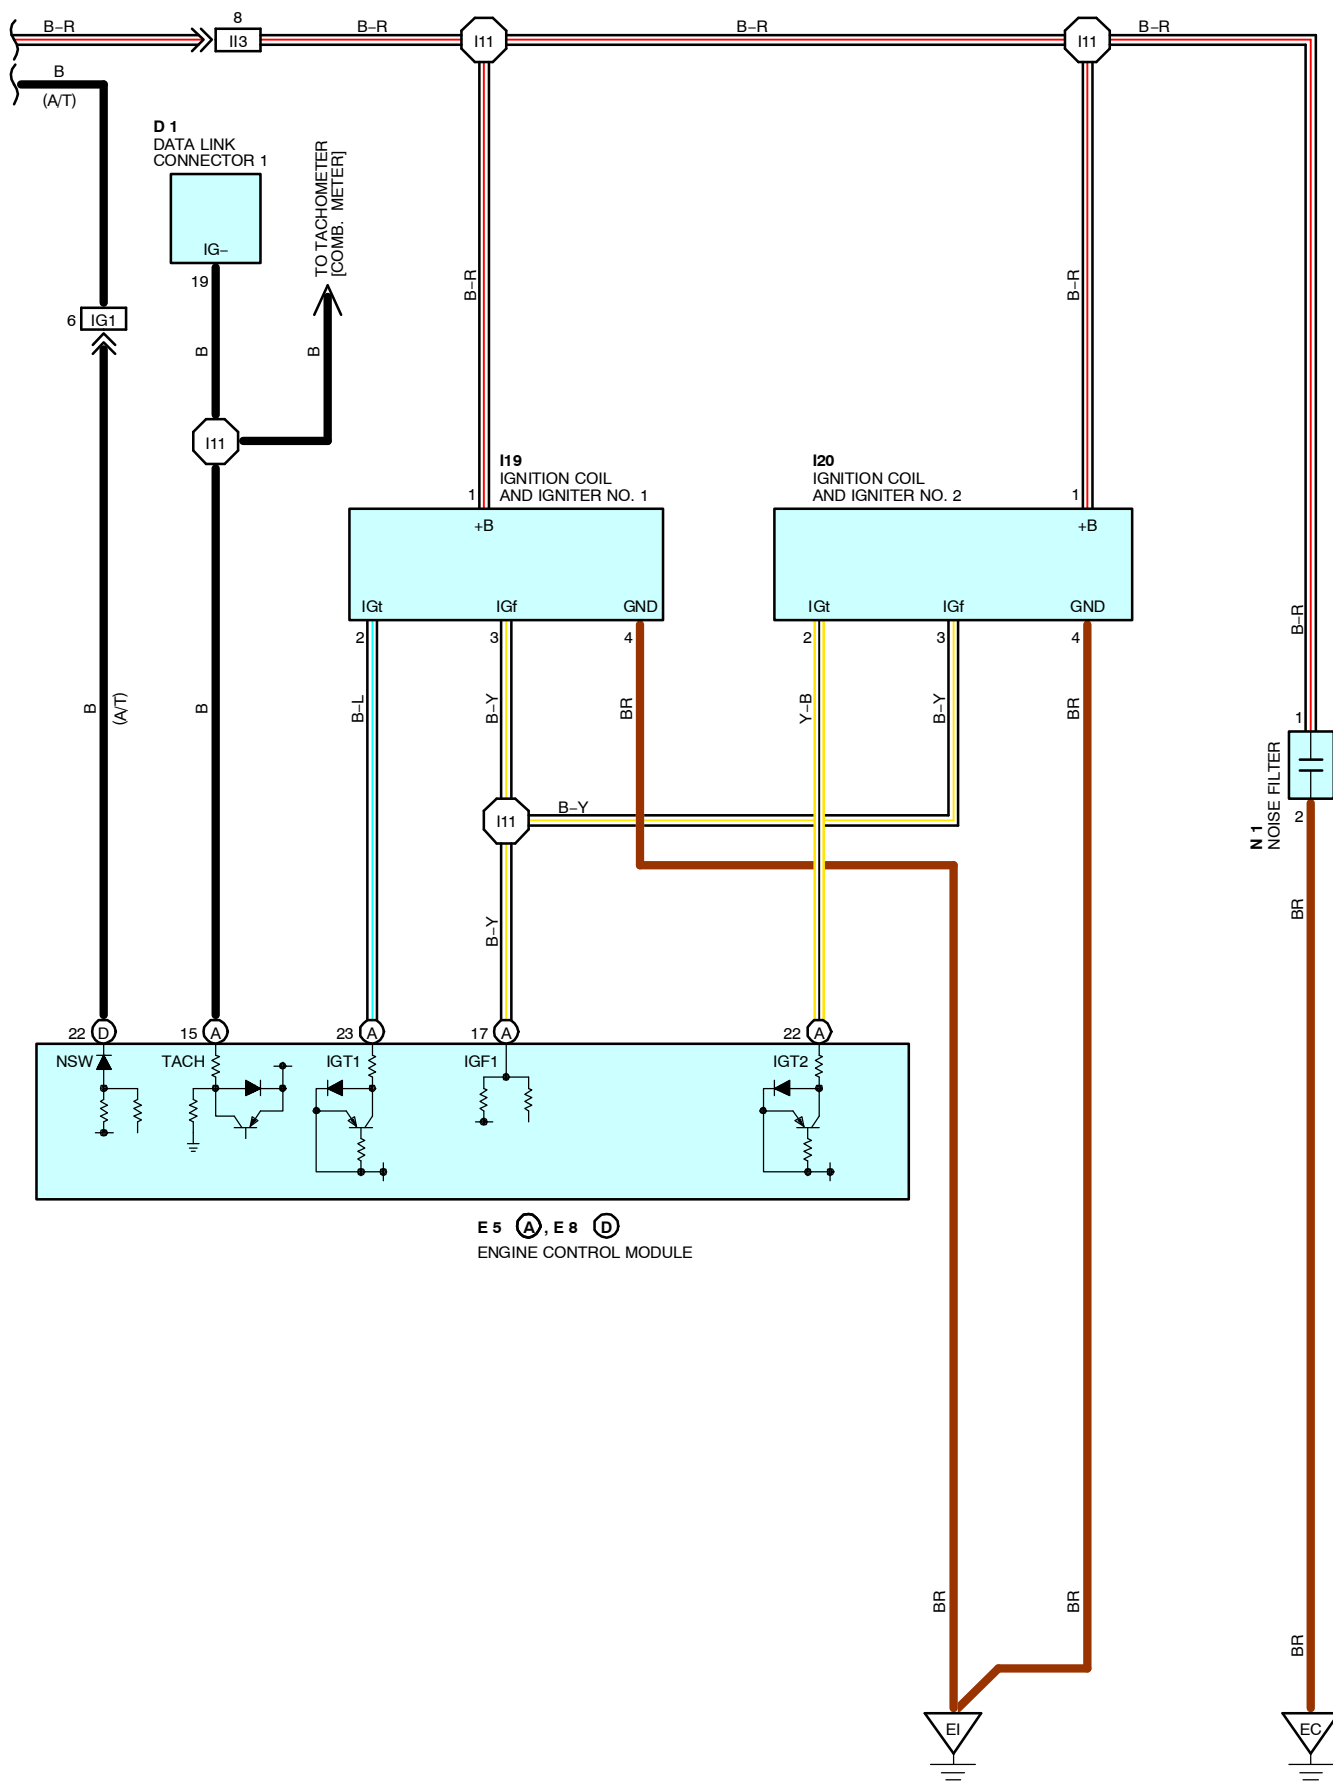





STARTING AND IGNITION (3RZ-FE)

SERVICE HINTS

S 1^(A) , S 2^(M) STARTER

POINTS CLOSED WITH PARK/NEUTRAL POSITION SW **P** OR **N** POSITION AND IGNITION SW AT **ST** POSITION (A/T)
POINTS CLOSED WITH CLUTCH START SW OR CLUTCH START CANCEL SW ON AND IGNITION SW AT **ST** POSITION (M/T)

C 9 CLUTCH START SW

1-2 : CLOSED WITH CLUTCH PEDAL FULLY DEPRESSED

C 8 CLUTCH START CANCEL SW (M/T)

1-2 : CLOSED WITH IGNITION SW ON AND CANCEL SW ON

I14 IGNITION SW

2-4, 7-6 : CLOSED WITH IGNITION SW AT **ON** OR **ST** POSITION
7-8 : CLOSED WITH IGNITION SW AT **ST** POSITION

STARTER RELAY

3-5 : CLOSED WITH PARK/NEUTRAL POSITION SW AT **P** OR **N** POSITION AND IGNITION SW AT **ST** POSITION (A/T)
3-5 : CLOSED WITH CLUTCH START SW OR CLUTCH START CANCEL SW ON AND IGNITION SW AT **ST** POSITION (M/T)

P1 PARK/NEUTRAL POSITION SM (A/T)

6-5 : CLOSED WITH A/T SHIFT LEVER IN **P** OR **N** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C 8	30	I14	31	P 1	29 (3RZ-FE)
C 9	30	I19	29 (3RZ-FE)	S 1	A 29 (3RZ-FE)
D 1	28 (3RZ-FE)	I20	29 (3RZ-FE)	S 2	B 29 (3RZ-FE)
E 5	A 31	J 9	31		
E 8	D 31	N 1	29 (3RZ-FE)		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	20 (USA) 21 (CANADA)	ENGINE ROOM R/B (ENGINE CONPARTMENT LEFT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1F	22	COWL WIRE AND DRIVER SIDE J/B (LOWER FINISH PANEL)
1H	22	ENGINE ROOM MAIN WIRE AND DRIVER SIDE J/B (LOWER FINISH PANEL)
1I	22	ENGINE ROOM MAIN WIRE AND DRIVER SIDE J/B (LOWER FINISH PANEL)
3D	24	COWL WIRE AND CENTER J/B (NEAR THE STEERING COLUMN TUBE)
3E	24	COWL WIRE AND CENTER J/B (NEAR THE STEERING COLUMN TUBE)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	38 (3RZ-FE)	ENGINE NO.2 WIRE AND ENGINE ROOM MAIN WIRE (NEAR THE ENGINE ROOM R/B)
IG1	40	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
II3	40	ENGINE WIRE AND COWL WIRE (ON THE GLOVE BOX)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EC	38 (3RZ-FE)	INTAKE MANIFOLD
EI	38 (3RZ-FE)	IGNITION COIL BRACKET
IF	40	COWL SIDE PANEL RH


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 3	38 (3RZ-FE)	ENGINE ROOM MAIN WIRE	I 4	40	COWL WIRE
I 2	40	COWL WIRE	I11	40	ENGINE WIRE
I 3	40	ENGINE ROOM MAIN WIRE			

 
C 8 GRAY




C 9

 


D 1 BLACK

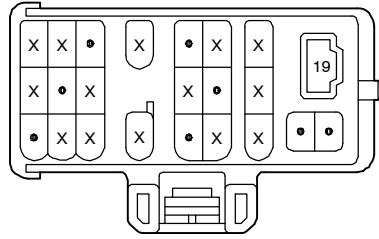


(M/T) E 5 (A)

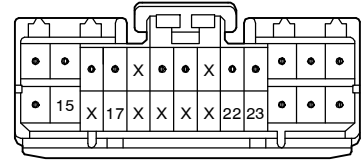


(A/T) E 5 (A)

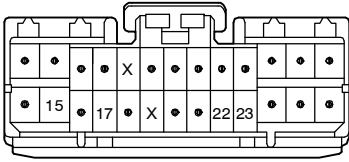


E 8 (D)

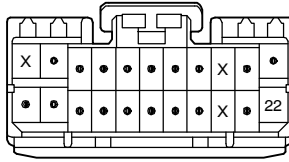


I14

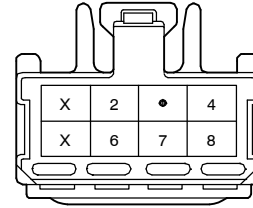

I19, I20 BLACK

 


J 9

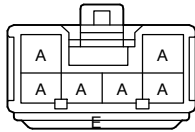


(HINT SEE PAGE 7)


N 1 GRAY

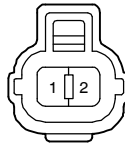

P 1 GRAY

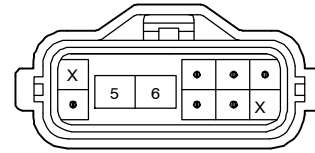

S 1 (A) BLACK

 

S 2 (B)

