


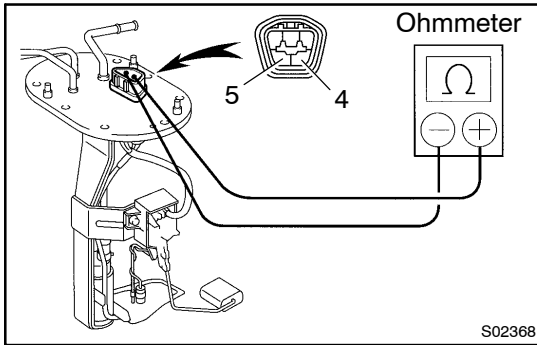


INSPECTION

1. INSPECT FUEL PUMP RESISTANCE

Using an ohmmeter, measure the resistance between the terminals.

Resistance: At 20°C (68°F): 0.2 – 3.0 Ω

If the resistance is not as specified, replace the fuel pump and/or set plate.

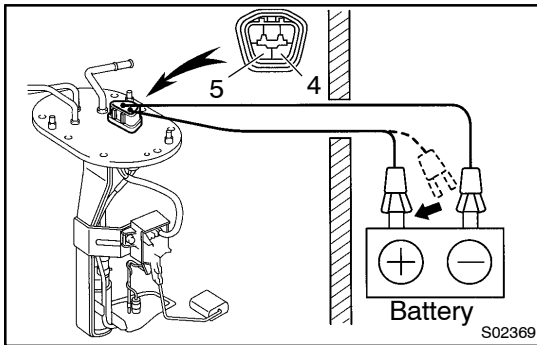

2. INSPECT FUEL PUMP OPERATION

Connect the positive (+) lead from the battery to terminal 4 of the connector, and the negative (-) lead to terminal 5. Check that the fuel pump operates.

NOTICE:

These tests must be done quickly (within 10 seconds) to prevent the coil from burning out. Keep the fuel pump as far away from the battery as possible. Always do switching at the battery side.

If operation is not as specified, replace the fuel pump and/or plate.