



ARC LIGHT

Note:


Save all packing materials, documents, and the box in case you need to ship your kit or contact customer support.



1. Remove the rear hatch lights using a flat tool to release the spring that's located on the right side. Note that the entire light assembly including the lens will be coming off as one big unit.
2. Remove the lens by lifting up the 4 tabs located around it. Then remove the incandescent bulb.

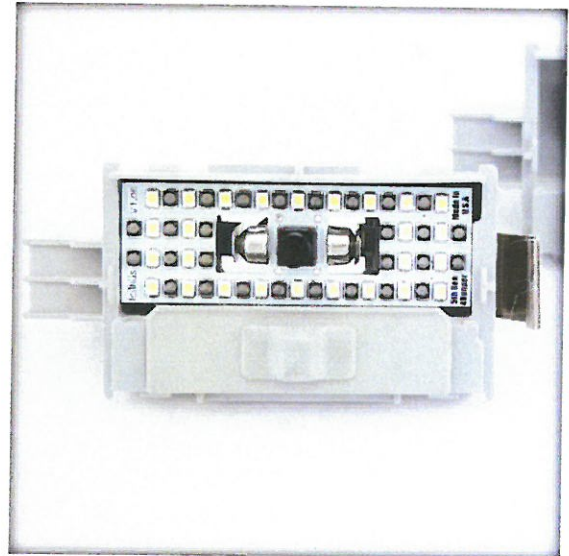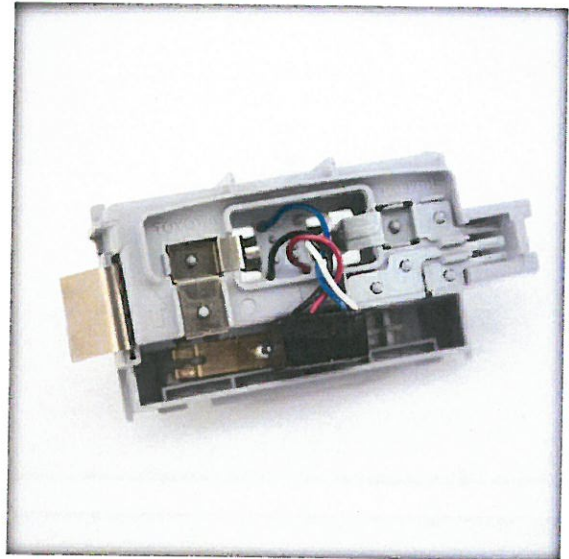

3. Located the black rectangular LED Driver and route it through the housing and secure it to the back with the supplied double sided tape. Please note that you may have to clean this area before attaching the LED Driver. Now orient the LED panel as shown above and ensure the panel is secured with the housing's metal bulb contacts – it may be necessary to bend the contacts slightly to ensure a secure and level fit.

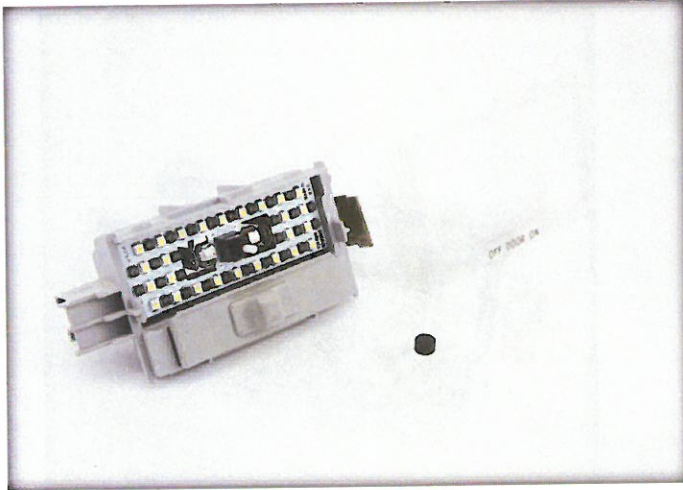

5. **NOTE:** Be sure not to lose the switch head. Replacements require purchasing a whole new switch and I do not have spares. Reinstall the hatch light and verify the LED panel lights up. If it does not you will need to rotate the panel 180degrees to correct the polarity.

NOTES ON OPTIONAL FEATURES:

- To switch between White/Red LEDS simply push in the switch on the LED board.



4. If you purchased the switchable hatch light you will need to drill a hole in the lens. Start by pulling off the black switch head and then orient the clear lens back onto the hatch light. Take note where to drill the hole and carefully start drilling a small hole and gradually go bigger while periodically checking to the hole/switch placement.