


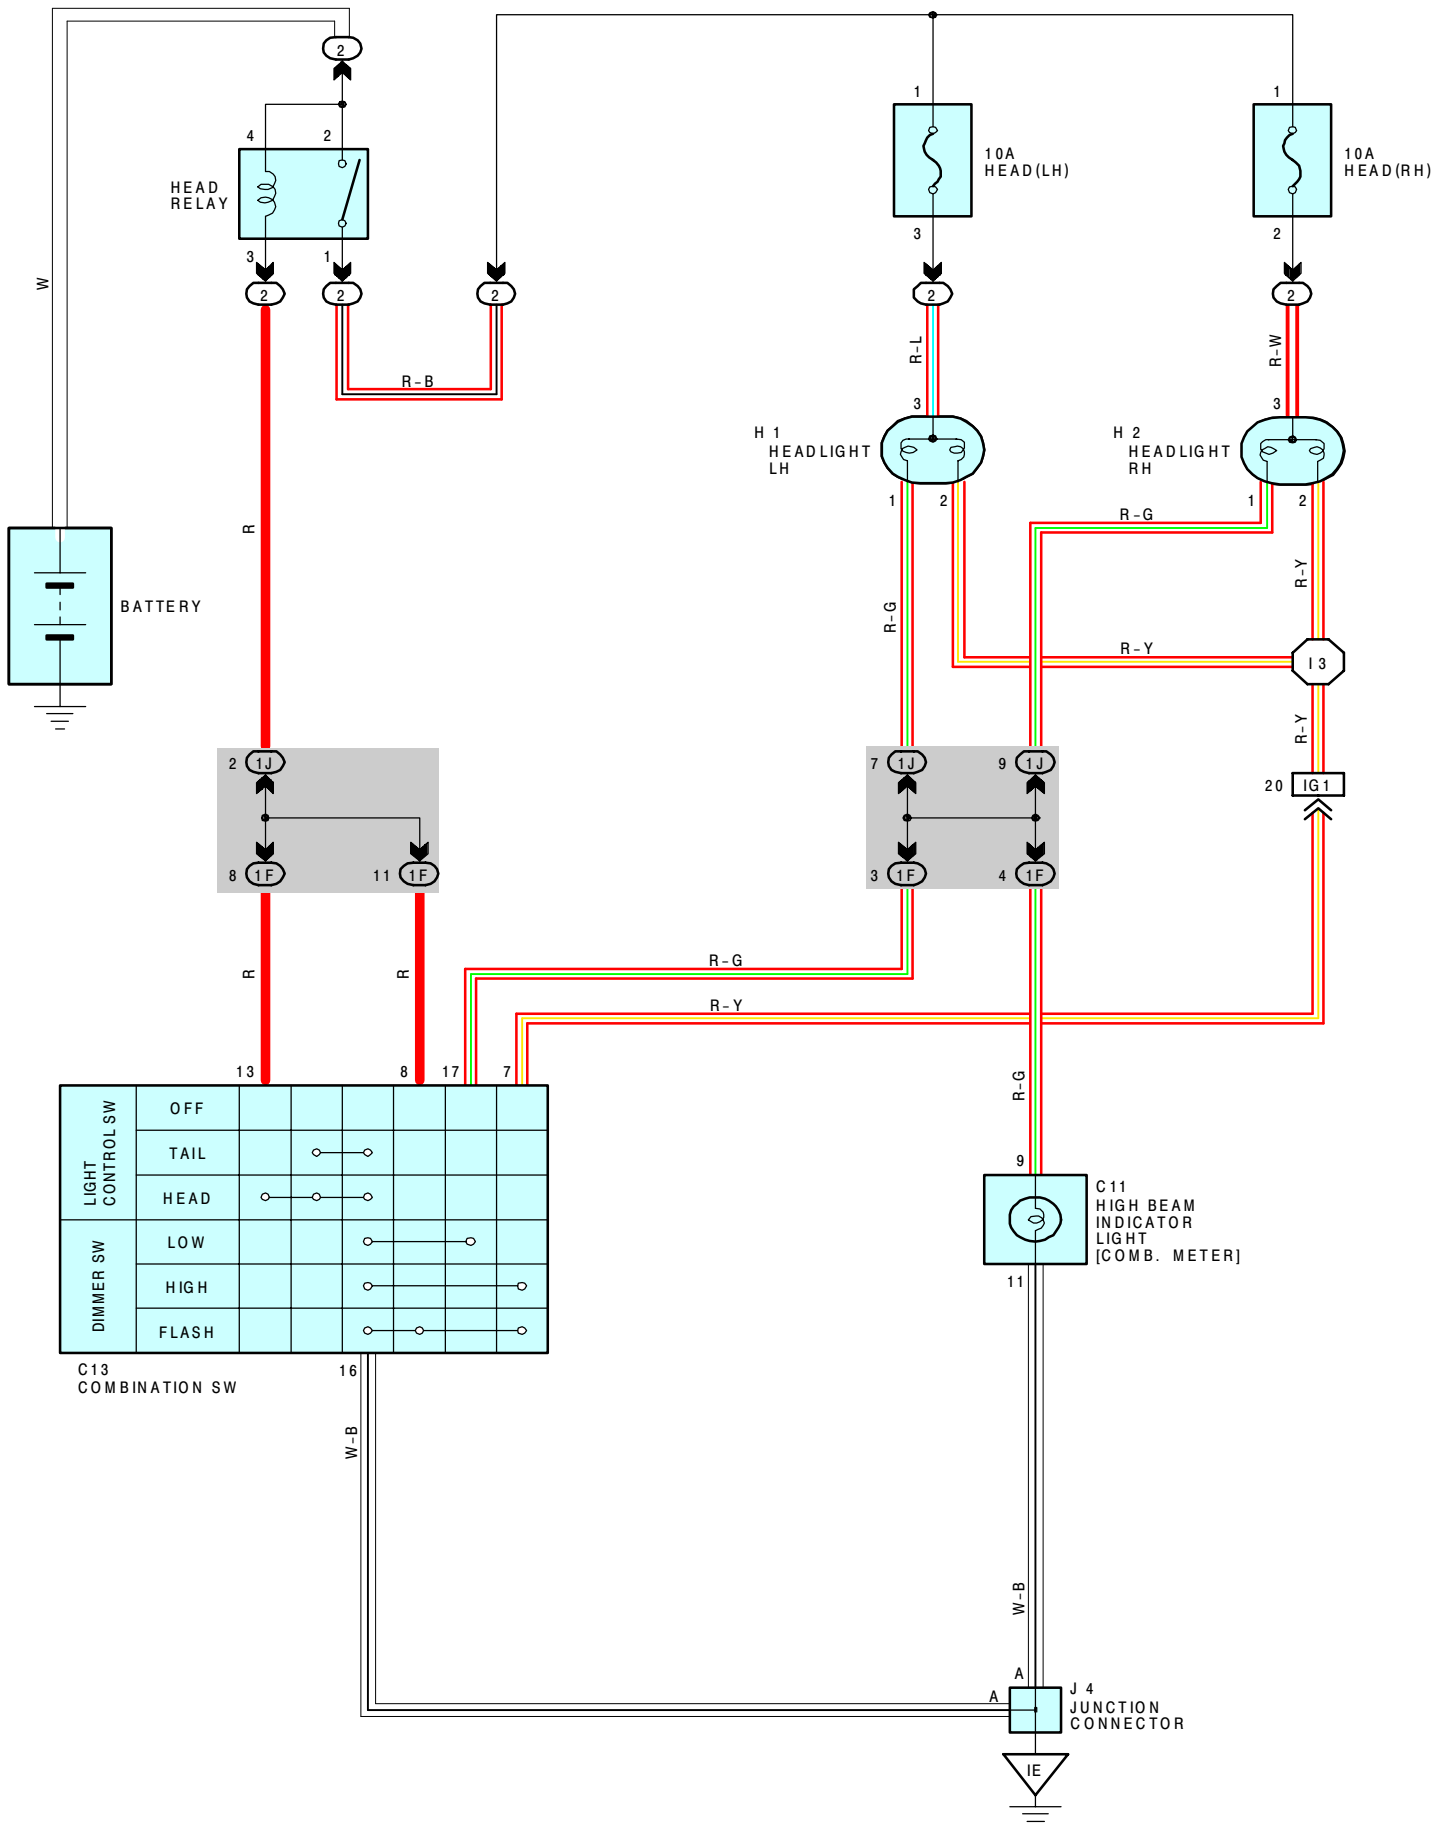

HEADLIGHT (USA)



SERVICE HINTS

HEAD RELAY

(2) 2- (2) 1 : CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION OR DIMMER SW AT **FLASH** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C11	30	H 1	27 (5VZ-FE), 29 (3RZ-FE)	J 4	31
C13	30	H 2	27 (5VZ-FE), 29 (3RZ-FE)		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	20 (USA)	ENGINE ROOM R/B (ENGINE COMPARTMENT LEFT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
IF	22	COWL WIRE AND DRIVER SIDE J/B (LOWER FINISH PANEL)
1J	22	ENGINE ROOM MAIN WIRE DRIVER SIDE J/B (LOWER FINISH PANEL)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS





CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IG1	40	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IE	40	COWL SIDE PANEL LH

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 3	40	ENGINE ROOM MAIN WIRE			

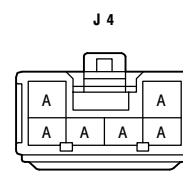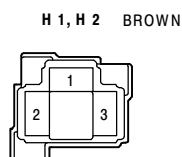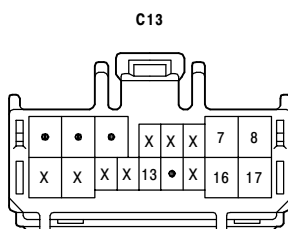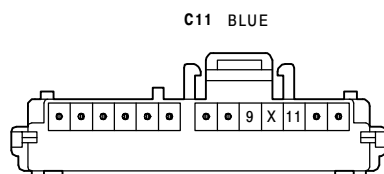

(HINT : SEE PAGE 7)