


HEADLIGHT (USA)

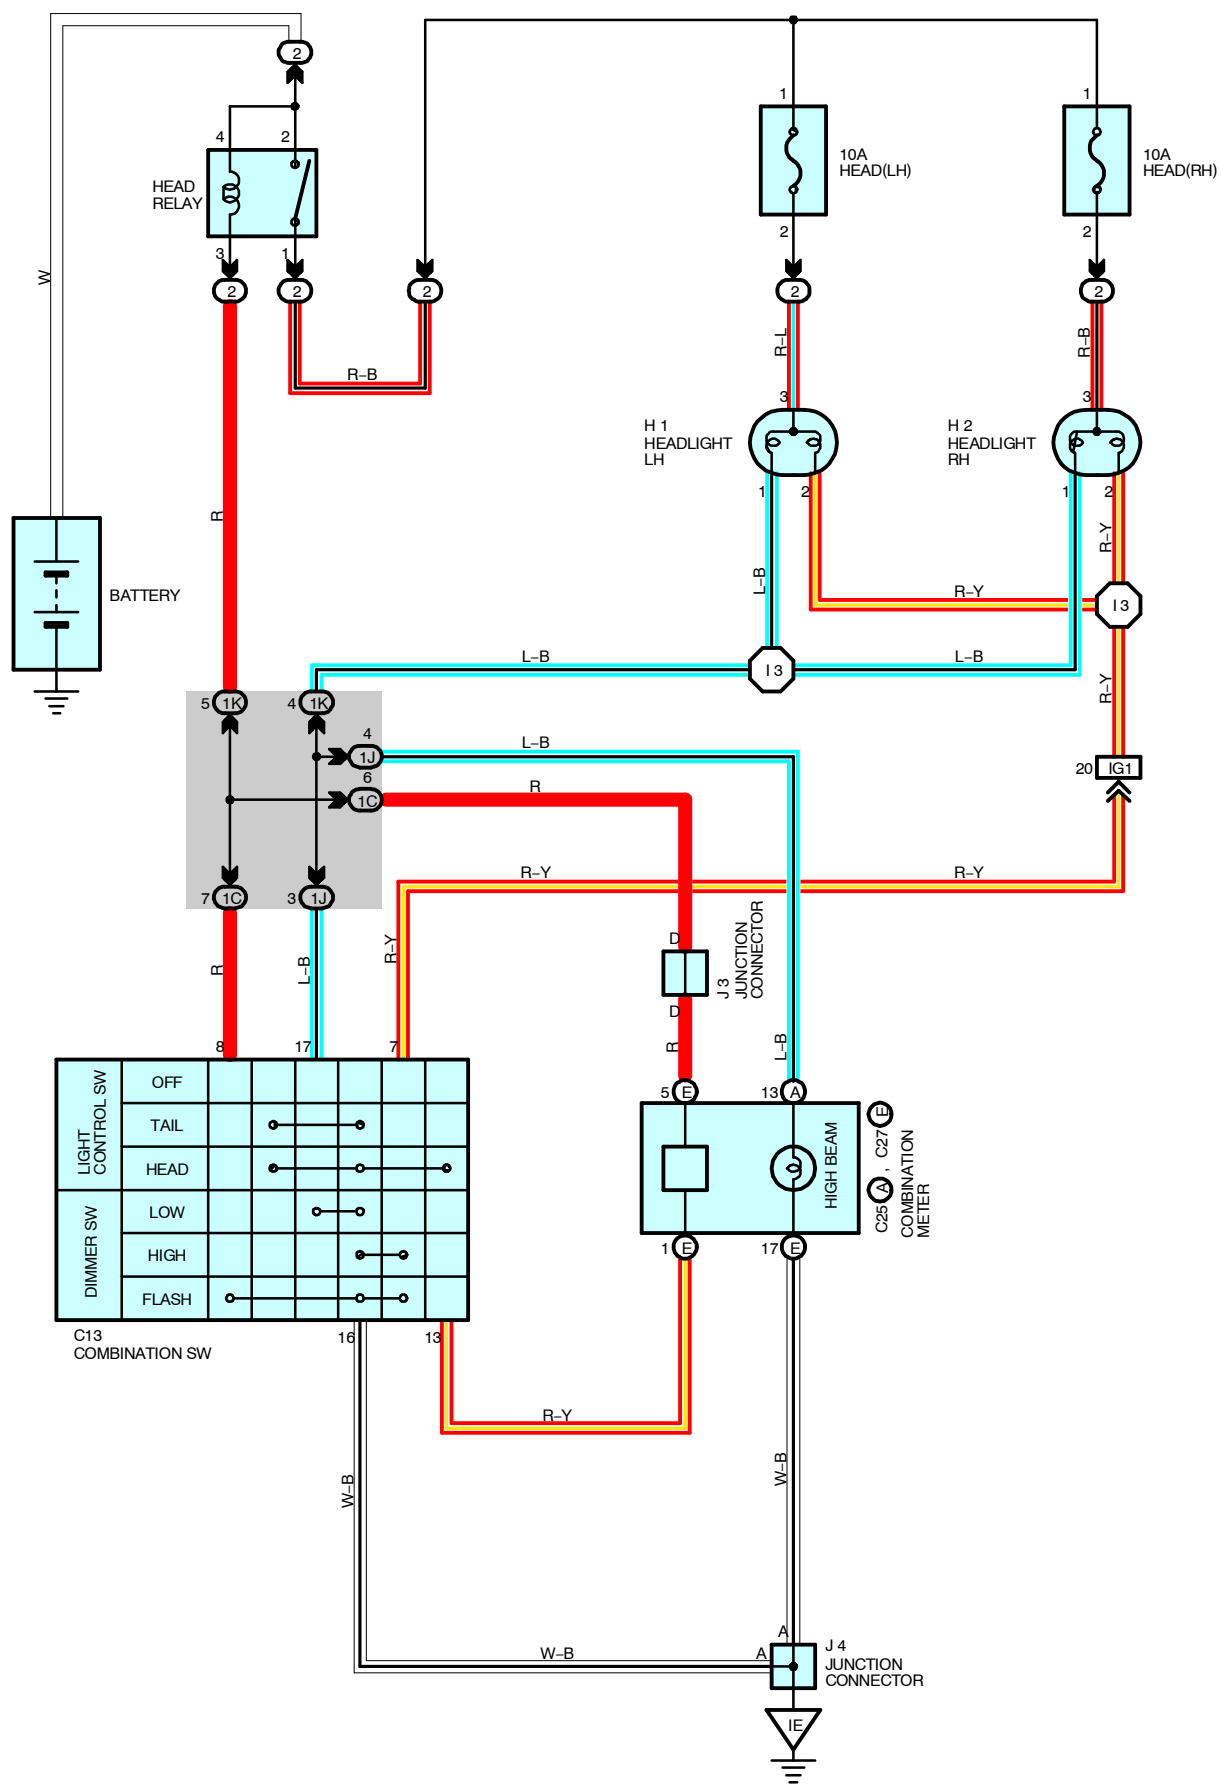

SERVICE HINTS

HEAD RELAY [ENGINE ROOM R/B]

2-1 : Closed with light control SW at **HEAD** position or dimmer SW at **FLASH** position

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C13	30	H1	26 (5VZ-FE)	H2	28 (3RZ-FE)
C25 A	30		28 (3RZ-FE)	J3	31
C27 E	30	H2	26 (5VZ-FE)	J4	31

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	20	Engine Room R/B (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	22	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1J		Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1K	22	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	40	Engine Room Main Wire and Cowl Wire (Left Kick Panel)


▽ : GROUND POINTS

Code	See Page	Ground Points Location
IE	40	Cowl Side Panel LH


○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I3	40	Engine Room Main Wire			


C13

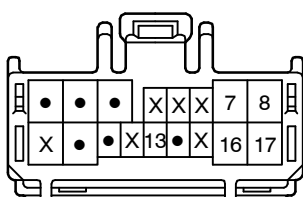

C25 (A)

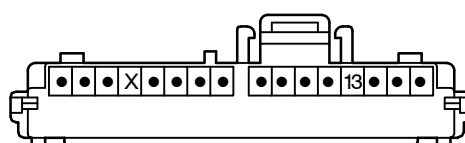


C27 (E)

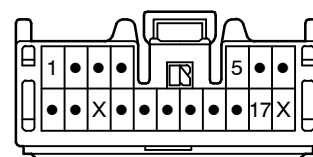


H1

 BROWN




H2

 BROWN




J3

BLUE

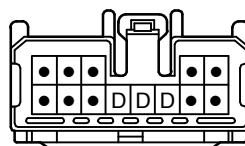

(Hint : See Page 7)

J4

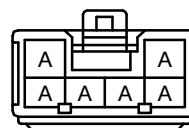

(Hint : See Page 7)