

REPLACEMENT

HINT:

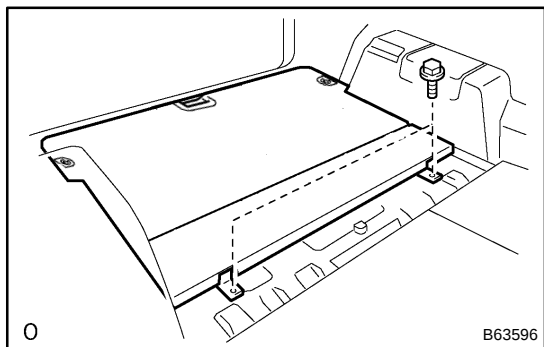
Installation is in the reverse order of the removal. However, when there is a special point concerning the illustration, it is indicated.

1. REMOVE TONNEAU COVER RETRACTOR SUB-ASSY

2. REMOVE BACK DOOR WEATHERSTRIP

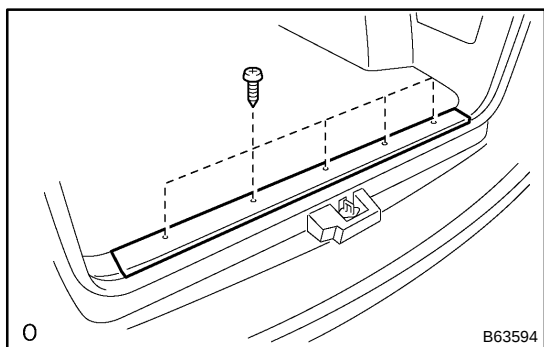
3. REMOVE DECK BOARD SUB-ASSY

- (a) Remove the 2 bolts and the deck board sub-assy.



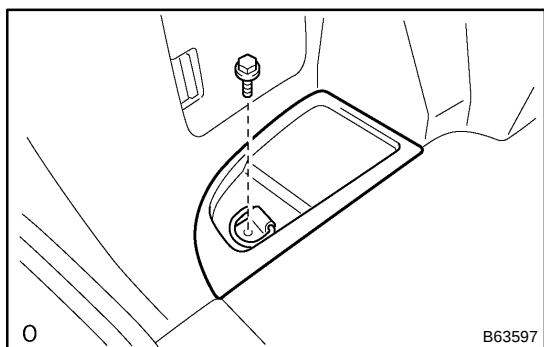
4. REMOVE DECK BOARD ASSY

- (a) Remove the 2 bolts and the deck board assy.



5. REMOVE REAR FLOOR MAT SUPPORT PLATE REAR

- (a) Remove the 5 bolts and mat support plate.



6. REMOVE DECK FLOOR BOX LH

- (a) Using a screwdriver, disengage the claws remove the cover.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the bolt, deck floor box and luggage hold belt striker.

7. REMOVE DECK FLOOR BOX RH

HINT:

Use the same procedures described above for the LH side.

8. REMOVE DECK TRIM COVER REAR

- (a) Using a screwdriver, pry out the trim cover rear.

HINT:

Tape the screwdriver tip before use.

9. REMOVE DECK TRIM SIDE BOARD UPR LH

- (a) Remove the screw and side board.

10. REMOVE DECK TRIM SIDE BOARD UPR RH

- (a) Remove the screw and side board.

11. REMOVE SIDE TRIM BOX ASSY LH

- (a) Remove the screw and side trim box.

12. REMOVE SIDE TRIM BOX ASSY RH

- (a) Remove the screw and side trim box.

13. REMOVE REAR DOOR SCUFF PLATE LH

- (a) Using a screwdriver, disengage the claws and remove the scuff plate.

HINT:

Tape the screwdriver tip before use.

14. REMOVE REAR DOOR SCUFF PLATE RH

HINT:

Use the same procedures described above for the LH side.

15. REMOVE FRONT DOOR SCUFF PLATE LH

- (a) Using a screwdriver, disengage the claws and remove the scuff plate.

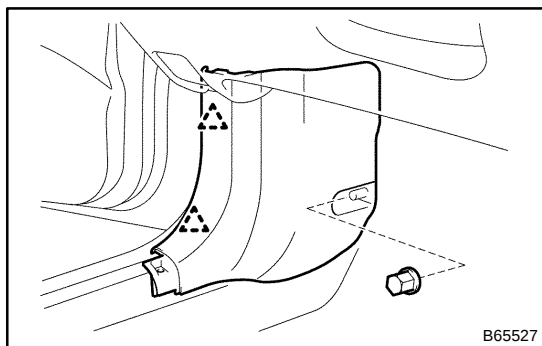
HINT:

Tape the screwdriver tip before use.

16. REMOVE FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedures described above for the LH side.

**17. REMOVE COWL SIDE TRIM BOARD LH**

- (a) Remove the cap nut.
(b) Using a screwdriver, disengage the 2 clips and remove the trim board.

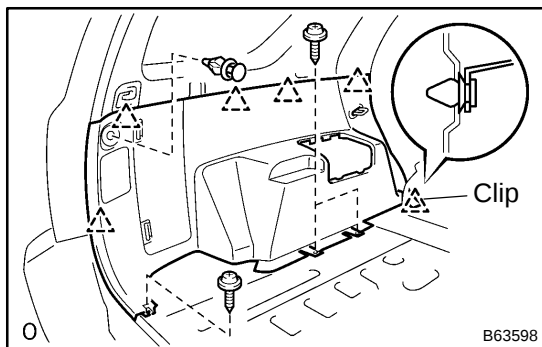
HINT:

Tape the screwdriver tip before use.

18. REMOVE COWL SIDE TRIM BOARD RH

HINT:

Use the same procedures described above for the LH side.

19. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH**20. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH****21. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH****22. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH****23. REMOVE DECK TRIM SIDE PANEL ASSY LH**

- (a) Remove the screw and deck trim cover.
(b) Remove the 3 screws and clip.
(c) Using a screwdriver, disengage the 6 clips and remove the trim panel.

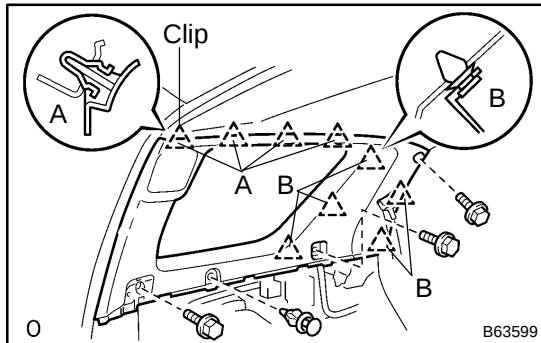
HINT:

Tape the screwdriver tip before use.

24. REMOVE DECK TRIM SIDE PANEL ASSY RH

HINT:

Use the same procedures described above for the LH side.

**25. REMOVE ROOF SIDE GARNISH ASSY INNER LH**

- Remove the screw and tonneau cover hook.
- Remove the 3 bolts and clip.
- Using a screwdriver, disengage the 9 clips and remove the side garnish.

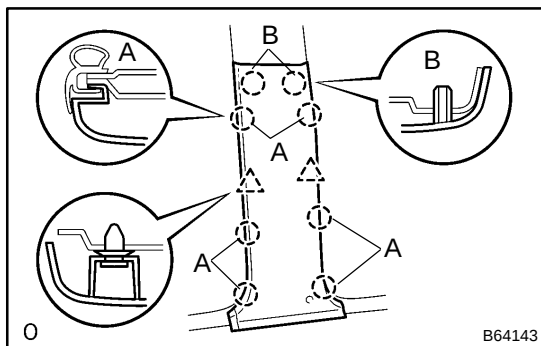
HINT:

Tape the screwdriver tip before use.

26. REMOVE ROOF SIDE GARNISH ASSY INNER RH

HINT:

Use the same procedures described above for the LH side.

**27. REMOVE CENTER PILLAR GARNISH LOWER LH**

- Using a screwdriver, disengage the 8 claws and 2 clips, and remove the pillar garnish.

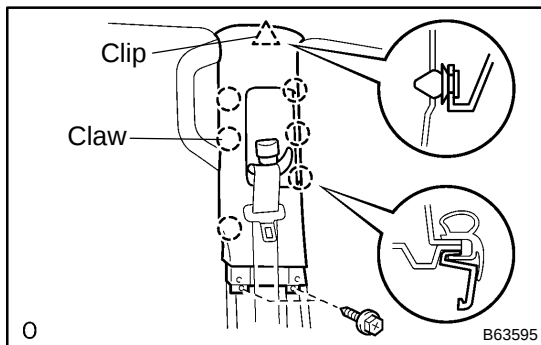
HINT:

Tape the screwdriver tip before use.

28. REMOVE CENTER PILLAR GARNISH LOWER RH

HINT:

Use the same procedures described above for the LH side.

**29. REMOVE CENTER PILLAR GARNISH UPPER LH**

- Remove the bolt and disconnect the front seat outer belt (floor anchor side).
- Remove the 2 bolts.
- Using a screwdriver, disengage the 6 claws and clip, and remove the pillar garnish.

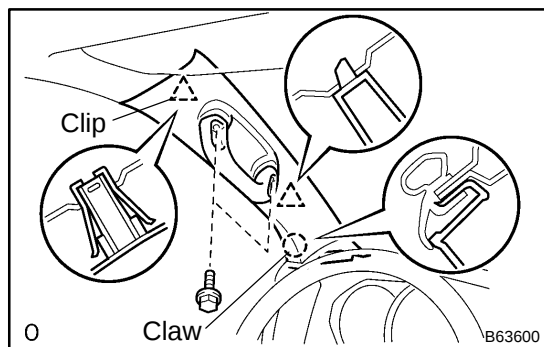
HINT:

Tape the screwdriver tip before use.

30. REMOVE CENTER PILLAR GARNISH UPPER RH

HINT:

Use the same procedures described above for the LH side.

**31. REMOVE FRONT PILLAR GARNISH LH**

- (a) Using a screwdriver, remove the 2 assist grip plugs.

HINT:

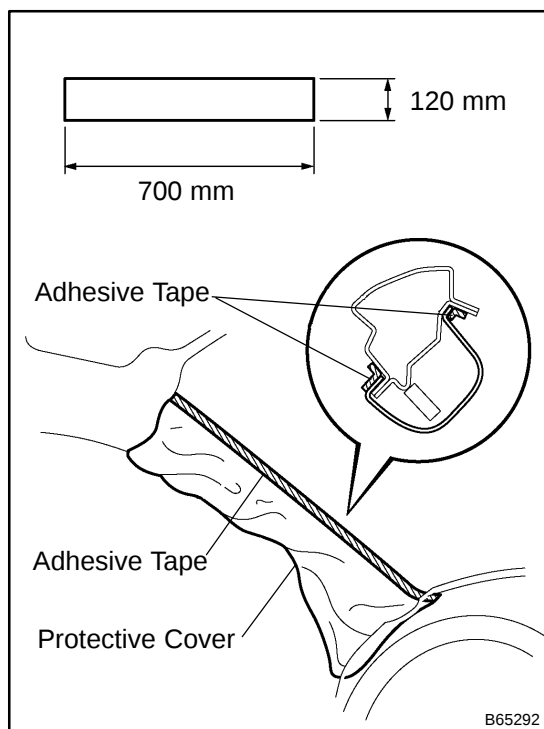
Tape the screwdriver tip before use.

- (b) Remove the 2 bolts.

- (c) Using a screwdriver, disengage the 2 claws and clip, and remove the pillar garnish.

HINT:

Tape the screwdriver tip before use.



- (d) Pull the garnish upward, and remove the pillar garnish from the instrument panel.

- (e) w/ Curtain shield airbag:
protect the curtain shield airbag LH.

- (1) Thoroughly cover the airbag with cloth or nylon of 700 mm (27.56 in.) x 120 mm (4.72 in.) and fix the ends of the cover with adhesive tape, as shown in the illustration.

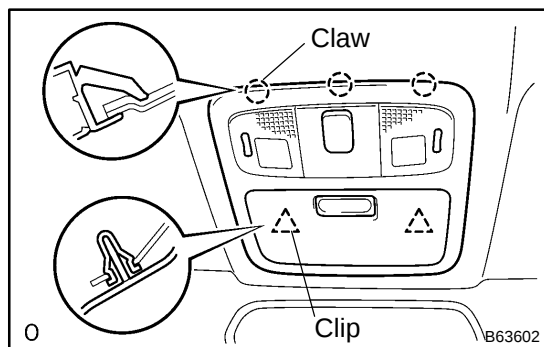
NOTICE:

Cover the curtain shield airbag with the protection cover as soon as the front pillar garnish is removed.

32. REMOVE FRONT PILLAR GARNISH RH

HINT:

Use the same procedures described above for the LH side.

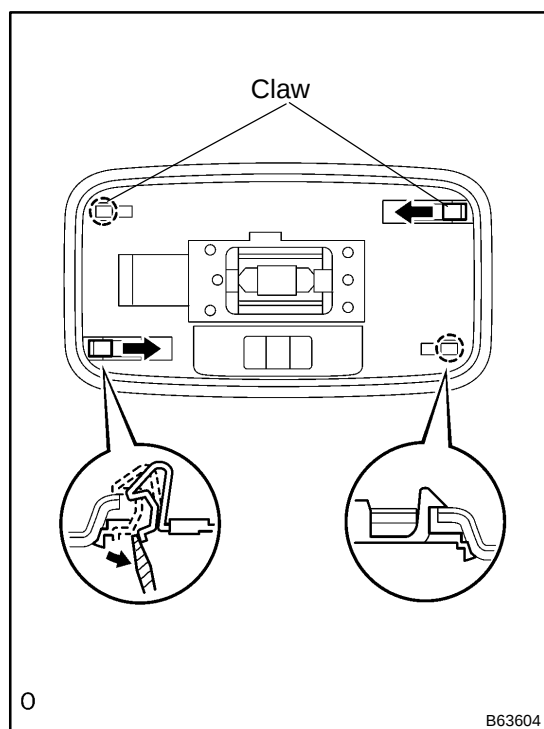
33. REMOVE INNER REAR VIEW MIRROR ASSY**34. REMOVE ROOF CONSOLE BOX ASSY**

- (a) Using a moulding remover, disengage the 2 claws and 2 clips.

HINT:

Tape the screwdriver tip before use.

- (b) Disconnect the map lamp switch connector and sliding roof switch connector, and remove the console box.

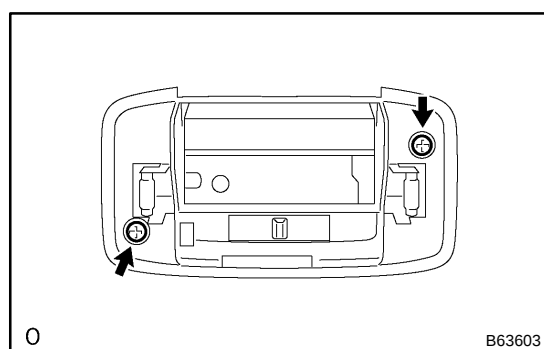
**35. REMOVE ROOM LAMP ASSY NO.1**

- (a) Using a screwdriver, pry out the lens cover.
- (b) Using a screwdriver, disengage the 4 claws.

HINT:

Tape the screwdriver tip before use.

- (c) Disconnect the room lamp connector, and remove the room lamp.

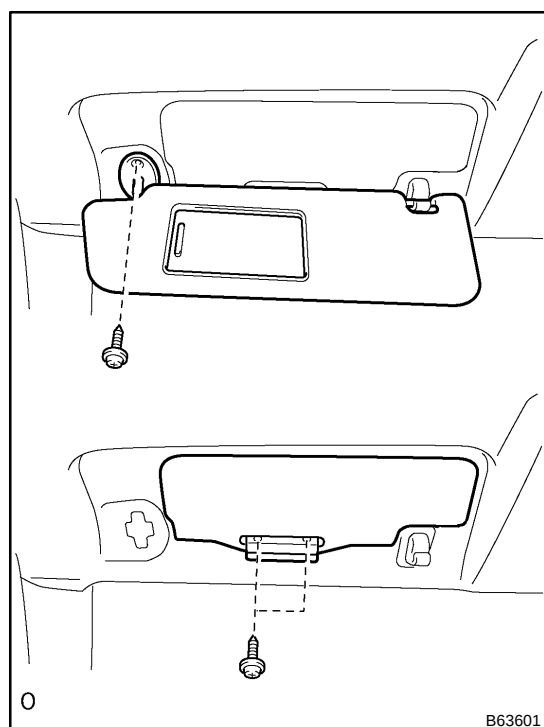
**36. REMOVE DOME LAMP ASSY**

- (a) Using a screwdriver, pry out the lens cover.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 2 screws.
- (c) Disconnect the dome lamp connector and remove the room lamp.

**37. REMOVE LH VISOR ASSY**

- (a) Remove the 2 screws and visor assy.
- (b) Remove the 2 screws and visor sub-assy.

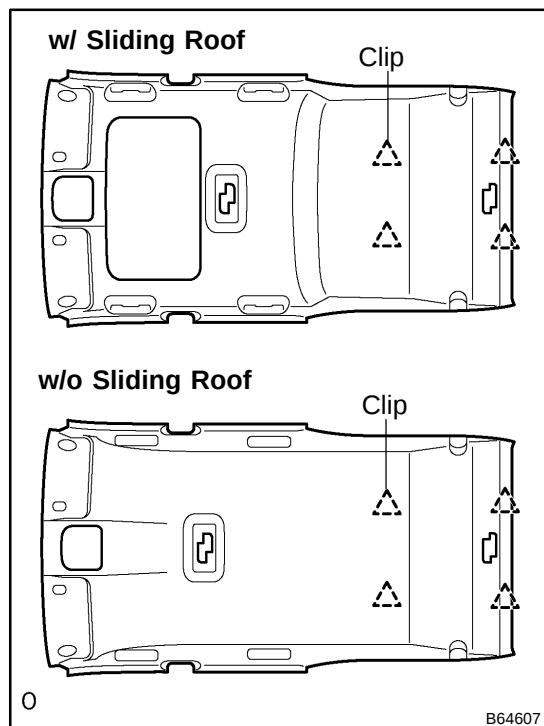
38. REMOVE RH VISOR ASSY

HINT:

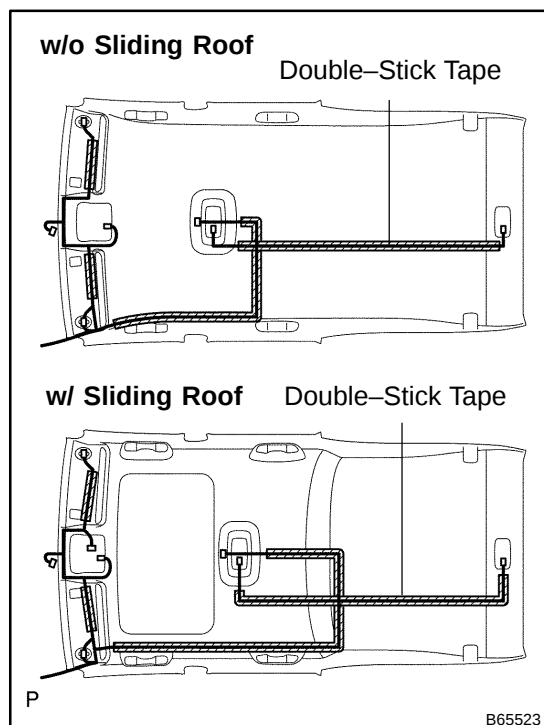
- (a) Use the same procedures described above for the LH side.

39. REMOVE VISOR HOLDER

- (a) Remove the screw and visor holder.

**40. REMOVE ROOF HEADLINING ASSY**

- (a) Disengage the 4 clips and remove the headlining.

**41. INSTALL ROOF HEADLINING ASSY**

- (a) Align the marking, and then install the wire harness with tape.

HINT:

Be careful for dirt or foreign objects not to stick to the adhered part when peeling off the double-stick tape.

- (b) Attach the roof wire harness along the adhered part.

NOTICE:

Roof wire harness should be attached securely.

- (c) Install the roof headlining assy with the 4 clips.