


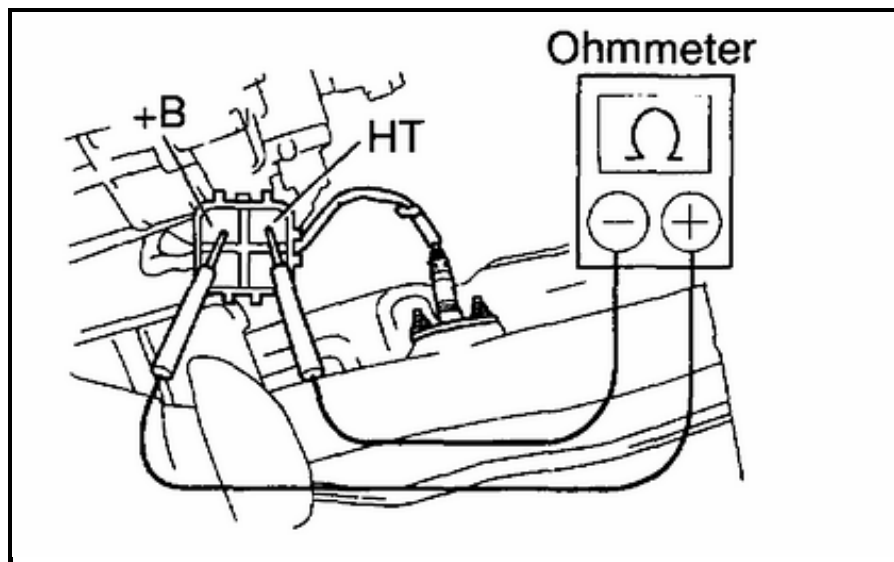

1. INSPECT HEATER RESISTANCE OF HEATED OXYGEN SENSOR

- Disconnect the oxygen sensor connector.
- Using an ohmmeter, measure the resistance between terminals +B and HT.

Resistance:

- **11-16 Ohm at 20°C (68°F)**
- **23-32 Ohm at 800°C (1,472°F)**

If the resistance is not as specified, replace the sensor.

Torque: **20 Nm (200 kgf.cm, 14 ft.lbf)**

- Reconnect the oxygen sensor connector.

2. INSPECT OPERATION OF HEATED OXYGEN SENSOR