




INTERIOR LIGHT

*1 : W / POWER WINDOW
*2 : W/O POWER WINDOW

FROM POWER SOURCE SYSTEM (SEE PAGE 58)

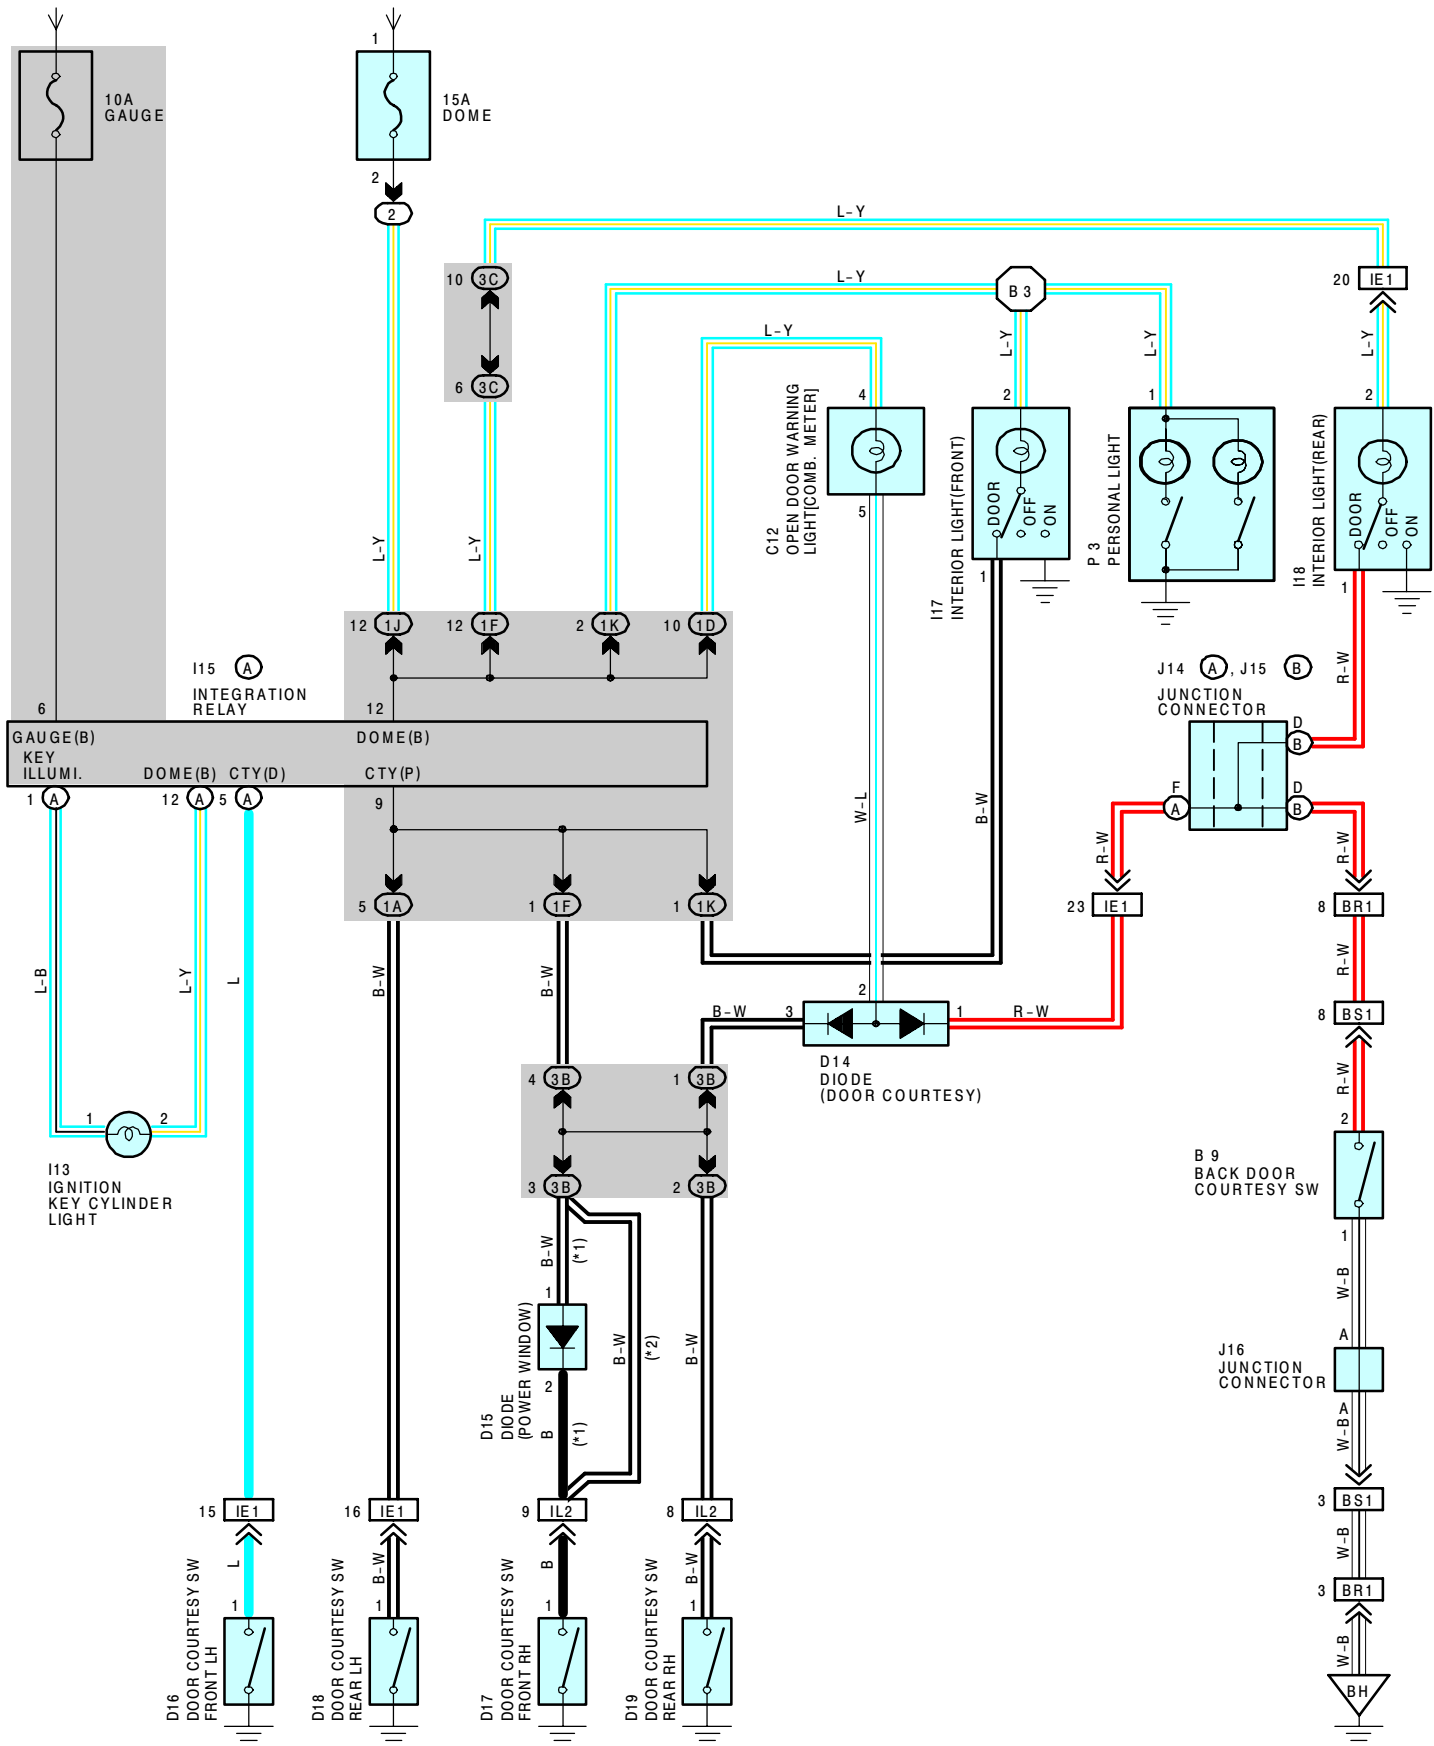

SERVICE HINTS

D16, D17, D18, D19 DOOR COURTESY SW LH, RH

1-GROUND : CLOSED WITH DOOR OPEN

B 9 BACK DOOR COURTESY SW

1-2 : CLOSED WITH BACK DOOR OPEN

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B 9	32	D18	32	J14	A 32
C12	30	D19	32	J15	B 32
D14	30	I13	31	J16	32
D15	30	I15	A 31	P 3	33
D16	32	I17	32		
D17	32	I18	32		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	20 (USA) 21 (CANADA)	ENGINE ROOM R/B (ENGINE COMPARTMENT LEFT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	22	COWL WIRE AND DRIVER SIDE J/B (LOWER FINISH PANEL)
1D		
1F		
1J	22	ENGINE ROOM MAIN WIRE AND DRIVER SIDE J/B (LOWER FINISH PANEL)
1K	22	ROOF WIRE AND DRIVER SIDE J/B (LOWER FINISH PANEL)
3B	24	COWL WIRE AND CENTER J/B (NEAR THE STEERING COLUMN TUBE)
3C		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IE1	40	COWL WIRE AND FLOOR NO.2 WIRE (LEFT KICK PANEL)
IL2	40	COWL WIRE AND FLOOR WIRE (RIGHT KICK PANEL)
BR1	42	BACK DOOR NO.1 WIRE AND FLOOR NO.2 WIRE (LEFT REAR SIDE OF ROOF)
BS1	42	BACK DOOR NO.1 WIRE AND BACK DOOR NO.2 WIRE (BACK DOOR LEFT)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BH	42	LEFT QUARTER PANEL INNER

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B 3	42	ROOF WIRE			




INTERIOR LIGHT

B 9



C12

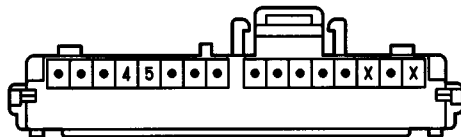

D14 BLACK



 
D15




D16, D17, D18, D19



I13



I15 (A)

 


I17



I18



J14 (A), J15 (B)

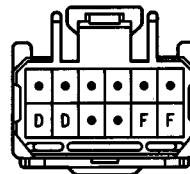

(HINT:SEE PAGE 7)

J16 BLUE



(HINT:SEE PAGE 7)

P 3



