

This procedure is for the FACTORY INSTALLED keyless entry system

1. Begin with the key out of the ignition.
2. OPEN and UNLOCK the DRIVER'S side door. CLOSE all other doors including the trunk.
3. INSERT the key into the ignition and PULL it out.
4. ~~Locate the driver's side door lock/unlock switch.~~ Insert the Key in the DRIVER DOOR
DRIVER DOOR with the Key
5. LOCK and UNLOCK the ~~switch~~ 5 times. Try to pace yourself to 1 second for each LOCK and UNLOCK sequence. (hint: LOCK and UNLOCK = 1 time in 1 second)
6. CLOSE and OPEN the DRIVER'S side door.  Use the door button in the DOOR JAM
DRIVER DOOR with the Key
7. LOCK and UNLOCK the ~~switch~~ 5 times. Try to pace yourself to 1 second for each LOCK and UNLOCK sequence. You will have 50 seconds to complete steps 7-10 (hint: LOCK and UNLOCK = 1 time in 1 second)
8. INSERT the KEY into the ignition.
9. Switch the ignition to ON then OFF TWICE (on is just shy of starting the car)
10. REMOVE the key from the ignition.
11. The door locks will cycle (lock and unlock) to confirm successful entry into programming mode.
12. PUSH and RELEASE the LOCK and UNLOCK buttons at the SAME time on the first remote you are programming (does not matter which)
13. As soon as you let go PUSH and HOLD the LOCK button only on the same remote for 2 seconds. The door locks will cycle to confirm successful programming of the remote.
14. Repeat steps 12 and 13 for each additional remote you wish to program. If you have no additional remotes to program proceed to step 15.
15. Close the DRIVER'S side door. Programming is now complete.