

Sliding Roof/Convertible

Market

USA

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2003 – 2008	4Runner	

Zoom

Sized for Print

Applicability

TSB SUPERSESSION NOTICE

The information contained in this TSB supersedes TSB No. BO016-06.

^ Applicability has been updated to include 2008 model year 4Runner vehicles.

TSB No. BO016-06 is Obsolete and any printed versions should be discarded. Be sure to review the entire content of this service bulletin before proceeding.

Introduction

Some customers may experience a moon roof that exhibits improper operation such as:

^ The moon roof does not close from its fully open position (an improper jam protection operation occurs).

^ The moon roof is stuck due to a difference of alignment between the right and left parts of the moon roof.

^ Sliding parts are stuck due to hardened grease.

Perform the following repair procedure to correct these conditions.

OP CODE	DESCRIPTION	TIME	OFP	T1	T2
BD5037	Clean/Lubricate Wind Deflector Links & Align Moon Roof Cable	0.9	63203-35040 63203-35041 63203-35050 63203-35060	9A	83

Zoom

Sized for Print

Warranty Information

APPLICABLE WARRANTY

^ This repair is covered under the Toyota Comprehensive Warranty. This warranty is in effect for 36 months or 36,000 miles, whichever occurs first, from the vehicle's in-service date.


^ Warranty application is limited to correction of a problem based upon a customer's specific complaint.

PREVIOUS PART NUMBER	CURRENT PART NUMBER	PART NAME	QTY
63207-35040	Same	Base Sub-assembly, Roof Window Balancer (Repair Kit)	1

Zoom

Sized for Print

Parts Information

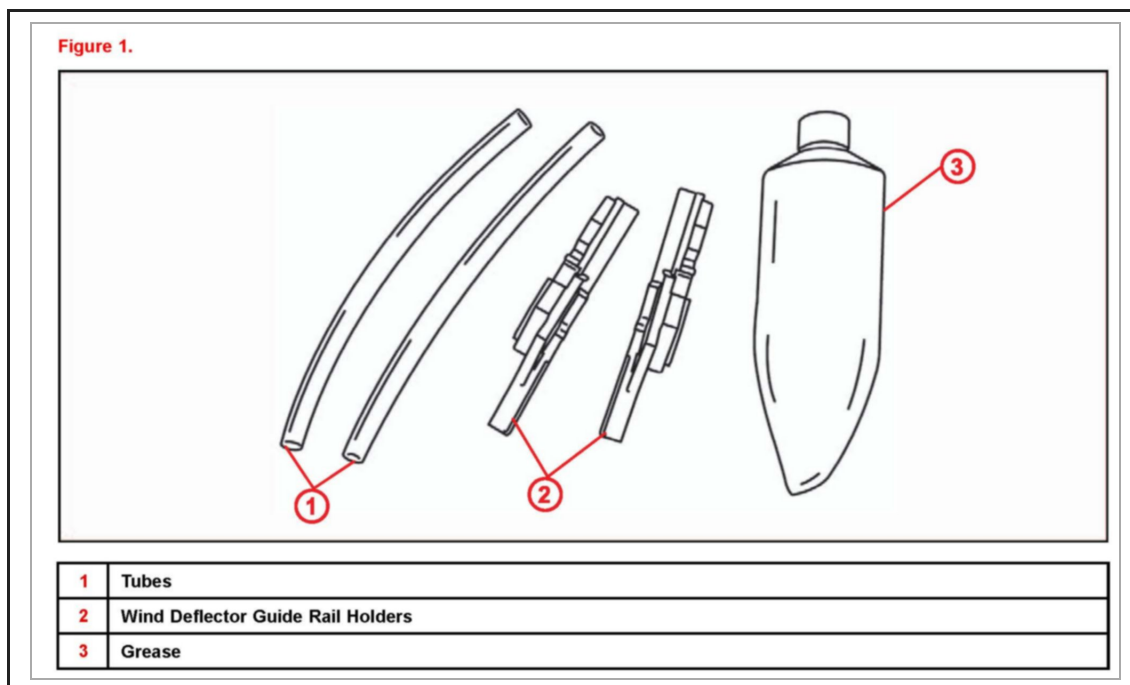

Zoom

Sized for Print

Kit Contents

The plastic tubes are NOT required for this TSB.

Repair Procedure


NOTE

Perform the same procedure for both the RH and LH sides.

1. Remove the gear assembly.

A. Open the moon roof approximately 75% and then remove the ignition key.

Figure 2.

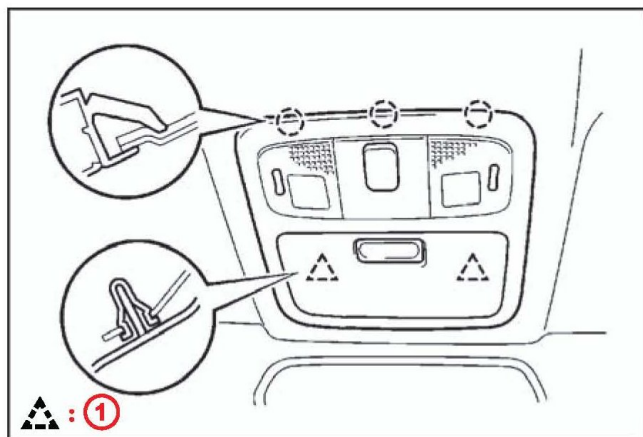

1

Clip


Zoom

Sized for Print

B. Release the two (2) metal clips (behind the sunglass holder) by gently pulling down the front of the map light assembly.

C. Disconnect the connector and remove the map light assembly.

Figure 3.

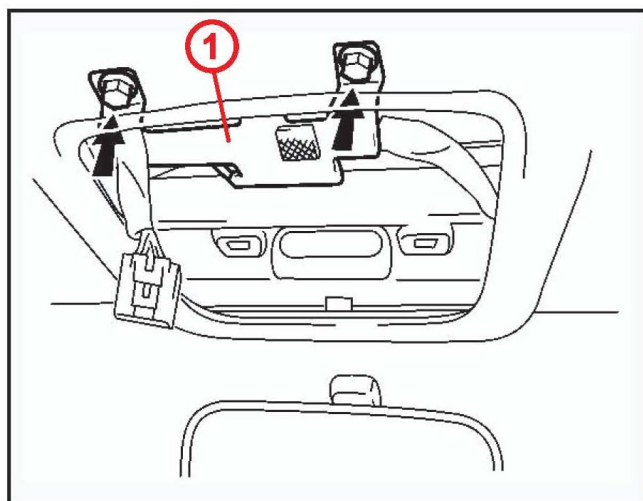

1


Gear Assembly

Zoom

Sized for Print

D. Remove the two (2) bolts disconnect the motor connector and then remove the gear assembly.

2. Remove the roof wind deflector.

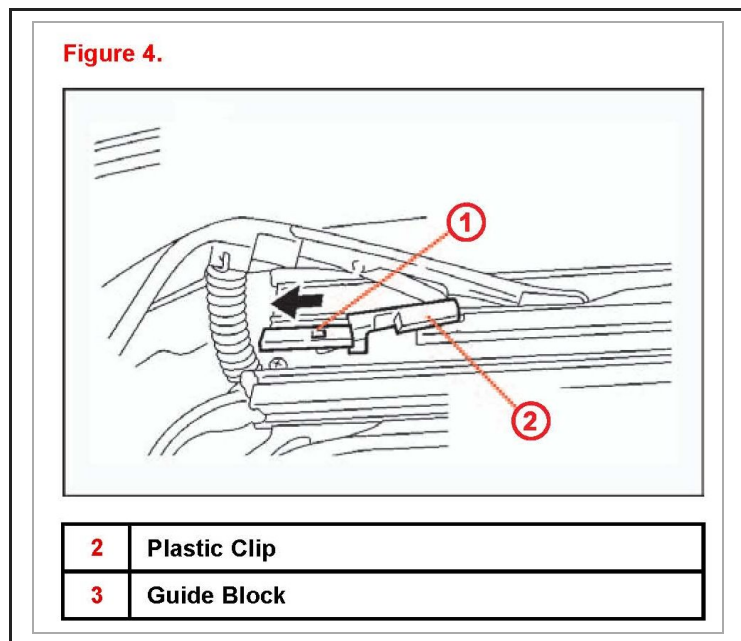

Zoom

Sized for Print

A. Using a flathead screwdriver hold down the guide block release lever and push the plastic clip forward.


B. Slide the guide block backwards and out. Repeat for the other side and remove the wind deflector.

NOTE

To prevent breakage of the guide block release lever when the outside temperature is below 40°F (4°C), use a heat gun to raise the temperature of the guide block and surrounding aluminum housing to at least 65°F (18°C). Be careful NOT to damage components or [paint](#) with the heat gun.

3. Disconnect the wind deflector rod.

Figure 5.

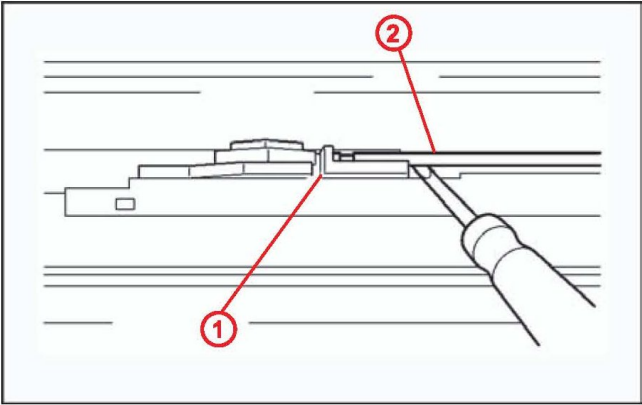


1	Holder
2	Rod

Zoom

Sized for Print

A. Place a screwdriver against the rail in the notch area shown in the illustration and pry the rod to disconnect.

Figure 6.

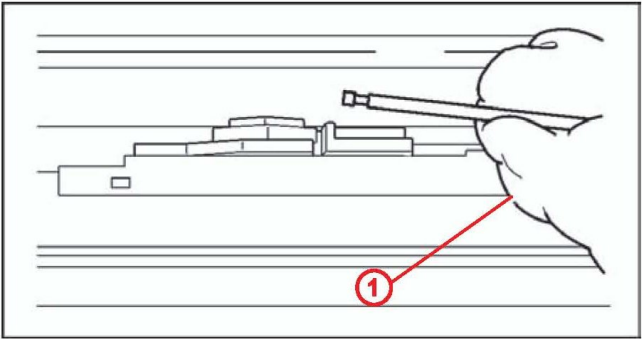

1	Cloth
---	-------


Zoom

Sized for Print

B. Secure the rod with a piece of cloth. Place the cloth between the rod and track to keep it out of the way.

4. Remove the moon roof wind deflector guide rail holder.

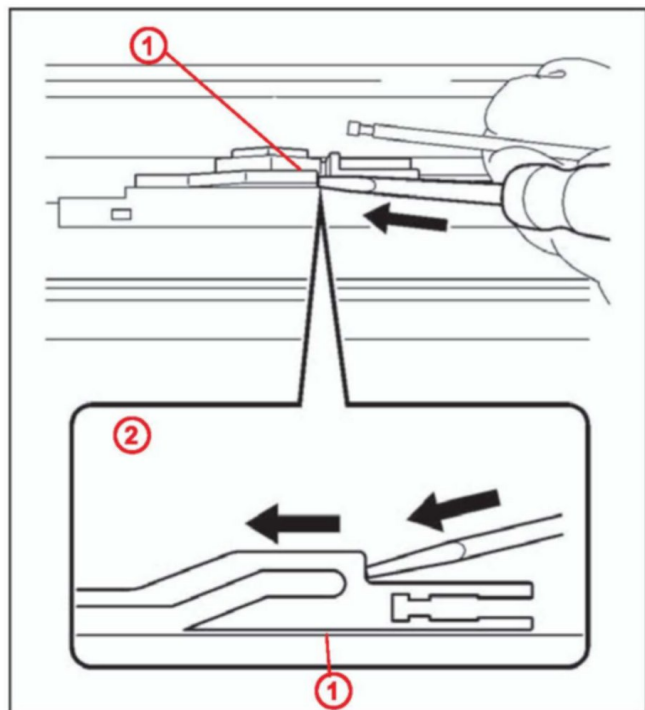

Figure 7.


1	Holder
2	Cross Section of Holder

[Zoom](#)[Sized for Print](#)

A. Place a flathead screwdriver against the stepped portion of the holder and lightly tap the screwdriver using a hammer to release the holder.

B. Move the holder toward the front of the vehicle by pushing it with the screwdriver and remove it from the rail.

5. Replace the grease.

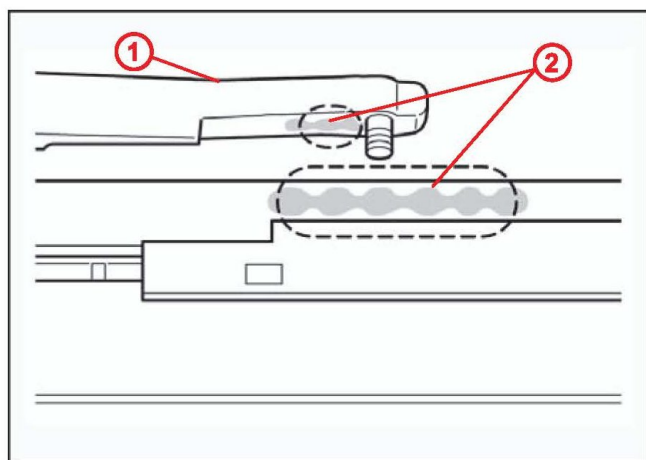Figure 8.


1	Deflector Arm
2	Old Grease

[Zoom](#)[Sized for Print](#)

A. Using a piece of cloth or scraper remove the old grease from the holder-sliding surface on the rail and the deflector arm.

NOTE


Remove the grease on both the RH and LH sides.

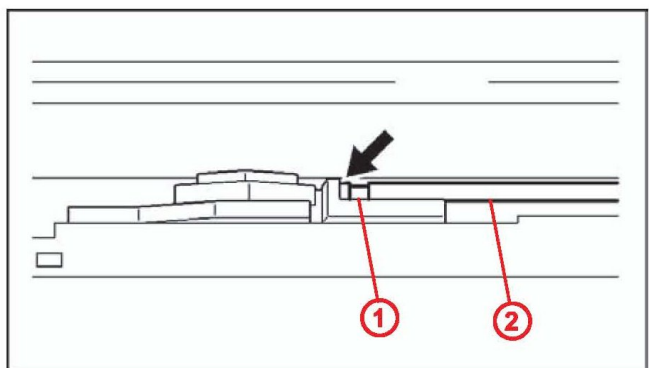Figure 9.

1	Holder
2	Rod

[Zoom](#)[Sized for Print](#)


B. Install the NEW holder (P/N 63257-35040/50 included in repair kit P/N 63207-35040) to the rail by performing the removal procedure in reverse order.

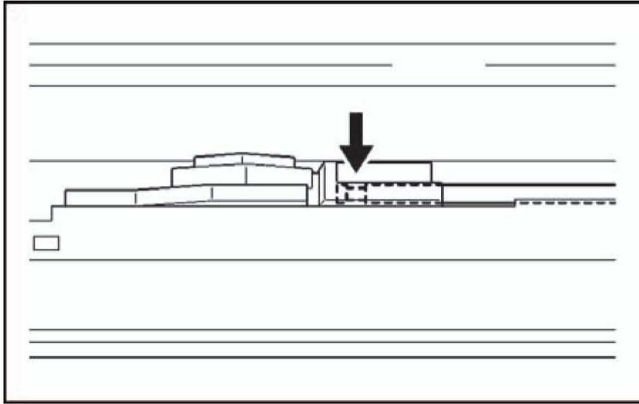Figure 10.[Zoom](#)[Sized for Print](#)

C. Push the rod into the holder.

NOTE Make sure the wind deflector rod is installed in the guide block's towards the most forward position.

Figure 11.

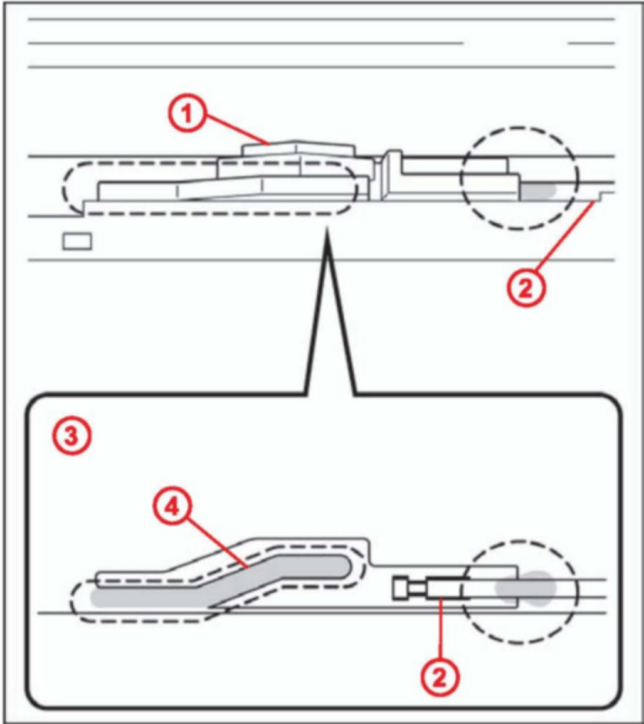

1	Holder
2	Rod
3	Cross Section of Holder
4	Groove


Zoom

Sized for Print

D. Apply grease (P/N 09170-35010 included in the repair kit) to the contact surface between the holder and the rail and the groove (deflector arm installation portion).



Figure 12.

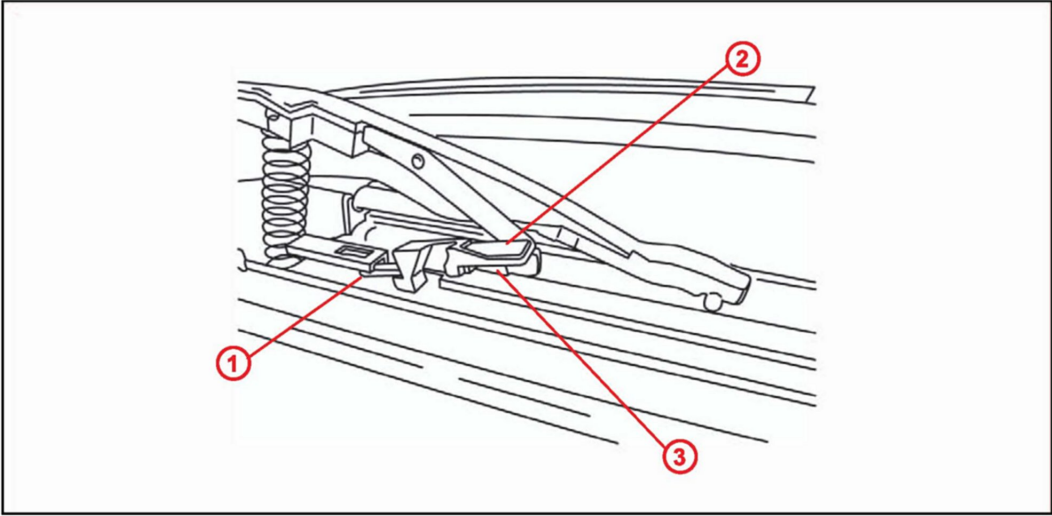

1	Slide Forward
2	Push Down
3	Slide Back to Lock

Zoom

Sized for Print

6. Install the roof wind deflector by performing the removal procedure in the reverse order.

NOTE

Install the front tab first, then slide back, and snap into position.

 
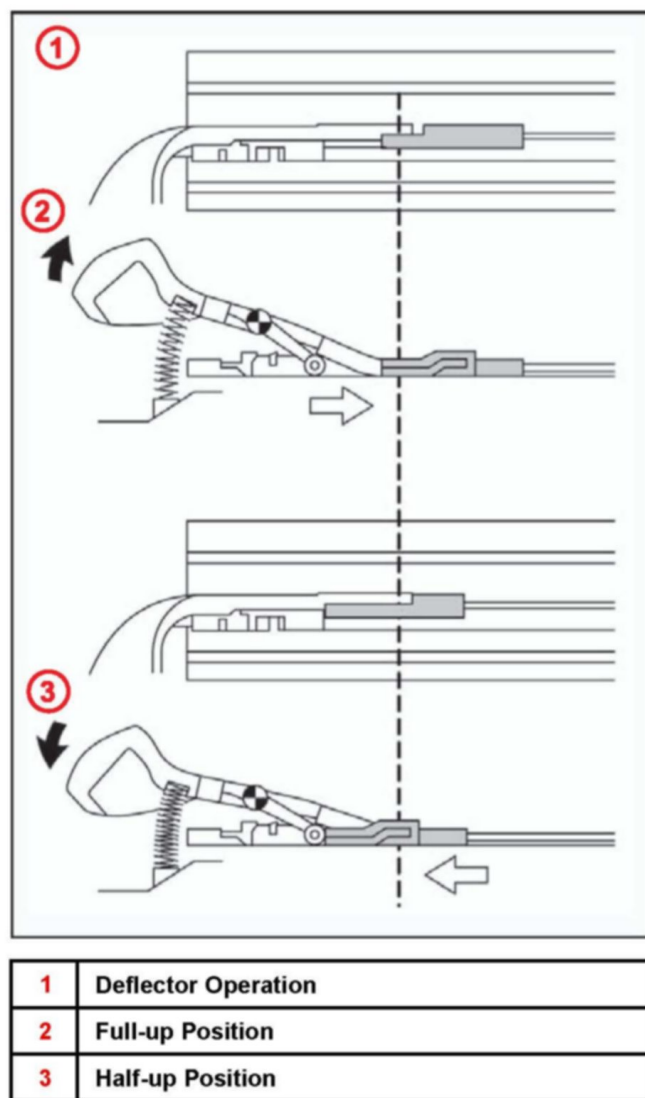
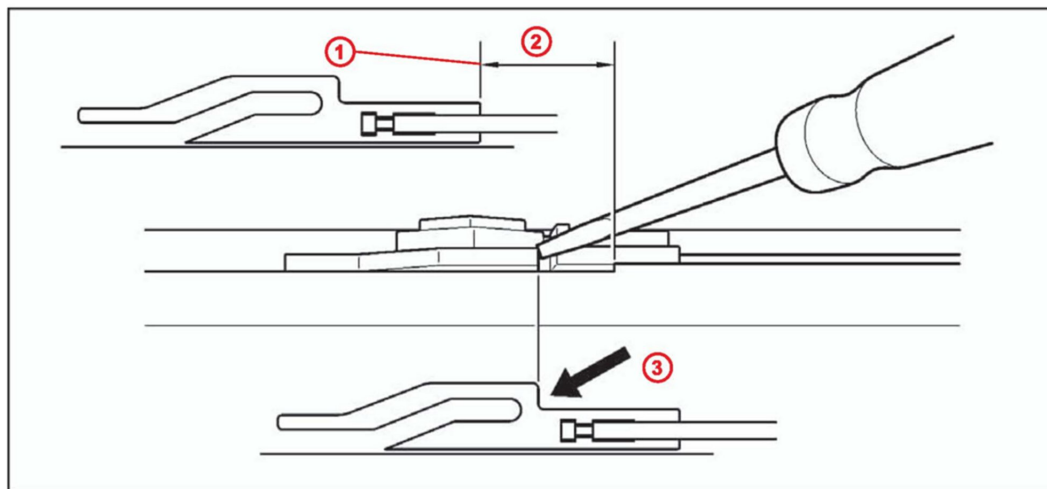


Figure 13.[Zoom](#)[Sized for Print](#)

7. Align the drive cable holders.

A. Place a flathead screwdriver against the stepped portion of the holder and push the holder toward the front of the vehicle to move the deflector to the half-up position. Align the RH and LH holder positions.


Figure 14.

1	Half-up Position
2	Distance Between End of Holder & Cutout of Rail: Approximately 17 mm (0.67 in.)
3	Push Stepped Portion of Holder Toward Front Side & Move Deflector to Half-up Position

Zoom

Sized for Print

B. Install the gear assembly and connect the map light assembly. Operate the moon roof switch to move the slide panel to its fully closed position.

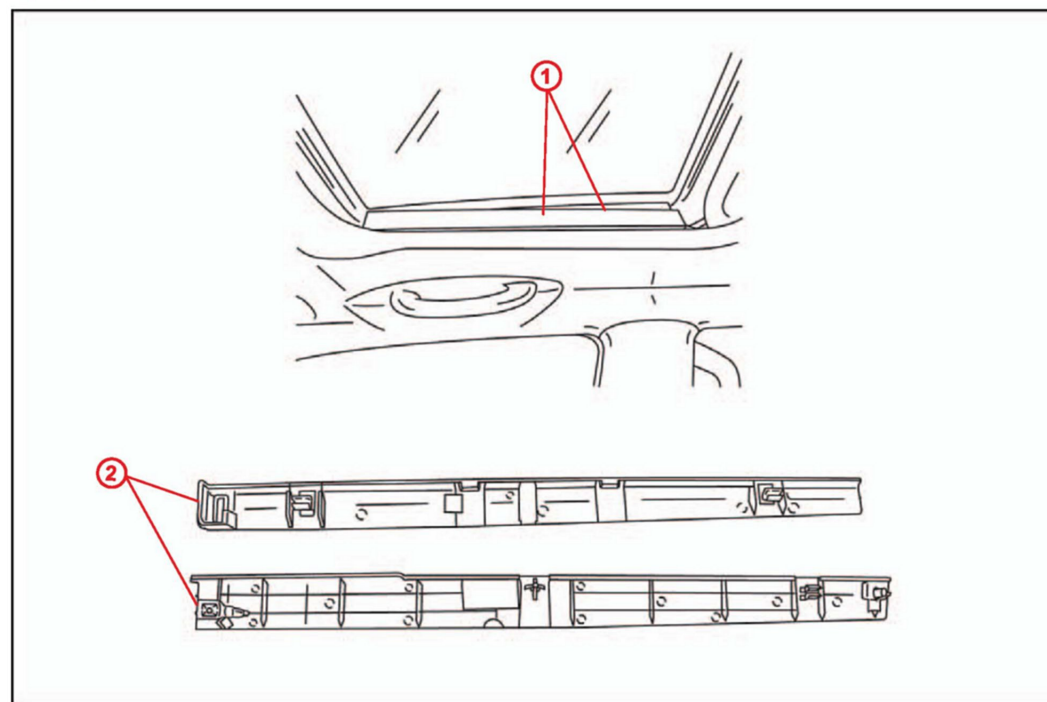
Figure 15.

1	Two (2) Side Garnish Pieces
2	Backside of Moon Roof Garnish

[Zoom](#)[Sized for Print](#)


C. Remove the two (2) moon roof side garnish pieces by releasing the locking clips (pull gently).

Figure 16.

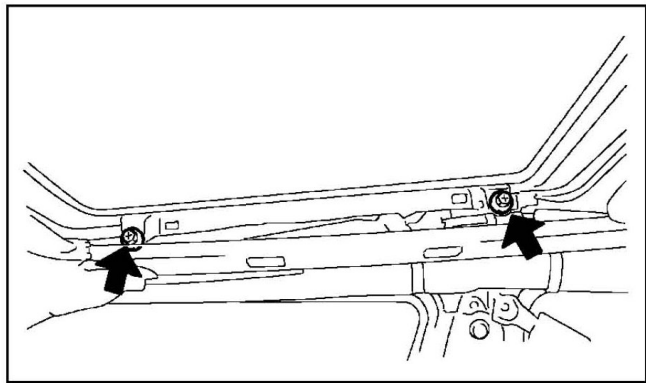[Zoom](#)[Sized for Print](#)


D. Remove the moon roof panel and gear assembly. Set the moon roof system to the fully closed position.

NOTE Be careful when removing the Torx screws for the moon roof panel to prevent damage to the screws.

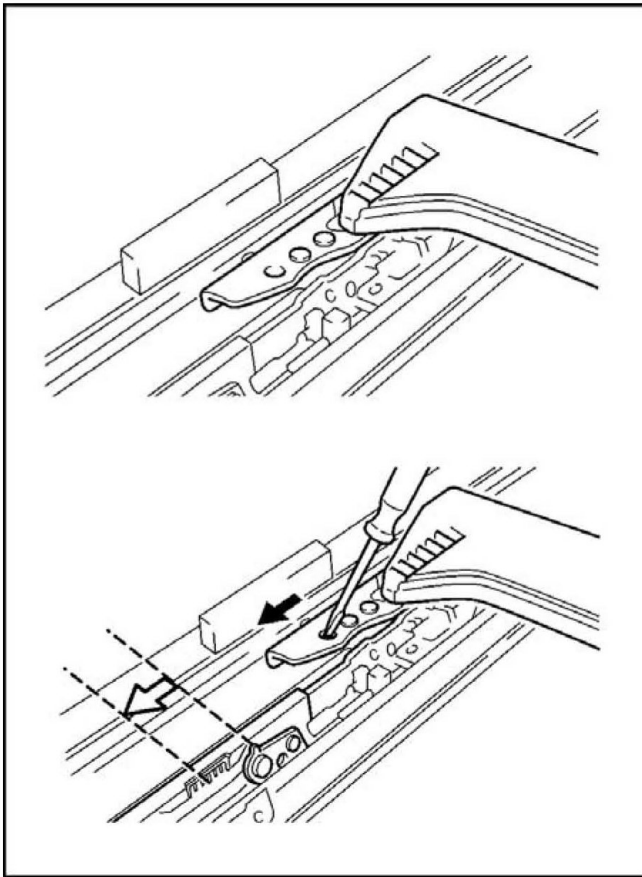Figure 17.[Zoom](#)[Sized for Print](#)

(1) Using a flathead screwdriver push the bracket of the cable assembly forward.

(2) Align the protrusion of the link to the center marking of the bracket.

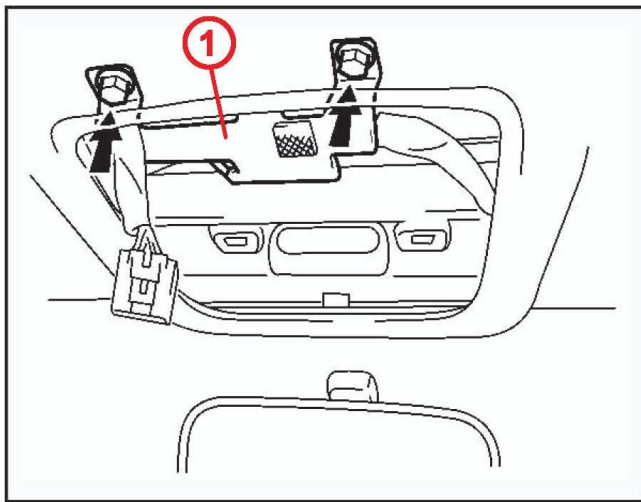Figure 19.**1 Gear Assembly**

Zoom

Sized for Print

8. Install the moon roof drive gear assembly the moon roof panel and the side garnish.

Moon Roof Glass Assembly Mounting Screw.

Torque: 4.0 N*m (41 kg*cm, 35 in*lbf)

Moon Roof Drive Gear Assembly Mounting Bolt.

Torque: 5.4 N*m (55 kg*cm, 48 in*lbf)

9. Initialize the moon roof.

A. Press the moon roof switch on the "TILT-UP" side and hold the button (the button may have to be held for up to 10 seconds).

^ The moon roof will lock in the fully tilted up position.

^ Then, the moon roof will move down a few millimeters.

B. Release the switch - initialization is complete.

C. Cycle the moon roof through all the operating modes (including auto-open and auto-close modes) to make sure the moon roof functions properly.

10. Install the connected map lamp assembly.

