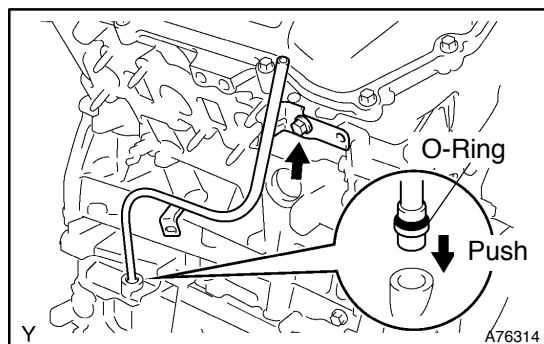


**63. INSTALL OIL LEVEL GAUGE GUIDE**

- (a) Install a new O-ring to the oil level gauge guide.
 - (b) Apply a light coat of engine oil to the O-ring.
 - (c) Push in the oil level gauge guide end into the guide hole of the oil pan.
 - (d) Install the oil level gauge guide with the bolt.
- Torque: 9.0 N·m (92 kgf·cm, 80 in·lbf)**
- (e) Install the oil level gauge.

64. INSTALL AIR CLEANER ASSY (See page 10-7)**65. CONNECT VENTILATION HOSE NO.2****66. INSTALL FAN W/ FLUID COUPLING (See page 16-6)****67. INSTALL FAN AND GENERATOR V BELT (See page 14-5)****68. FULLY TIGHTEN FAN W/ FLUID COUPLING (See page 16-6)****69. INSTALL RADIATOR SUPPORT SEAL UPPER****70. INSTALL BATTERY****71. INSTALL DIFFERENTIAL CARRIER ASSY FRONT (4WD DRIVE TYPE) (See page 29-3)****72. INSTALL POWER STEERING LINK ASSY (See Pub No. RM1001U on page 51-20)****73. ADD ENGINE OIL (See page 17-4)****74. ADD ENGINE COOLANT (See page 16-5)****75. CHECK FOR ENGINE OIL LEAKS****76. CHECK FOR ENGINE COOLANT LEAKS (See page 16-1)****77. INSTALL V-BANK COVER**

- (a) Install the V-bank cover with the 2 nuts.

Torque: 7.5 N·m (76 kgf·cm, 66 in·lbf)

78. INSPECT IGNITION TIMING (See page 14-1)

SST 09843-18040