


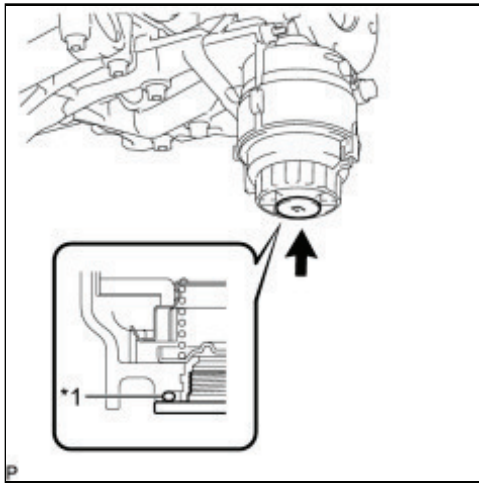

* 1	O - Ring
-----	----------

NOTICE:

Before installing the O-ring, remove any dirt or foreign matter from the installation surface of the oil filter cap.

(h) Install the oil filter drain plug.

Torque: 13 N·m (133 kgf·cm, 10ft·lbf)

NOTICE:

Make sure that the O-ring does not get caught between the parts.

7. ADD ENGINE OIL

(a) Add fresh oil.

Standard Engine Oil (for USA):

OIL GRADE	OIL VISCOSITY (SAE)
ILSAC multigrade engine oil	0W-20

Standard Engine Oil (for Canada):

OIL GRADE	OIL VISCOSITY (SAE)
ILSAC multigrade engine oil	0W-20 5W-20

Standard Oil Capacity:

ITEM	SPECIFIED CONDITION
Drain and refill without oil filter change	5.7 liters (6.0 US qts, 5.0 Imp. qts)
Drain and refill with oil filter change	6.2 liters (6.6 US qts, 5.5 Imp. qts)
Dry fill	7.1 liters (7.5 US qts, 6.2 Imp. qts)

8. CHECK ENGINE OIL LEVEL INFO

9. INSPECT FOR ENGINE OIL LEAK

(a) Start the engine. Make sure that there are no oil leaks from the area that was worked on.