


HOW TO READ THIS SECTION

* The system shown here is an EXAMPLE ONLY. It is different to the actual circuit shown in the wiring diagram section.

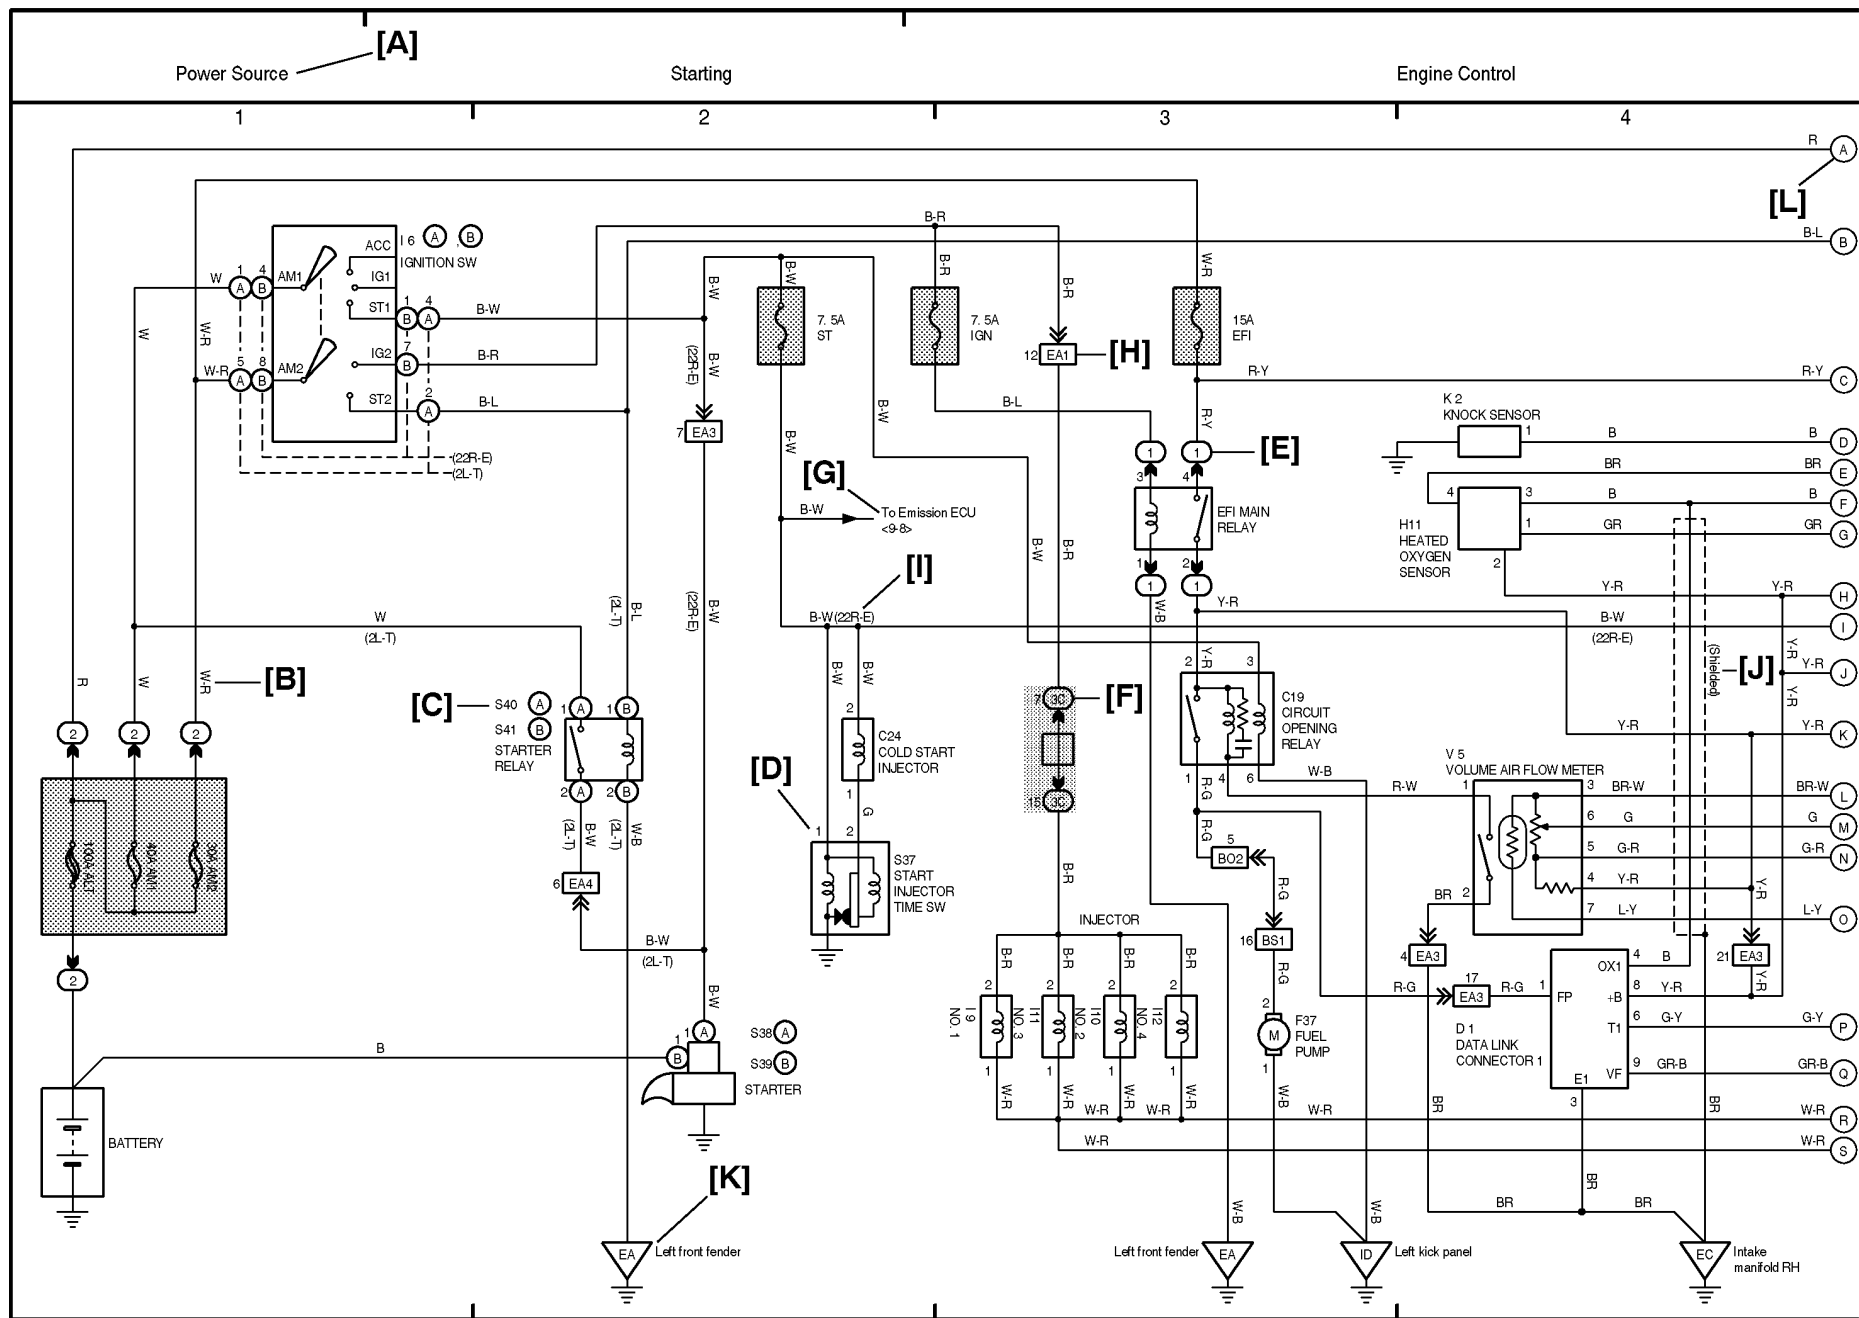

[A] : System Title


[B] : Indicates the wiring color.

Wire colors are indicated by an alphabetical code.

B = Black W = White BR = Brown
L = Blue V = Violet SB = Sky Blue
R = Red O = Orange LG = Light Green
P = Pink Y = Yellow GR = Gray
G = Green

The first letter indicates the basic wire color and the second letter indicates the color of the stripe.

Example: L – Y


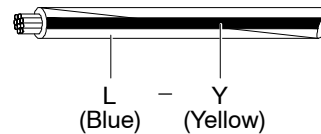


[C] : The position of the parts is the same as shown in the wiring diagram and wire routing.

[D] : Indicates the pin number of the connector. The numbering system is different for female and male connectors.

Example : Numbered in order from upper left to lower right

Numbered in order from upper right to lower left

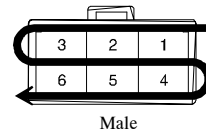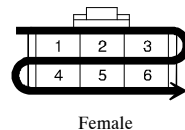


The numbering system for the overall wiring diagram is the same as above

[E] : Indicates a Relay Block. No shading is used and only the Relay Block No. is shown to distinguish it from the J/B.

Example : ① Indicates Relay Block No.1


[F] : Junction Block (The number in the circle is the J/B No. and the connector code is shown beside it). Junction Blocks are shaded to clearly separate them from other parts.

Example:

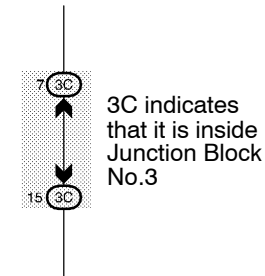

[G] : Indicates related system.

[H] : Indicates the wiring harness and wiring harness connector. The wiring harness with male terminal is shown with arrows (↗). Outside numerals are pin numbers.

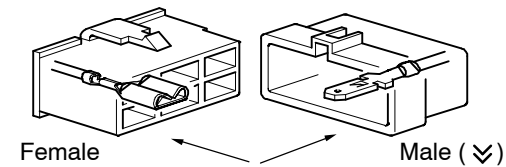

[I] : () is used to indicate different wiring and connector, etc. when the vehicle model, engine type, or specification is different.

[J] : Indicates a shielded cable.



[K] : Indicates and located on ground point.

[L] : The same code occurring on the next page indicates that the wire harness is continuous.

SYSTEM INDEX

SYSTEMS	LOCATION	SYSTEMS	LOCATION
ABS	22-2	Illumination	10-2
Air Conditioning (Manual A/C)	30-2	Interior Light	12-4
Auto Antenna	27-2	Key Reminder and Seat Belt Warning	12-2
Automatic Air Conditioning	29-2	Light Auto Turn Off	19-2
Back Door Lock Control (w/o Door Lock Control)	13-16	Moon Roof	19-3
Back-Up Light	9-4	Multiplex Communication System	13-2
Charging	1-4	Power Outlet	23-4
Cigarette Lighter and Clock	17-4	Power Seat	16-2
Combination Meter	28-2	Power Source	1~30-1
Cruise Control (3RZ-FE)	21-2	Power Window	14-2
Cruise Control (5VZ-FE)	20-2	Radio and Player	27-3
Electronically Controlled Transmission and A/T Indicator (3RZ-FE)	6-2	Rear Differential Lock	26-2
Electronically Controlled Transmission and A/T Indicator (5VZ-FE)	5-2	Rear Heater	30-4
Engine Control (3RZ-FE)	4-2	Remote Control Mirror	15-2
Engine Control (5VZ-FE)	3-2	Shift Lock	17-2
Engine Immobiliser System	3-9	SRS	23-2
Front Fog Light	7-4	Starting	1-2
Front Wiper and Washer	18-2	Stop Light	8-4
Headlight (w/ Daytime Running Light)	7-2	Taillight	9-2
Headlight (w/o Daytime Running Light)	8-2	Turn Signal and Hazard Warning Light	11-2
Ignition	2-2	4WD (w/ 2-4 Select SW)	24-2
		4WD (w/o 2-4 Select SW)	25-2